



View this document in HTML
crestron.com/docs/9020



Product Manual

AirMedia® Series 3 Wireless Presentation and Wireless Video Conferencing

Have feedback on this document? Contact docfeedback@crestron.com.

Original Instructions

The U.S. English version of this document is the original instructions.
All other languages are a translation of the original instructions.

Regulatory Models: M202018001, M202011001

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software_license_agreement.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For specific information, visit www.crestron.com/opensource.

Crestron, the Crestron logo, AirMedia, .AV Framework, Crestron Connected, Crestron Fusion, Crestron Studio, Crestron Toolbox, and XiO Cloud are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Apple, App Store, AirPlay, iPad, iPhone, Mac, macOS, and Safari are either trademarks or registered trademarks of Apple, Inc. in the United States and/or other countries. Appspace is either a trademark or a registered trademark of Appspace Inc. in the United States and/or other countries. Bluetooth is either a trademark or registered trademark of Bluetooth SIG, Inc. in the United States and/or other countries. Android, Chrome, Chrome OS, Google Calendar, Google Play, and YouTube are either trademarks or registered trademarks of Google, Inc. in the United States and/or other countries. iOS is either a trademark or registered trademark of Cisco Systems, Inc. in the United States and/or other countries. Jabra is a trademark of GN Audio A/S in the United States and/or other countries. HDMI is either a trademark or registered trademark of HDMI Licensing LLC in the United States and/or other countries. Intertek is either a trademark or registered trademark of Intertek Group in the United States and/or other countries. Active Directory, Azure, Microsoft, Microsoft 365, Microsoft Edge, Microsoft Exchange Server, Microsoft Teams, and Windows are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Firefox is either a trademark or registered trademark of the Mozilla Foundation in the United States and/or other countries. USB-C is either a trademark or registered trademark of USB Implementers. Miracast, Wi-Fi, and Wi-Fi Direct are either trademarks or registered trademarks of Wi-Fi Alliance in the United States and/or other countries. Zoom and Zoom Rooms are either trademarks or registered trademarks of Zoom Video Communications, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

©2025 Crestron Electronics, Inc.

Contents

Overview	6
Features	12
AM-3000-WF(-I) Features	13
AM-3100-WF(-I) Features	16
AM-3200 Features	19
AM-3200-WF(-I) Features	22
AM-3200-GV Features	25
AM-TX3-100 Features	28
AM-TX3-200 Features	30
UC-SB-P50-AM-WF(-I) KIT Features	32
Getting Started	35
Wireless Conferencing and Flex Mode	35
Minimum requirements	35
Connections	36
Configuration	38
Operation	39
Specifications	40
AM-3000-WF(-I) Specifications	41
Specifications	41
Dimension Drawings	44
AM-3100-WF(-I) Specifications	45
Specifications	45
Dimension Drawings	50
AM-3200 Specifications	51
Specifications	51
Dimension Drawings	56
AM-3200-WF(-I) Specifications	57
Specifications	57
Dimension Drawings	63
AM-3200-GV Specifications	64
Dimension Drawings	68
AM-TX3-100 Specifications	69
Specifications	69
Dimension Drawings	71
AM-TX3-200 Specifications	72
Dimension Drawings	75
UC-SB-P50-AM-WF(-I) KIT Specifications	77
Installation	78

AM-3000-WF(-I) and AM-3100-WF(-I)	79
In the Box	79
Install the Receiver	79
Connect the Receiver	82
Observe the LEDs	83
AM-3200, AM-3200-WF(-I), and AM-3200-GV	84
In the Box	84
Install the Receiver	84
Connect the Receiver	87
Observe the LEDs	89
AM-TX3-100	90
In the Box	90
Install the AM-TX3-100	90
Observe the LEDs	91
AM-TX3-200	93
Install the AM-TX3-200	93
Connect the AM-TX3-200	95
Observe the AM-TX3-200 LEDs	96
UC-SB-P50-AM-WF(-I) KIT	97
Configuration	98
Web Configuration Interface	99
Connect to the Receiver	99
Action Menu	102
Status	109
Settings	118
Security	169
802.1x Configuration	175
Enterprise Deployment Options	178
XiO Cloud® Service	178
Crestron Deployment Tool for PowerShell® Software	179
Modern Authentication for EWS	180
Create the Application	180
Obtain Authentication IDs	183
Configure Additional Settings	183
Perform a Factory Restore	190
Operation	191
Front of Room Experience	192
Welcome Screen	192
User Presentation	193
Present with AirMedia	194
Establish a Computer Connection	194
Share Content	195
Touch Screen Operation	210
Add a Touch Screen	210

Screen Controls	211
Room Scheduling	213
Present a Source	215
AirMedia Canvas	217
AirMedia Connect Devices	221
Wireless Best Practices	222
AM-TX3-100 Operational Instructions	223
AM-TX3-200 Operational Instructions	224
Resources	225
Crestron Support and Training	225
Programmer and Developer Resources	225
Product Certificates	225

Overview

AirMedia® Series 3 devices enable secure wireless collaboration in the modern digital workspace. Install the devices in conference rooms, huddle rooms, lounges, lobbies, or almost any space to establish a productive meeting environment. This product manual discusses the requirements, configuration instructions, and operating instructions for AirMedia Series 3 devices.

AirMedia Series 3 receivers are available in the following models:

- [AM-3000-WF](#): AirMedia Receiver 3000 with Wi-Fi® Network Connectivity
- [AM-3000-WF-I](#): AirMedia Receiver 3000 with Wi-Fi® Network Connectivity, International
- [AM-3100-WF](#): AirMedia Receiver 3100 with Wi-Fi® Network Connectivity
- [AM-3100-WF-I](#): AirMedia Receiver 3100 with Wi-Fi® Network Connectivity, International
- [AM-3200](#): AirMedia Receiver 3200
- [AM-3200-WF](#): AirMedia Receiver 3200 with Wi-Fi® Network Connectivity
- [AM-3200-WF-I](#): AirMedia Receiver 3200 with Wi-Fi® Network Connectivity, International
- [AM-3200-GV](#): AirMedia Receiver 3200, Government Version

AirMedia Series 3 Connect devices are available in the following models:

- [AM-TX3-100](#): AirMedia Series 3 Connect Adaptor
- [AM-TX3-100-I](#): AirMedia Series 3 Connect Adaptor, International

NOTE: The AM-TX3-100 and AM-TX3-100-I are functionally similar. Unless otherwise noted, they are referred to as the "AM-TX3-100" for simplicity within this document.

- [AM-TX3-200](#): AirMedia Series 3 Connect Endpoint

AirMedia Series 3 devices are available in the following kits:

- [AM3-111 KIT](#): AirMedia Series 3 Kit with AM-3100-WF Receiver and AM-TX3-100 Adaptor
- [AM3-111-I KIT](#): AirMedia Series 3 Kit with AM-3100-WF Receiver and AM-TX3-100 Adaptor, International
- [AM3-212 KIT](#): AirMedia Series 3 Kit with AM-3200-WF Receiver, two AM-TX3-100 Adaptors, and Cradle
- [AM3-212-I KIT](#): AirMedia Series 3 Kit with AM-3200-WF Receiver, two AM-TX3-100 Adaptors, and Cradle, International
- [UC-SB-P50-AM-WF KIT](#): AirMedia Series 3 Conferencing System with AM-3200-WF and Jabra® PanaCast 50 Video Bar
- [UC-SB-P50-AM-WF-I KIT](#): AirMedia Series 3 Conferencing System with AM-3200-WF-I and Jabra® PanaCast 50 Video Bar, International

For more information on receiver features and capabilities, refer to [Feature Comparison on page 8](#).

For security and deployment information, refer to [AirMedia Presentation Gateway Security Reference Guide](#) (Doc 7693).

Feature Comparison

FEATURE		AM-3000-WF	AM-3100-WF	AM-3200	AM-3200-WF
AirMedia Series 3 technology ¹		✓	✓	✓	✓
AirMedia Output Resolution ²		1080p60	1080p60	1080p60	1080p60
AirMedia Device Support					
	Windows® OS (all versions)	✓	✓	✓	✓
	Mac® devices	✓	✓	✓	✓
	iPad® devices	✓	✓	✓	✓
	iPhone® devices	✓	✓	✓	✓
	iOS® devices	✓	✓	✓	✓
	Android™ devices	✓	✓	✓	✓
AirMedia Screen Mirroring Support					
	Windows® OS (all versions)	✓	✓	✓	✓
	Mac devices	✓	✓	✓	✓
	iPad devices	✓	✓	✓	✓
	iPhone devices	✓	✓	✓	✓
	iOS devices	✓	✓	✓	✓
	Android devices	✓	✓	✓	✓
AirMedia Video + Audio Playback					
	PC-Windows (all versions)	✓	✓	✓	✓
	Chrome OS™ operating system ³	✓	✓	✓	✓
	Mac devices	✓	✓	✓	✓
	iPad devices	✓	✓	✓	✓
	iPhone devices	✓	✓	✓	✓
	iOS devices	✓	✓	✓	✓
	Android devices	✗	✗	✗	✗
AirMedia Playback Features					

FEATURE		AM-3000-WF	AM-3100-WF	AM-3200	AM-3200-WF
	DRM Content Support (Netflix, etc.)	✗	✗	✗	✗
	Device Internet Connection Required for AirPlay® Video Push	✓	✓	✓	✓
Security					
	AES-128/TLS security ⁴	✓	✓	✓	✓
	802.1X	✓	✓	✓	✓
	Active Directory® Authentication	✓	✓	✓	✓
Crestron® Control					
	.AV Framework™ Platform	✓	✓	✓	✓
	XiO Cloud® Service	✓	✓	✓	✓
	Crestron Studio® Software	N/A	N/A	N/A	N/A
	SIMPL Windows	✓	✓	✓	✓
	SIMPL#	Future release	Future release	Future release	Future release
	Virtual Control (VC-4)	✓	✓	✓	✓
Video Inputs					
	HDMI® Input	✗	✗	1	1
	HDMI Resolution	✗	✗	1080p60	1080p60
	HDMI HDCP	✗	✗	HDCP 1.4	HDCP 1.4
Video Outputs					
	HDMI Output	1	1	1	1
	HDMI Resolution ⁵	4K60	4K60	4K60	4K60
	HDMI HDCP	HDCP 2.2	HDCP 2.2	HDCP 2.2	HDCP 2.2
Touch Screen Support		External	External	External	External
PoE Occupancy Sensor (CEN-ODT-C-POE)		✓	✓	✓	✓

FEATURE	AM-3000-WF	AM-3100-WF	AM-3200	AM-3200-WF
Other Interfaces				
COM/IR Support	✗	✗	✓	✓
CEC	✓	✓	✓	✓
Power Over Ethernet	✓	✓	✓	✓
Direct Connect Scheduling Integration ⁶				
Microsoft Exchange Server [®] or Microsoft 365 [®] Software	✓	✓	✓	✓
Google Calendar [™] Service	✓	✓	✓	✓
General Features				
AirMedia Canvas	✓	✓	✓	✓
Airmedia Canvas Control	✓	✓	✓	✓
Control System Interface	✓	✓	✓	✓
Wireless Conferencing	✗	✓	✓	✓
Appspace [®] Application	✓	✓	✓	✓
Wireless Access Point Mode	✓	✓	✗	✓
Moderator Mode	Future release	Future release	Future release	Future release
AirMedia Connect Adaptor	✓	✓	✗	✓
YouTube [®] software Pushmode Support	✓	✓	✓	✓
Mounting	Freestanding Surface	Freestanding Surface	Freestanding Surface Rack	Freestanding Surface Rack
Dimensions	Height: 1.21 in. (31 mm) Width: 5 in. (127 mm) Depth: 5 in. (127 mm)	Height: 1.21 in. (31 mm) Width: 5 in. (127 mm) Depth: 5 in. (127 mm)	Height: 1.26 in. (33 mm) Width: 7.40 in. (188 mm) Depth: 6.93 in. (177 mm)	Height: 1.26 in. (33 mm) Width: 7.40 in. (188 mm) Depth: 6.93 in. (177 mm)

Notes:

1. To compare iterations of AirMedia technology, refer to the [AirMedia Presentation Gateway Security Reference Guide](#) (Doc 7693).
2. All video inputs are scaled to the HDMI output resolution.
3. The AirMedia Extension for Google Chrome OS relies on web technologies for screen sharing that are built into the web browser. Performance variations with motion video (quality and frame rate) will be observed based upon the encoding capabilities of the Chrome OS device and the nature of the content being displayed (ex. High motion video).
4. TLS 1.3 is not currently supported.
5. All video inputs are scaled to the HDMI output resolution.
6. Connection via Crestron Fusion® software may allow additional providers.


Features

Refer to the following sections for more information on the features provided by Series 3 AirMedia devices and bundles.

- [AM-3000-WF\(-I\) Features on page 13](#)
- [AM-3100-WF\(-I\) Features on page 16](#)
- [AM-3200 Features on page 19](#)
- [AM-3200-WF\(-I\) Features on page 22](#)
- [AM-3200-GV Features on page 25](#)
- [AM-TX3-100 Features on page 28](#)
- [AM-TX3-200 Features on page 30](#)
- [UC-SB-P50-AM-WF\(-I\) KIT Features on page 32](#)

AM-3000-WF(-I) Features

The AirMedia® Receiver 3000-WF(-I) enables secure wireless collaboration in the modern digital workspace. Easy to deploy and manage, install the Receiver in conference rooms, huddle rooms, lounges, lobbies, or almost any space to establish a productive meeting environment.

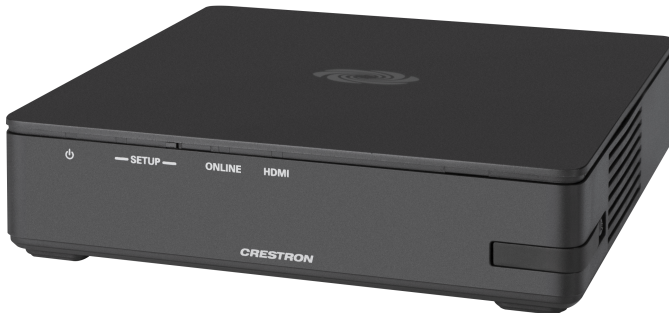

- Complete room solution enables secure wireless AirMedia® presentation from laptops, smartphones, tablet devices, and AirMedia Connect Adapters
- Enables smart automation via intelligent display control, personal device control, occupancy detection, and integration into a broader connected ecosystem
- Enterprise-grade security and content encryption protects privacy and ensures compliance with IT policies
- XiO Cloud® service support for remote provisioning and management
- Integrates with Appspace® digital signage software platform for content display
- Supports content sharing of up to four simultaneous sources for multi-user collaboration with AirMedia Canvas.

Connect and Present

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a display to implement a smart room with wireless collaboration. The receiver features AirMedia wireless presentation capability, and an HDMI® output that connects to a display (up to 4K), and various USB interfaces for wireless conferencing. Connect your laptop, smart phone, tablet, AirMedia Connect Adaptor, or other source type to instantly present the source image on the display.

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a display to implement a smart room with wired and wireless collaboration. The receiver includes AirMedia wireless presentation capability. It has an HDMI® output for connecting to displays (up to 4K resolution) and USB interfaces for connecting in-room conferencing peripherals. Connect your laptop, smart phone, tablet, AirMedia Connect device, or other compatible source to instantly present the source image on the display.

AirMedia Wireless Presentation

With AirMedia technology, users can wirelessly present content from laptops, smartphones, and tablet devices via a built in Wi-Fi® network capabilities or via Wi-Fi wireless network. Present content from desktop or laptop computers using downloadable client software, the AirMedia extension for Google Chrome™ browser, or Miracast® screen mirroring technology (Windows 10 and Windows 11 computers only). Present content from Android™ and iOS® mobile devices with the AirMedia app.

For more information about AirMedia, visit www.crestron.com/airmedia.¹

Multi-Source Presentation

Present up to four sources simultaneously with the AirMedia Canvas feature. To maximize screen coverage, AirMedia Canvas automatically configures the best possible layout based on the number of active presenters, the type of sources, and their aspect ratios. Use the AirMedia app or a connected Crestron touch screen (sold separately) to manage sources and their position on the display.

Enhanced Onscreen Experience

When no source is connected, the AM-3000-WF displays a customizable welcome screen on the room display with simple instructions for connecting and presenting. Integration with Microsoft Exchange Server® (for Outlook® and Microsoft 365® users), Google Calendar™, or Crestron Fusion® room scheduling software enables the space's availability and meeting details to appear on screen. Throughout the meeting, notifications periodically indicate the remaining time and the next scheduled event. Pop-up messages sent from Crestron Fusion may also appear in the event of an emergency or to deliver an important announcement.

Add-on Control Options

Add a Power over Ethernet occupancy sensor ([CEN-ODT-C-POE](#)) to control display or digital signage on/off based on room occupancy or vacancy.

Digital Signage Functionality

Integrate the Appspace® digital signage application or other web-based signage providers with the AM-3000-WF. The AM-3000-WF can display digital signage content when no presentation is in progress or the room is unoccupied.

Crestron Fusion® Room Monitoring

Presentation spaces can be managed and centrally monitored through the Crestron Fusion enterprise management service. By adding an optional occupancy sensor ([CEN-ODT-C-POE](#)), the AM-3000-WF can detect and log when people are present in the space, automatically turn the display on and off, and make unoccupied spaces available for new bookings. Crestron Fusion software supports room scheduling, and can integrate with a variety of third-party calendaring applications. Instant alerts notify the help desk to rapidly resolve any problems and maximize uptime and workflow.

For more information about Crestron Fusion, visit www.crestron.com/fusion.

XiO Cloud® Provisioning and Management Service

The AM-3000-WF is compatible with the XiO Cloud service, which enables installers and IT managers to easily deploy and manage thousands of devices. The XiO Cloud service allows for system alerts and network management and provisioning.

For more information, visit www.crestron.com/xiocloud.

Enterprise-Grade Security

The AirMedia Presentation System is an enterprise-grade solution that can be deployed across multiple spaces and set up easily using a web browser or XiO Cloud software. Employing standard network security protocols such as 802.1x network access control, Active Directory® authentication, and AES content encryption, the AM-3000-WF protects privacy and ensures compliance with your organization's IT policies.

Hybrid Wireless Connectivity with the AirMedia Connect Adaptor

As an alternative to software based AirMedia wireless presentation, the AM-3000-WF is compatible with [AirMedia Series 3 Connect Adaptors](#). Simply plug the adaptor into a personal device's USB-C® port to connect to the AM-3000-WF. The adaptor communicates wirelessly with the system using built-in Wi-Fi network capabilities to display content up to a 4K30 resolution. Use the LED-backlit capacitive touch buttons to start, stop, or pause the presentation at any time. Connect up to eight adaptors to a single receiver to maximize the space's collaboration abilities.

Note:

1. AirMedia wireless presentation requires a wired network connection between the AirMedia receiver and an external Wi-Fi wireless access point (not included). Laptops may alternately connect to AirMedia using a wired Ethernet connection. Full-motion video performance is dependent upon the performance of the network and the sending device. Computer client software and mobile device apps are available for download at www.crestron.com/airmedia.

AM-3100-WF(-I) Features

The AirMedia® Receiver 3100-WF(-I) enables secure wireless collaboration in the modern digital workspace. Easy to deploy and manage, install the Receiver in conference rooms, huddle rooms, lounges, lobbies, or almost any space to establish a productive meeting environment.



- Complete room solution enables secure wireless AirMedia® presentation from laptops, smartphones, tablet devices, and AirMedia Connect Adapters
- Enables smart automation via intelligent display control, personal device control, occupancy detection, and integration into a broader connected ecosystem
- Enterprise-grade security and content encryption protects privacy and ensures compliance with IT policies
- XiO Cloud® service support for remote provisioning and management
- Integrates with Appspace® digital signage software platform for content display
- Supports content sharing of up to four simultaneous sources for multi-user collaboration with AirMedia Canvas.
- Wireless conferencing and presentation allows for collaboration with in-room and remote participants

Connect and Present

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a display to implement a smart room with wireless collaboration. The receiver features AirMedia wireless presentation capability and an HDMI® output that connects to a display (up to 4K). Connect your laptop, smart phone, tablet, AirMedia Connect Adaptor, or other source type to instantly present the source image on the display.

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a display to implement a smart room with wired and wireless collaboration. The receiver includes AirMedia wireless presentation capability. It has an HDMI® output for connecting to displays (up to 4K resolution) and USB interfaces for connecting in-room conferencing peripherals. Connect your laptop, smart phone, tablet, AirMedia Connect device, or other compatible source to instantly present the source image on the display.

AirMedia Wireless Presentation

With AirMedia technology, users can wirelessly present content from laptops, smartphones, and tablet devices via a built-in Wi-Fi® network capabilities or via Wi-Fi wireless network. Present content from desktop or laptop computers using the AirMedia extension for Google Chrome™ browser. Present content from Android™ and iOS® mobile devices with the AirMedia app.

For more information about AirMedia, visit www.crestron.com/airmedia.¹

Multi-Source Presentation

Present up to four sources simultaneously with the AirMedia Canvas feature. To maximize screen coverage, AirMedia Canvas automatically configures the best possible layout based on the number of active presenters, the type of sources, and their aspect ratios. Use the AirMedia app or a connected Crestron touch screen (sold separately) to manage sources and their position on the display.

Wireless Conferencing

Enhanced Onscreen Experience

When no source is connected, the AM-3100-WF displays a customizable welcome screen on the room display with simple instructions for connecting and presenting. Integration with Microsoft Exchange Server® (for Outlook® and Microsoft 365® users), Google Calendar™, or Crestron Fusion® room scheduling software enables the space's availability and meeting details to appear on screen. Throughout the meeting, notifications periodically indicate the remaining time and the next scheduled event. Pop-up messages sent from Crestron Fusion may also appear in the event of an emergency or to deliver an important announcement.

Add-on Control Options

Add a Power over Ethernet occupancy sensor ([CEN-ODT-C-POE](#)) to control display or digital signage on/off based on room occupancy or vacancy.

XiO Cloud® Provisioning and Management Service

The AM-3100-WF is compatible with the XiO Cloud service, which enables installers and IT managers to easily deploy and manage thousands of devices. The XiO Cloud service allows for system alerts and network management and provisioning.

For more information, visit www.crestron.com/xiocloud.

Digital Signage Functionality

Integrate the Appspace® digital signage application or other web-based signage providers with the AM-3100-WF. The AM-3100-WF can display digital signage content when no presentation is in progress or the room is unoccupied.

Crestron Fusion® Room Monitoring

Presentation spaces can be managed and centrally monitored through the Crestron Fusion enterprise management service. By adding an optional occupancy sensor ([CEN-ODT-C-POE](#)), the AM-3100-WF can detect and log when people are present in the space, automatically turn the display on and off, and make unoccupied spaces available for new bookings. Crestron Fusion software supports room scheduling, and can integrate with a variety of third-party calendaring applications. Instant alerts notify the help desk to rapidly resolve any problems and maximize uptime and workflow.

For more information about Crestron Fusion, visit www.crestron.com/fusion.

Enterprise-Grade Security

The AirMedia Presentation System is an enterprise-grade solution that can be deployed across multiple spaces and set up easily using a web browser or XiO Cloud software. Employing standard network security protocols such as 802.1x network access control, Active Directory® authentication, and AES content encryption, the AM-3100-WF protects privacy and ensures compliance with your organization's IT policies.

Hybrid Wireless Connectivity with the AirMedia Connect Adaptor

As an alternative to software based AirMedia wireless presentation, the AM-3100-WF(-I) is compatible with [AirMedia Series 3 Connect Adaptors](#). Simply plug the adaptor into a personal device's USB-C® port to connect to the AM-3100-WF(-I). The adaptor communicates wirelessly with the system using built-in Wi-Fi network capabilities to display content up to a 4K30 resolution. Use the LED-backlit capacitive touch buttons to start, stop, or pause the presentation at any time. Connect up to eight adaptors to a single receiver to maximize the space's collaboration abilities.

1. AirMedia wireless presentation requires a wired network connection between the AirMedia receiver and an external Wi-Fi wireless access point (not included). Laptops may alternately connect to AirMedia using a wired Ethernet connection. Full-motion video performance is dependent upon the performance of the network and the sending device. Computer client software and mobile device apps are available for download at www.crestron.com/airmedia.
2. Crestron supports most mainstream devices and applications. For a list of supported conferencing peripherals, refer to [OLH Answer ID 1001764](#).

AM-3200 Features

The AirMedia® Receiver 3200 enables secure wireless collaboration in the modern digital workspace. Easy to deploy and manage, install the Receiver in conference rooms, huddle rooms, lounges, lobbies, or almost any space to establish a productive meeting environment.



- Complete room solution enables secure presentation from laptops, smartphones, and tablet devices using either a wired HDMI® connection or a wireless AirMedia® connection
- Integration friendly features such as HDMI® input, dual LAN, balanced audio output, and display control via RS-232 and IR
- Enables smart automation via intelligent display control, personal device control, occupancy detection, and integration into a broader connected ecosystem
- Enterprise-grade security and content encryption protects privacy and ensures compliance with IT policies
- XiO Cloud® service support for remote provisioning and management
- Integrates with Appspace® digital signage software platform for content display
- Supports content sharing of up to four simultaneous sources for multi-user collaboration with AirMedia Canvas.
- Wireless conferencing and presentation allows for collaboration with in-room and remote participants

Connect and Present

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a wall-mount display and enables a smart room with wireless collaboration. The receiver features AirMedia wireless presentation capability, an HDMI® output that connects to a display (up to 4K), an HDMI input, and various USB interfaces for wireless conferencing. Connect your laptop, smart phone, tablet, or other source type to instantly present the source image on the display.

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a display to implement a smart room with wired and wireless collaboration. The receiver includes AirMedia wireless presentation capability. It has an HDMI® output for connecting to displays (up to 4K resolution) and USB interfaces for connecting in-room conferencing peripherals. Connect your laptop, smart phone, tablet, AirMedia Connect device, or other compatible source to instantly present the source image on the display.

AirMedia Wireless Presentation

With AirMedia technology, users can wirelessly present content from laptops, smartphones, and tablet devices via built in Wi-Fi® network capabilities or via an external Wi-Fi® wireless network. Present

content from desktop or laptop computers using downloadable client software, or the AirMedia extension for the Google Chrome™ web browser. Present content from Android™ and iOS® mobile devices with the AirMedia app.

For more information about AirMedia, visit www.crestron.com/airmedia.¹

HDMI Connectivity

In addition to AirMedia, the AM-3200 includes an HDMI input for direct connection of a local source, such as a Mini PC, or a portable laptop computer via an optional wall plate or cable. The HDMI input supports HD 1080p/60 signals.²

Multi-Source Presentation

Present up to four sources simultaneously with the AirMedia Canvas feature. To maximize screen coverage, AirMedia Canvas automatically configures the best possible layout based on the number of active presenters, the type of sources, and their aspect ratios.³ Use the AirMedia app or a connected Crestron touch screen (sold separately) to manage sources and their position on the display.

Wireless Conferencing

Enhanced Onscreen Experience

When no source is connected, the AM-3200 displays a customizable welcome screen on the room display with simple instructions for connecting and presenting. Integration with Microsoft Exchange Server® (for Outlook® and Microsoft 365® users), Google Calendar™, or Crestron Fusion® room scheduling software enables the space's availability and meeting details to appear on screen. Throughout the meeting, notifications periodically indicate the remaining time and the next scheduled event. Pop-up messages sent from Crestron Fusion may also appear in the event of an emergency or to deliver an important announcement.

Add-on Control Options

Add a Power over Ethernet occupancy sensor ([CEN-ODT-C-POE](#)) to control display or digital signage on/off based on room occupancy or vacancy.

XiO Cloud® Provisioning and Management Service

The AM-3200 is compatible with the XiO Cloud service, which enables installers and IT managers to easily deploy and manage thousands of devices. The XiO Cloud service allows for system alerts and network management and provisioning.

For more information, visit www.crestron.com/xiocloud.

Crestron Fusion® Room Monitoring

Presentation spaces can be managed and centrally monitored through the Crestron Fusion enterprise management service. By adding an optional occupancy sensor ([CEN-ODT-C-POE](#)), the AM-3200 can detect and log when people are present in the space, automatically turn the display on and off, and make unoccupied spaces available for new bookings. Crestron Fusion software supports room scheduling, and can integrate with a variety of third-party calendaring applications. Instant alerts notify the help desk to rapidly resolve any problems and maximize uptime and workflow.

For more information about Crestron Fusion, visit www.crestron.com/fusion.

Digital Signage Functionality

Integrate the Appspace® digital signage application or other web-based signage providers with the AM-3200. The AM-3200 can display digital signage content when no presentation is in progress or the room is unoccupied.

Enterprise-Grade Security

The AirMedia Presentation System is an enterprise-grade solution that can be deployed across multiple spaces and set up easily using a web browser or XiO Cloud software. Employing standard network security protocols such as 802.1x network access control, Active Directory® authentication, and AES content encryption, the AM-3200 protects privacy and ensures compliance with your organization's IT policies.

Notes:

1. AirMedia wireless presentation requires a wired network connection between the AirMedia receiver and an external Wi-Fi wireless access point (not included). Laptops may alternately connect to AirMedia using a wired Ethernet connection. Full-motion video performance is dependent upon the performance of the network and the sending device. Computer client software and mobile device apps are available for download at www.crestron.com/airmedia.
2. Using an appropriate adapter or interface cable, the HDMI input can support DVI and Dual-Mode DisplayPort sources, and the HDMI output can provide a DVI signal. CBL-HD-DVI interface cables are available separately.
3. When the AirMedia Canvas feature is enabled, the 4:2:0 color space is used for high definition sources connected to the HDMI input port. When the AirMedia Canvas feature is disabled, the 4:4:4 color space is used. If the 4:4:4 color space is required by sources connected to the HDMI input port, the AirMedia Canvas feature should be disabled.
4. Crestron supports most mainstream devices and applications. For a list of supported conferencing peripherals, refer to [OLH Answer ID 1001764](#).

AM-3200-WF(-I) Features

The AirMedia® Receiver 3200 (AM-3200-WF) enables secure wireless collaboration in the modern digital workspace. Easy to deploy and manage, install the Receiver in conference rooms, huddle rooms, lounges, lobbies, or almost any space to establish a productive meeting environment.



- Complete room solution enables secure presentation from laptops, smartphones, tablet devices, and AirMedia Connect Adapters using either a wired HDMI® connection or a wireless AirMedia® connection
- Integration friendly features such as HDMI® input, dual LAN, balanced audio output, and display control via RS-232 and IR
- Enables smart automation via intelligent display control, personal device control, occupancy detection, and integration into a broader connected ecosystem
- Enterprise-grade security and content encryption protects privacy and ensures compliance with IT policies
- XiO Cloud® service support for remote provisioning and management
- Integrates with Appspace® digital signage software platform for content display
- Supports content sharing of up to four simultaneous sources for multi-user collaboration with AirMedia Canvas.
- Wireless conferencing and presentation allows for collaboration with in-room and remote participants

Connect and Present

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a display to implement a smart room with wireless collaboration. The receiver features AirMedia wireless presentation capability and an HDMI® output that connects to a display (up to 4K). Connect your laptop, smart phone, tablet, AirMedia Connect Adaptor, or other source type to instantly present the source image on the display.

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a display to implement a smart room with wired and wireless collaboration. The receiver includes AirMedia wireless presentation capability. It has an HDMI® output for connecting to displays (up to 4K resolution) and USB interfaces for connecting in-room conferencing peripherals. Connect your laptop, smart phone, tablet, AirMedia Connect device, or other compatible source to instantly present the source image on the display.

AirMedia Wireless Presentation

With AirMedia technology, users can wirelessly present content from laptops, smartphones, and tablet devices via a built in Wi-Fi® network capabilities or via Wi-Fi wireless network. Present content from

desktop or laptop computers using downloadable client software, the AirMedia extension for Google Chrome™ browser, or Miracast® screen mirroring technology (Windows 10 and Windows 11 computers only). Present content from Android™ and iOS® mobile devices with the AirMedia app.

For more information about AirMedia, visit www.crestron.com/airmedia.¹

HDMI Connectivity

In addition to AirMedia, the AM-3200-WF includes an HDMI input for direct connection of a local source, such as a Mini PC, or a portable laptop computer via an optional wall plate or cable. The HDMI input supports HD 1080p/60 signals.²

Multi-Source Presentation

Present up to four sources simultaneously with the AirMedia Canvas feature. To maximize screen coverage, AirMedia Canvas automatically configures the best possible layout based on the number of active presenters, the type of sources, and their aspect ratios.³ Use the AirMedia app or a connected Crestron touch screen (sold separately) to manage sources and their position on the display.

Wireless Conferencing

Enhanced Onscreen Experience

When no source is connected, the AM-3200-WF displays a customizable welcome screen on the room display with simple instructions for connecting and presenting. Integration with Microsoft Exchange Server® (for Outlook® and Microsoft 365® users), Google Calendar™, or Crestron Fusion® room scheduling software enables the space's availability and meeting details to appear on screen. Throughout the meeting, notifications periodically indicate the remaining time and the next scheduled event. Pop-up messages sent from Crestron Fusion may also appear in the event of an emergency or to deliver an important announcement.

Add-on Control Options

Add a Power over Ethernet occupancy sensor ([CEN-ODT-C-POE](#)) to control display or digital signage on/off based on room occupancy or vacancy.

XiO Cloud® Provisioning and Management Service

The AM-3200-WF is compatible with the XiO Cloud service, which enables installers and IT managers to easily deploy and manage thousands of devices. The XiO Cloud service allows for system alerts and network management and provisioning.

For more information, visit www.crestron.com/xiocloud.

Digital Signage Functionality

Integrate the Appspace® digital signage application or other web-based signage providers with the AM-3200-WF. The AM-3200-WF can display digital signage content when no presentation is in progress or the room is unoccupied.

Crestron Fusion® Room Monitoring

Presentation spaces can be managed and centrally monitored through the Crestron Fusion enterprise management service. By adding an optional occupancy sensor ([CEN-ODT-C-POE](#)), the AM-3200-WF can detect and log when people are present in the space, automatically turn the display on and off, and make unoccupied spaces available for new bookings. Crestron Fusion software supports room scheduling, and can integrate with a variety of third-party calendaring applications. Instant alerts notify the help desk to rapidly resolve any problems and maximize uptime and workflow.

For more information about Crestron Fusion, visit www.crestron.com/fusion.

Enterprise-Grade Security

The AirMedia Presentation System is an enterprise-grade solution that can be deployed across multiple spaces and set up easily using a web browser or XiO Cloud software. Employing standard network security protocols such as 802.1x network access control, Active Directory® authentication, and AES content encryption, the AM-3200-WF protects privacy and ensures compliance with your organization's IT policies.

Hybrid Wireless Connectivity with the AirMedia Connect Adaptor

As an alternative to software based AirMedia wireless presentation, the AM-3200-WF(-I) is compatible with [AirMedia Series 3 Connect Adaptors](#). Simply plug the adaptor into a personal device's USB-C® port to connect to the AM-3200-WF(-I). The adaptor communicates wirelessly with the system using built-in Wi-Fi network capabilities to display content up to a 4K30 resolution. Use the LED-backlit capacitive touch buttons to start, stop, or pause the presentation at any time. Connect up to eight adaptors to a single receiver to maximize the space's collaboration abilities.

Notes:

1. AirMedia wireless presentation requires a wired network connection between the AirMedia receiver and an external Wi-Fi wireless access point (not included). Laptops may alternately connect to AirMedia using a wired Ethernet connection. Full-motion video performance is dependent upon the performance of the network and the sending device. Computer client software and mobile device apps are available for download at www.crestron.com/airmedia.
2. Using an appropriate adapter or interface cable, the HDMI input can support DVI and Dual-Mode DisplayPort sources, and the HDMI output can provide a DVI signal. CBL-HD-DVI interface cables are available separately.
3. When the AirMedia Canvas feature is enabled, the 4:2:0 color space is used for high definition sources connected to the HDMI input port. When the AirMedia Canvas feature is disabled, the 4:4:4 color space is used. If the 4:4:4 color space is required by sources connected to the HDMI input port, the AirMedia Canvas feature should be disabled.
4. Crestron supports most mainstream devices and applications. For a list of supported conferencing peripherals, refer to [OLH Answer ID 1001764](#).

For more information about AirMedia, visit www.crestron.com/airmedia.¹

HDMI Connectivity

In addition to AirMedia, the AM-3200-GV includes an HDMI input for direct connection of a local source, such as a Mini PC, or a portable laptop computer via an optional wall plate or cable. The HDMI input supports HD 1080p/60 signals.²

Multi-Source Presentation

Present up to four sources simultaneously with the AirMedia Canvas feature. To maximize screen coverage, AirMedia Canvas automatically configures the best possible layout based on the number of active presenters, the type of sources, and their aspect ratios.³ Use the AirMedia app or a connected Crestron touch screen (sold separately) to manage sources and their position on the display.

Wireless Conferencing

Enhanced Onscreen Experience

When no source is connected, the AM-3200-GV displays a customizable welcome screen on the room display with simple instructions for connecting and presenting. Integration with Microsoft Exchange Server® (for Outlook® and Microsoft 365® users), Google Calendar™, or Crestron Fusion® room scheduling software enables the space's availability and meeting details to appear on screen. Throughout the meeting, notifications periodically indicate the remaining time and the next scheduled event. Pop-up messages sent from Crestron Fusion may also appear in the event of an emergency or to deliver an important announcement.

Add-on Control Options

Add a Power over Ethernet occupancy sensor ([CEN-ODT-C-POE](#)) to control display or digital signage on/off based on room occupancy or vacancy.

XiO Cloud® Provisioning and Management Service

The AM-3200-GV is compatible with the XiO Cloud service, which enables installers and IT managers to easily deploy and manage thousands of devices. The XiO Cloud service allows for system alerts and network management and provisioning.

For more information, visit www.crestron.com/xiocloud.

Crestron Fusion® Room Monitoring

Presentation spaces can be managed and centrally monitored through the Crestron Fusion enterprise management service. By adding an optional occupancy sensor ([CEN-ODT-C-POE](#)), the AM-3200-GV can detect and log when people are present in the space, automatically turn the display on and off, and make unoccupied spaces available for new bookings. Crestron Fusion software supports room scheduling, and can integrate with a variety of third-party calendaring applications. Instant alerts notify the help desk to rapidly resolve any problems and maximize uptime and workflow.

For more information about Crestron Fusion, visit www.crestron.com/fusion.

Digital Signage Functionality

Integrate the Appspace® digital signage application or other web-based signage providers with the AM-3200-GV. The AM-3200-GV can display digital signage content when no presentation is in progress or the room is unoccupied.

Enterprise-Grade Security

The AirMedia Presentation System is an enterprise-grade solution that can be deployed across multiple spaces and set up easily using a web browser or XiO Cloud software. Employing standard network security protocols such as 802.1x network access control, Active Directory® authentication, and AES content encryption, the AM-3200-GV protects privacy and ensures compliance with your organization's IT policies.

Notes:

1. AirMedia wireless presentation requires a wired network connection between the AM-3200-GV and an external Wi-Fi wireless access point (not included). Laptops may alternately connect to AirMedia using a wired Ethernet connection. Full-motion video performance is dependent upon the performance of the network and the sending device. Computer client software and mobile device apps are available for download [here](#).
2. TLS 1.3 is currently not supported.
3. Using an appropriate adapter or interface cable, the HDMI output can provide a DVI signal. CBL-HD-DVI interface cables are available separately.
4. With or without reduced blanking.

AM-TX3-100 Features

The AirMedia Connect Adaptor ([AM-TX3-100](#)) enables wireless presentation and conferencing¹ when paired with a Wi-Fi® network capable AirMedia Series 3 Receiver. Deploy the AM-TX3-100 alongside an AirMedia Series 3 Receiver in conference rooms, huddle rooms, lounges, lobbies, or almost any space to establish a productive meeting environment.



- Connects to a personal device using an integrated USB-C® connector
- Shares content up to 4K30 resolution within seconds of connecting to a personal device
- Provides access to Wireless Conferencing peripherals connected to a paired AM-3100-WF or AM-3200-WF AirMedia Series 3 Receiver¹
- Wirelessly pairs with a Wi-Fi® network capable AirMedia Series 3 Receiver
- Pair up to eight AirMedia Connect devices with a single Wi-Fi® network capable AirMedia Series 3 Receiver
- Includes backlit capacitive touch buttons for convenient content sharing control
- No software or driver installation required

A System Solution

The AM-TX3-100 works alongside a Wi-Fi network and Wireless Conferencing capable AirMedia Series 3 Receiver for a complete system solution. Built-in Wi-Fi network connectivity creates a point-to-point network between the adaptor and the receiver for seamless connectivity without interruption. Easily pair up to eight adaptors to a single receiver. Store up to four AirMedia® Series 3 Connect Adaptors in the [AM-TX3-100-CRADLE](#) (sold separately).

Simple Connectivity

Using the integrated USB-C® cable, connect the AM-TX3-100 to a personal device for seamless wireless presentation on an in-room display. Because USB-C offers native video communication, no software installation is required on the personal device.

Seamless Wireless Conferencing¹

When the AM-TX3-100 is connected to a personal device via USB-C, that device can access peripherals² connected to a paired Wireless Conferencing-capable AirMedia Receiver ([AM-3100-WF](#) or [AM-3200-WF](#))/([AM-3100-WF-I](#) or [AM-3200-WF-I](#)). These peripherals can then be used on the personal device with Microsoft Teams® or Zoom™ software.

Enterprise-Grade Security

The AirMedia platform is an enterprise-grade solution that can be deployed across hundreds of spaces, and set up easily using just a web browser, Crestron Fusion® software, or the XiO Cloud® service. It employs standard network security protocols, including 802.1x network access control, Active Directory® authentication, and AES content encryption to protect privacy and ensure compliance with your organization's IT policies.

Notes:

1. Wireless Conferencing functionality through the AirMedia Connect Adaptor requires a WiFi® network and Wireless Conferencing compatible AirMedia Series 3 Receiver.
2. Crestron supports most mainstream devices and applications. For a list of supported conferencing peripherals, refer to [OLH Answer ID 1001764](#).

AM-TX3-200 Features

The AirMedia® Series 3 Connect Endpoint ([AM-TX3-200](#)) enables wireless presentation and conferencing¹ when paired with a Wi-Fi® network capable AirMedia Series 3 Receiver. Deploy the AM-TX3-200 alongside a compatible AirMedia receiver in conference rooms, huddle spaces, classrooms, or almost any space to establish a productive meeting or learning environment.



- Streamlines connectivity to personal devices via a single USB-C® connection or through HDMI and USB connections
- Supports content sharing up to 4K30 resolution and provides access to in-room conferencing peripherals
- Flexible installation and deployment options, including mounting under tables, in podiums, and other locations using the supplied bracket
- Versatile power options, including PoE, DC power, or USB-C via a connected user device
- With DC power, PoE+ passthrough is available to power a connected touch screen
- Compatible with Wi-Fi®-enabled AirMedia® Series 3 Receivers
- Communicates with an AirMedia Receiver using Wi-Fi Direct, Infrastructure Wi-Fi, or a wired network
- No software or driver installation required

A System Solution

The AM-TX3-200 works alongside a compatible AirMedia receiver to provide a complete system solution. The AM-TX3-200 communicates with the AirMedia receiver using a point-to-point Wi-Fi Direct connection, an infrastructure Wi-Fi network, or a wired network.

Simple Connectivity

A personal device can be connected to the AM-TX3-200 using either a single USB-C® cable² or a combination of a USB-A cable² and an HDMI® cable², supporting a wide variety of devices (cables sold separately). No drivers, software, or applications are required, offering a simple and user-friendly experience.

Rapid, High-Resolution Presentation

The AM-TX3-200 leverages USB-C and HDMI for native video communication, eliminating the need for software installation on personal devices. Simply connect and start presenting to the in-room display with up to 4K30 resolution within seconds.

Seamless Conferencing

When the AM-TX3-200 is connected to a personal device via USB, the user can access in-room conferencing peripherals³ connected to a paired Wireless Conferencing-capable AirMedia Receiver ([AM-3100-WF](#), [AM-3200-WF](#), [AM-3100-WF-I](#), or [AM-3200-WF-I](#)). These peripherals can then be used on the personal device with unified communications software such as Microsoft Teams® or Zoom® software.

Flexible Deployment Options

The AM-TX3-200 is designed to be deployed in a variety of spaces with unique power, connectivity, and installation requirements. The device can be powered via PoE, DC power, or the connected user device via USB-C. When powered with a local power supply ([PW-2420RU](#)), PoE+ is available to a device connected to the AUX port, such as a touch screen.

The device is shipped with a bracket, ensuring secure mounting and easy installation.

NOTE: When using USB-C to power the device, only the USB-C input is active. The AM-TX3-200 wired network interfaces will not function in this mode.

Enterprise-Grade Security

The AirMedia platform is an enterprise-grade solution that can be deployed across hundreds of spaces, and set up easily using just a web browser, Crestron Fusion® software, or the XiO Cloud® service. It employs standard network security protocols, including 802.1x network access control, Active Directory® authentication, and AES content encryption to protect privacy and ensure compliance with your organization's IT policies.

Notes:

1. Wireless Conferencing functionality through the AirMedia Connect Endpoint requires a Wi-Fi network and Wireless Conferencing compatible AirMedia Series 3 Receiver.
2. The recommended compatible cables are [CBL-USB2-A-C-9](#), [CBL-USB2-A-C-12](#), [CBL-8K-HD-9](#), [CBL-8K-HD-12](#), and [CBL-USB3G1-C-C-9](#).
3. Crestron supports most mainstream devices and applications. For a list of supported conferencing peripherals, refer to [OLH Answer ID 1001764](#).

UC-SB-P50-AM-WF(-I) KIT Features

The AirMedia® Series 3 Conferencing System (UC-SB-P50-AM-WF KIT) enables secure wired and wireless collaboration in the modern digital workspace. The system contains an AirMedia Series 3 Receiver (AM-3200-WF) and a Jabra® PanaCast 50 intelligent video bar (UC-SB-P50). Easy to deploy and manage, install the UC-SB-P50-AM-WF KIT in conference rooms, huddle rooms, lounges, lobbies, or almost any space to establish a productive meeting environment.



- Complete room solution enables secure presentation from laptops, smartphones, tablet devices, and AirMedia Connect Adaptors using either a wired HDMI® connection or a wireless AirMedia® connection
- Includes an AirMedia Series 3 Receiver (AM-3200-WF) and a Jabra® PanaCast 50 intelligent video bar (UC-SB-P50)
- Integration friendly features such as HDMI® input, dual LAN, balanced audio output, and display control via RS-232 and IR
- Enables smart automation via intelligent display control, personal device control, occupancy detection, and integration into a broader connected ecosystem
- Enterprise-grade security and content encryption protects privacy and ensures compliance with IT policies
- XiO Cloud® service support for remote provisioning and management
- Integrates with Appspace® digital signage software platform for content display
- Supports content sharing of up to four simultaneous sources for multi-user collaboration with AirMedia Canvas.

Connect and Present

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a display to implement a smart room with wireless collaboration. The receiver features AirMedia wireless presentation capability and an HDMI® output that connects to a display (up to 4K). Connect your laptop, smart phone, tablet, AirMedia Connect Adaptor, or other source type to instantly present the source image on the display.

The AirMedia Series 3 Receiver can be installed beneath, beside, or behind a display to implement a smart room with wired and wireless collaboration. The receiver includes AirMedia wireless presentation capability. It has an HDMI® output for connecting to displays (up to 4K resolution) and USB interfaces for connecting in-room conferencing peripherals. Connect your laptop, smart phone, tablet, AirMedia Connect device, or other compatible source to instantly present the source image on the display.

AirMedia Wireless Presentation

With AirMedia technology, users can wirelessly present content from laptops, smartphones, and tablet devices via a Wi-Fi wireless network. Present content from desktop or laptop computers using downloadable client software, the AirMedia extension for Google Chrome™ browser, or Miracast® screen mirroring technology (Windows 10 and Windows 11 computers only). Present content from Android™ and iOS® mobile devices with the AirMedia app.

For more information about AirMedia, visit www.crestron.com/airmedia.¹

HDMI Connectivity

In addition to AirMedia, the UC-SB-P50-AM-WF KIT includes an HDMI input for direct connection of a local source, such as a Mini PC, or a portable laptop computer via an optional wall plate or cable. The HDMI input supports HD 1080p/60 signals.²

Multi-Source Presentation

Present up to four sources simultaneously with the AirMedia Canvas feature. To maximize screen coverage, AirMedia Canvas automatically configures the best possible layout based on the number of active presenters, the type of sources, and their aspect ratios.³ Use the AirMedia app or a connected Crestron touch screen (sold separately) to manage sources and their position on the display.

Wireless Conferencing

High-Definition Video Conferencing with Impressive Audio

High-quality speakers and microphones deliver exceptional full-duplex performance from the Jabra PanaCast 50 intelligent video bar (UC-SB-P50). Three built-in conferencing cameras capture the room in panoramic 4K resolution with a seamless 180° horizontal field of view.

Visit jabra.com/panacast50 for more information on the Jabra PanaCast 50 video bar.

Enhanced Onscreen Experience

When no source is connected, the UC-SB-P50-AM-WF KIT displays a customizable welcome screen on the room display with simple instructions for connecting and presenting. Integration with Microsoft Exchange Server® (for Outlook® and Microsoft 365® users), Google Calendar™, or Crestron Fusion® room scheduling software enables the space's availability and meeting details to appear on screen. Throughout the meeting, notifications periodically indicate the remaining time and the next scheduled event. Pop-up messages sent from Crestron Fusion may also appear in the event of an emergency or to deliver an important announcement.

Add-on Control Options

Add a Power over Ethernet occupancy sensor ([CEN-ODT-C-POE](#)) to control display or digital signage on/off based on room occupancy or vacancy.

XiO Cloud® Provisioning and Management Service

The UC-SB-P50-AM-WF KIT is compatible with the XiO Cloud service, which enables installers and IT managers to easily deploy and manage thousands of devices. The XiO Cloud service allows for system alerts and network management and provisioning.

For more information, visit www.crestron.com/xiocloud.

Digital Signage Functionality

Integrate the Appspace® digital signage application or other web-based signage providers with the UC-SB-P50-AM-WF KIT. The UC-SB-P50-AM-WF KIT can display digital signage content when no presentation is in progress or the room is unoccupied.

Crestron Fusion® Room Monitoring

Presentation spaces can be managed and centrally monitored through the Crestron Fusion enterprise management service. By adding an optional occupancy sensor ([CEN-ODT-C-POE](#)), the UC-SB-P50-AM-WF KIT can detect and log when people are present in the space, automatically turn the display on and off, and make unoccupied spaces available for new bookings. Crestron Fusion software supports room scheduling, and can integrate with a variety of third-party calendaring applications. Instant alerts notify the help desk to rapidly resolve any problems and maximize uptime and workflow.

For more information about Crestron Fusion, visit www.crestron.com/fusion.

Enterprise-Grade Security

The AirMedia Presentation System is an enterprise-grade solution that can be deployed across multiple spaces and set up easily using a web browser or XiO Cloud software. Employing standard network security protocols such as 802.1x network access control, Active Directory® authentication, and AES content encryption, the UC-SB-P50-AM-WF KIT protects privacy and ensures compliance with your organization's IT policies.

Hybrid Wireless Connectivity with the AirMedia Connect Adaptor

As an alternative to software based AirMedia wireless presentation, the UC-SB-P50-AM-WF KIT is compatible with [AirMedia Series 3 Connect Adaptors](#). Simply plug the adaptor into a personal device's USB-C® port to connect to the UC-SB-P50-AM-WF KIT. The adaptor communicates wirelessly with the system using built-in Wi-Fi network capabilities to display content up to a 4K30 resolution. Use the LED-backlit capacitive touch buttons to start, stop, or pause the presentation at any time. Connect up to eight adaptors to a single receiver to maximize the space's collaboration abilities.

Getting Started

Refer to the following instructions to quickly configure common features and functionality. Before proceeding with the configuration, ensure all devices are mounted and connected. Refer to [Installation on page 78](#) for more details.

Wireless Conferencing and Flex Mode

AirMedia systems with the Connect Adaptor AM-TX3-100 can pair with Crestron Flex systems to enable wireless BYOD support for Microsoft Teams Rooms or Zoom Rooms system. This allows users to maintain the native Teams or Zoom experience while using the Connect Adaptor for meetings on other platforms.

The AirMedia Connect Adaptor facilitates presentations from the user's laptop to the room display and provides access to in-room peripherals (camera and microphone) for joining calls or meetings from their laptop.

Minimum requirements

- A supported Crestron Flex systems:
 - UC-B70-A-T: Crestron Flex Large Room Conference Solution with All-In-One Videobar 70 for Microsoft Teams® Rooms
 - UC-BX30-T / UC-BX30-Z: Crestron Flex Advanced Small Room Conference System with Video Soundbar
 - UC-BX31-T / UC-BX31-Z: Crestron Flex Advanced Small Room Conference System with Jabra® PanaCast® 50 Video Bar
 - UC-CX100-T / UC-CX100-Z: Crestron Flex Advanced Video Conference System Integrator Kit

NOTE: With C-series Crestron Flex solutions, use a conferencing peripheral that is supported with AirMedia Conferencing. For more information, see [AirMedia® Wireless Conferencing: Supported Peripherals](#).

- AM-3100-WF(-I) or AM-3200-WF(-I): AirMedia Series 3 Receiver
- AM-TX3-100(-I): AirMedia Connect Adapter

NOTE: The AM-TX3-100 and AM-TX3-100-I are functionally similar. Unless otherwise noted, they are referred to as the "AM-TX3-100" for simplicity within this document.

- AM-TX3-200: AirMedia Series 3 Connect Endpoint

- Minimum supported firmware versions:
 - AirMedia Series 3 Receiver: 3.0600 or later
 - AM-TX3-100: 1.0.1.160 or later
 - AM-TX3-200: 2.0.1.1 or later
 - Videobar 70: 1.240912.1415 or later
 - UC-Engine: 1.18.00.126 or later

NOTES:

- The MX series solutions are not recommended for this integration, as Mercury X devices do not display Host or Present options. When the Connect Adaptor connects, the system will automatically start BYOD.
- The MMX series solutions are not recommended for this integration due to timing issues that delay the availability of audio and camera devices for BYOD.


Connections

Connect the HDMI output on the AirMedia receiver to the HDMI input on the UC-PR (for Windows Crestron Flex Kits) or the Videobar 70. Then, connect the USB 2.0 Type-A port on the AirMedia receiver to the USB-C port on either the UC-PR or Videobar 70.


NOTES:

- Ensure the AirMedia receiver is powered using either DC power or PoE+.
- Refer to the [Crestron Flex Product Manual](#) for remaining connections of the deployed Crestron Flex room solution.


UC-B70-A-T(-I) with AM-3200-WF(-I)

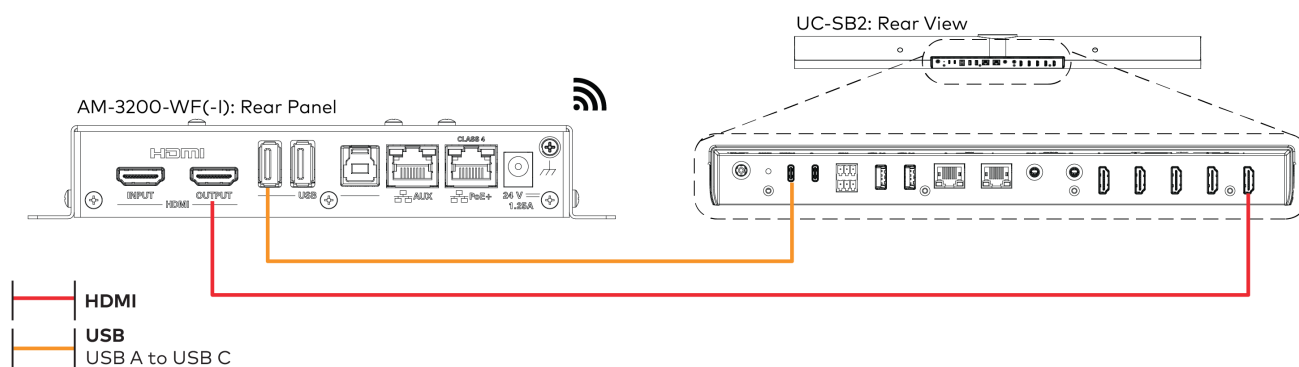


UC-B70-A-T(-I) with AM-3100-WF(-I)

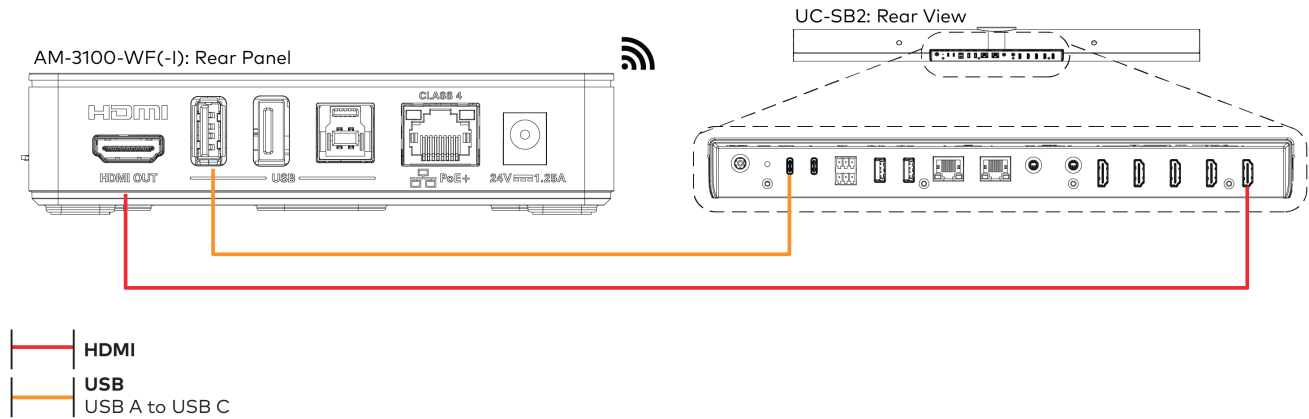

UC-BX/CX Series with AM-3200-WF(-I)

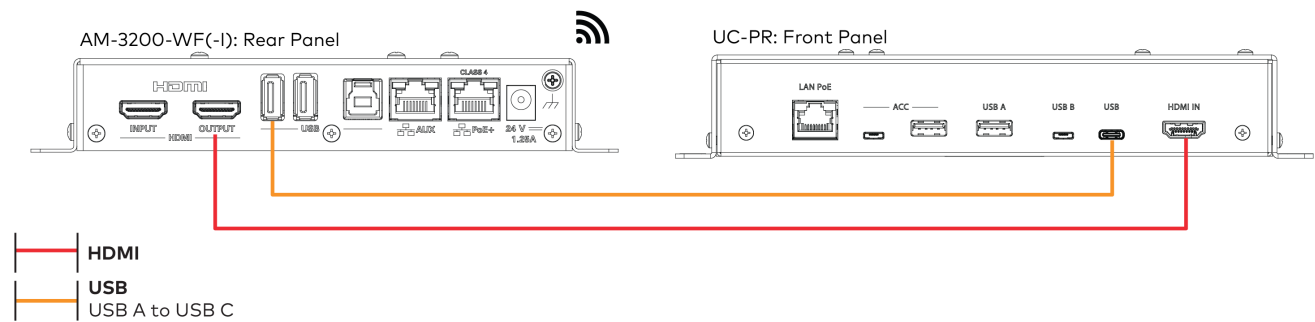

UC-BX/CX Series with AM-3100-WF(-I)

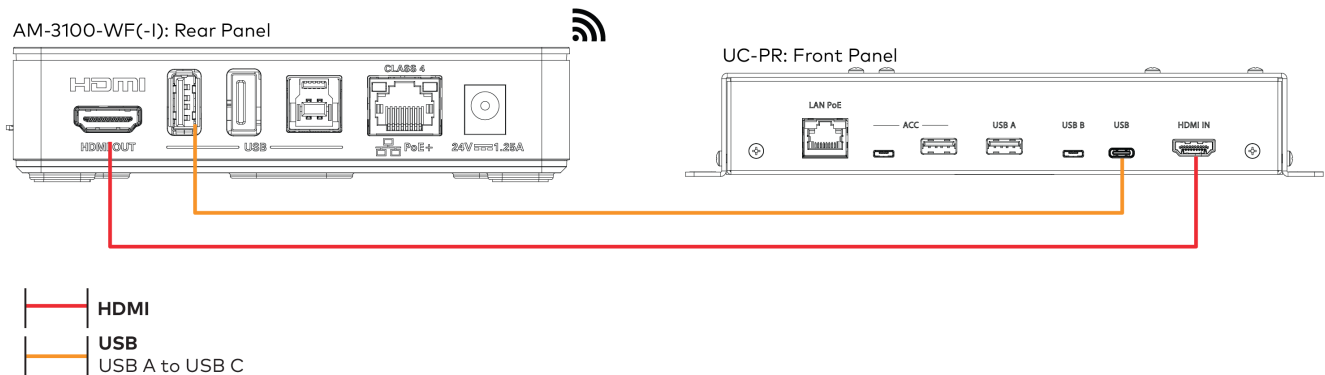


Configuration

To enable the wireless configuration functionality, log in to the web configuration interface and apply the following settings:


- Go to **Settings > Wireless Conferencing** and enable **Wireless Conferencing** using the toggle button. Refer to [Wireless Conferencing on page 168](#) for more details.

AirMedia Screen - Wireless Conferencing

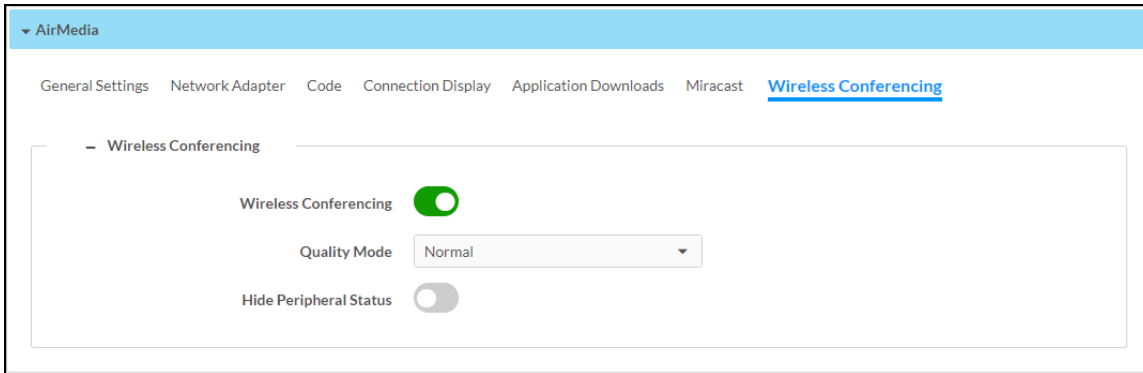

- Go to **Settings > Audio-Video**. Select the + (plus) icon next to **Outputs** to display the HDMI output settings, then make the following changes:

Settings Tab - Audio-Video (Outputs)

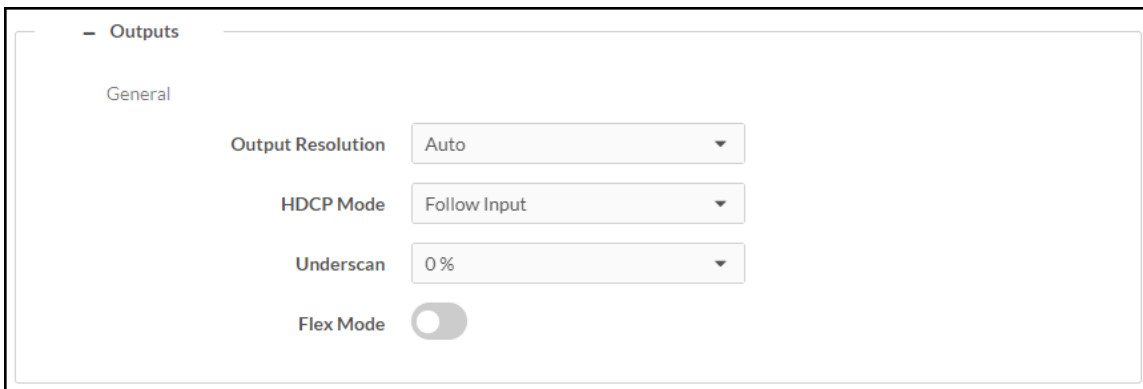

- Set the **Output Resolution** to **1920x1080@60**.
- Set the **HDCP Mode** to **Never**.
- Enable **Flex Mode** using the toggle button.

Refer to [Audio-Video on page 145](#) for more details.

- Go to **Settings > AirMedia > Connect Devices**. Pair the Connect Adaptor with the AirMedia receiver, then set the **Connect Behavior** to **Auto-Present and Auto-Conference**. Refer to [AirMedia on page 155](#) for more details.

AirMedia Screen - Connect Devices

	Nickname	Model Number	Status	State	Serial Number	MAC Address	Firmware Version	Signal	Actions
<input type="checkbox"/>	AirMedia TX3-c4426817a81e	AM-TX3-200	Online	✓	2233CSP00050	c4:42:68:17:a8:1e	1.2.1.175		

- Optionally, go to **Settings > System Setup > General Settings**. In the **System Mode** drop-down list, select **Optimized for Multiple Presentations**. Refer to [System Setup on page 121](#) for more details.

System Setup – General Settings

Operation

When the Connect Adapter is connected to a laptop, the presentation starts, and the touch panel displays a prompt that allows the user to:

- Host a meeting from their laptop, making the in-room camera, microphone, and speakers to be available for a BYOD call.
- Present from their laptop, either locally in the room or into a native call with the room system.

Specifications

Refer to the following sections for more information on the specifications for various Series 3 AirMedia devices and bundles.

- [AM-3000-WF\(-I\) Specifications on page 41](#)
- [AM-3100-WF\(-I\) Specifications on page 45](#)
- [AM-3200 Specifications on page 51](#)
- [AM-3200-WF\(-I\) Specifications on page 57](#)
- [AM-3200-GV Specifications on page 64](#)
- [AM-TX3-100 Specifications on page 69](#)
- [AM-TX3-200 Specifications on page 72](#)
- [UC-SB-P50-AM-WF\(-I\) KIT Specifications on page 77](#)

AM-3000-WF(-I) Specifications

Product specifications for the AM-3000-WF(-I) are provided below.

Specifications

Communications

Ethernet	100/1000 Mbps, auto-switching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS2, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1x, Active Directory authentication, HTTPS web browser setup and XiO Cloud service, 802.3af compliant
AirMedia	Via Ethernet: IPv4, mDNS, TLS, AES1; Via wireless access point: IEEE 802.11/b/g/n/ac/ax, 2.4 GHz or 5 GHz
USB Device	USB 3.0 for computer console (Toolbox setup and firmware update)
HDMI Output	HDCP 2.2, EDID, CEC; Supports management of HDCP and EDID

AirMedia Software¹

OS Support	Apple® iOS®, Android™, Windows 10, Windows 11, macOS®, Chrome OS™
Video Frame Rate	Up to 30 fps, audio supported
Output Resolutions	640x480@60Hz, 800x600@60Hz, 1024x768@60Hz, 1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, 1366x768@60Hz, 1440x900@60Hz, 1600x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60)

NOTE: All video inputs will be scaled to the selected HDMI output resolution.

Bitrate Peak	0.25 to 8.5 Mbps, variable depending on content complexity
Bitrate Average	1.4 Mbps typical

NOTES:

- The bitrate for Apple native mirroring may deviate from above depending on the OS version and content.
- The AirMedia Extension for the Google Chrome browser relies on web technologies for screen sharing that are built-in to the web browser. Performance variations with motion video (quality and frame rate) may occur based upon the encoding capabilities of the Chrome OS device and the nature of the content being displayed (i.e., high-motion video).

Audio Format	Stereo
--------------	--------

Video

Input Signal Types	AirMedia; Simultaneous display of up to four sources with AirMedia Canvas
--------------------	--

Maximum Input Resolutions	AirMedia presentation: 1920x1080@30Hz (1080p30); AirMedia Connect Adapter: 3840x2160@30Hz (4K30)
	NOTE: All video inputs will be scaled to the selected HDMI output resolution.
Output Signal Types	HDMI (DVI compatible ³)
HDMI Output Resolutions	1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, 1366x768@60Hz, 1440x900@60Hz, 1600x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60), 3840x2160@30Hz (2160p30), 3840x2160@50Hz (2160p50), 3840x2160@60Hz (2160p60)
	NOTE: All video inputs will be scaled to the selected HDMI output resolution.
Background & Logo File Support	JPEG, PNG

Audio

Input Signal Types	AirMedia
Output Signal Type	HDMI
Input/Output Format	2 channel LPCM

NOTE: Audio input signals are passed to the output without any processing. Volume control capability requires a display device with discrete volume, up, down, and mute commands available via CEC, IP, IR, or RS-232.

Connectors

microSD	For caching digital signage content
HDMI OUTPUT	(1) HDMI Type A connector; HDMI digital video/audio output (DVI compatible ³)
USB	(2) USB Type A connectors; (1) USB Type B connector; USB 3.0 device port for computer console
LAN PoE+	(1) 8-pin RJ-45 connector; 100Base-TX/1000Base-T Ethernet port and PoE+ Class 4
24VDC 1.25A	(1) 2.1 x 5.5 mm DC power connector; 24VDC power input; PW-2412WU power pack sold separately

Controls and Indicators

PWR	(1) White LED, indicates operating power supplied via the local power pack or PoE+
RESET	(1) Recessed push button for hardware reset
SETUP	(1) Recessed push button for onscreen IP address display and for pairing the device to an AM-TX3-100; (1) White LED, indicates pairing status
ONLINE	(1) White LED, indicates control system connection

HDMI OUT	(1) White LED, indicates HDMI signal presence at the HDMI output
microSD	(1) microSD slot
LAN PoE+	(2) LEDs, green LED indicates Ethernet link status, amber LED indicates Ethernet activity

Power

Power over Ethernet	IEEE 802.3af Class 4 Powered Device
Power Pack (sold separately)	Input: 100-240VAC, 50/60 Hz; Output: 1.25A @ 24VDC; Model: PW-2412WU
Power Consumption	13.5 W (typical)

Environmental

Temperature	32° to 104°F (-0° to 40° C)
Humidity	10% to 90% RH (non-condensing)
Heat Dissipation	46.0 BTU/hr

Construction

Chassis	Plastic, black finish, with (4) integrated mounting holes, vented sides
Mounting	Freestanding, surface mount

Dimensions

Height	1.21 in. (31 mm)
Width	5 in. (127 mm)
Depth	5 in. (127 mm)

Weight

11.64 oz (330 g)

Compliance


Regulatory Model: M202018001

Intertek® Listed for US & Canada, CE, IC, FCC Part 15 Class B digital device

Notes:

1. AirMedia wireless presentation requires a wired network connection between the AirMedia receiver and an external Wi-Fi wireless access point (not included). Laptops may alternately connect to AirMedia using a wired Ethernet connection. Full-motion video performance is dependent upon the performance of the network and the sending device. Computer client software and mobile device apps are available for download at www.crestron.com/airmedia.
2. TLS 1.3 is currently not supported.
3. Using an appropriate adapter or interface cable, the HDMI output can provide a DVI signal. CBL-HD-DVI interface cables are available separately.
4. With or without reduced blanking.

Dimension Drawings

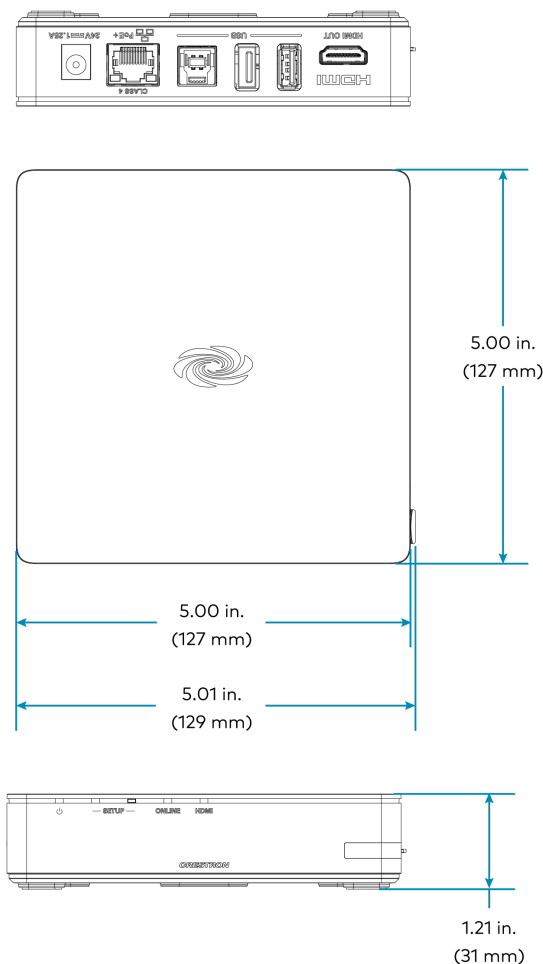

AM-3100-WF(-I) Specifications

Product specifications for the AM-3100-WF(-I) are provided below.

Specifications

Communications

Ethernet	100/1000 Mbps, auto-switching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS ³ , SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1x, Active Directory authentication, HTTPS web browser setup and XiO Cloud service, 802.3af compliant
Wi-Fi	Dual-band 802.11a/b/g/n/ac/ax (2.4 GHz & 5 GHz); Up to 70 ft (23 m) range at 80 Mbps, subject to site-specific conditions
Bluetooth® Communications	Bluetooth version 5.0
AirMedia	Via Ethernet: IPv4, mDNS, TLS, AES ¹ ; Via wireless access point: IEEE 802.11/b/g/n/ac/ax, 2.4 GHz or 5 GHz
USB Host	USB 2.0 for connecting a USB conferencing peripheral; USB 3.0 for connecting a USB conferencing peripheral
USB Device	USB 3.0 for computer console (Toolbox setup and firmware update)
HDMI Output	HDCP 2.2, EDID, CEC; Supports management of HDCP and EDID

AirMedia Software¹

OS Support	Apple® iOS®, Android™, Windows 10, Windows 11, macOS®, Chrome OS™
Video Frame Rate	Up to 30 fps, audio supported
Output Resolutions	640x480@60Hz, 800x600@60Hz, 1024x768@60Hz, 1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, 1366x768@60Hz, 1440x900@60Hz, 1600x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60)
NOTE: All video inputs will be scaled to the selected HDMI output resolution.	
Bitrate Peak	0.25 to 8.5 Mbps, variable depending on content complexity
Bitrate Average	1.4 Mbps typical
NOTES: <ul style="list-style-type: none">• The bitrate for Apple native mirroring may deviate from above depending on the OS version and content.• The AirMedia Extension for the Google Chrome browser relies on web technologies for screen sharing that are built-in to the web browser. Performance variations with motion video (quality and frame rate) may occur based upon the encoding capabilities of the Chrome OS device and the nature of the content being displayed (i.e., high-motion video).	

Audio Format Stereo

Wireless Conferencing

OS Support (AirMedia Application)	Windows 10, Windows 11
OS Support (AirMedia Connect Adaptor)	Windows 10, Windows 11, macOS 11 or later
Supported Conferencing Services	Microsoft Teams software; Zoom software
Supported Conferencing Peripherals	For a list of supported conferencing peripherals, refer to OLH Answer ID 1001764 .

Video

Input Signal Types	AirMedia; Simultaneous display of up to four sources with AirMedia Canvas
Maximum Input Resolutions	AirMedia presentation: 1920x1080@30Hz (1080p30); AirMedia Connect Adapter: 3840x2160@30Hz (4K30) NOTE: All video inputs will be scaled to the selected HDMI output resolution.
Output Signal Types	HDMI (DVI compatible ⁴)
HDMI Output Resolutions	1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, ⁵ 1366x768@60Hz, 51440x900@60Hz, 51600x900@60Hz, 51600x1200@60Hz, 1680x1050@60Hz, 51920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60), 3840x2160@30Hz (2160p30), 3840x2160@50Hz (2160p50), 3840x2160@60Hz (2160p60) NOTE: All video inputs will be scaled to the selected HDMI output resolution.
Background & Logo File Support	JPEG, PNG

Audio

Input Signal Types	AirMedia
Output Signal Type	HDMI
Input/Output Format	2 channel LPCM

NOTE: Audio input signals are passed to the output without any processing. Volume control capability requires a display device with discrete volume, up, down, and mute commands available via CEC, IP, IR, or RS-232.

Connectors

microSD	For caching digital signage content
HDMI OUTPUT	(1) HDMI Type A connector; HDMI digital video/audio output (DVI compatible ⁴)

USB	(2) USB Type A connectors; USB 2.0 host port for USB conferencing peripheral; USB 3.0 host port for USB conferencing peripheral; (1) USB Type B connector; USB 3.0 device port for computer console
LAN PoE+	(1) 8-pin RJ-45 connector; 100Base-TX/1000Base-T Ethernet port and PoE+ Class 4
24VDC 1.25A	(1) 2.1 x 5.5 mm DC power connector; 24VDC power input; PW-2412WU power pack sold separately

Controls and Indicators

PWR	(1) White LED, indicates operating power supplied via the local power pack or PoE+
RESET	(1) Recessed push button for hardware reset
SETUP	(1) Recessed push button for onscreen IP address display and for pairing the device to an AM-TX3-100; (1) White LED, indicates pairing status
ONLINE	(1) White LED, indicates control system connection
HDMI OUT	(1) White LED, indicates HDMI signal presence at the HDMI output
microSD	(1) microSD slot
LAN PoE+	(2) LEDs, green LED indicates Ethernet link status, amber LED indicates Ethernet activity

Power

Power over Ethernet	IEEE 802.3af Class 4 Powered Device
Power Pack (sold separately)	Input: 100-240VAC, 50/60 Hz; Output: 1.25A @ 24VDC; Model: PW-2412WU
Power Consumption	13.5 W (typical)

NOTE: When wireless conferencing is used, the receiver must be powered by either Power over Ethernet+ (PoE+) or a power pack (sold separately).

Environmental

Temperature	32° to 104°F (-0° to 40° C)
Humidity	10% to 90% RH (non-condensing)
Heat Dissipation	46.0 BTU/hr

Construction

Chassis	Plastic, black finish, with (4) integrated mounting holes, vented sides
Mounting	Freestanding, surface mount

Dimensions

Height	1.21 in. (31 mm)
--------	------------------

Width 5 in. (127 mm)

Depth 5 in. (127 mm)

Weight

11.64 oz (330 g)

Compliance


Regulatory Model: M202018001

Intertek® Listed for US & Canada, CE, IC, FCC Part 15 Class B digital device

Notes:

1. AirMedia wireless presentation requires a wired network connection between the AirMedia receiver and an external Wi-Fi wireless access point (not included). Laptops may alternately connect to AirMedia using a wired Ethernet connection. Full-motion video performance is dependent upon the performance of the network and the sending device. Computer client software and mobile device apps are available for download at www.crestron.com/airmedia.
2. Crestron supports most mainstream devices and applications. For a list of supported conferencing peripherals, refer to [OLH Answer ID 1001764](#).
3. TLS 1.3 is currently not supported.
4. Using an appropriate adapter or interface cable, the HDMI output can provide a DVI signal. CBL-HD-DVI interface cables are available separately.
5. With or without reduced blanking.

Dimension Drawings

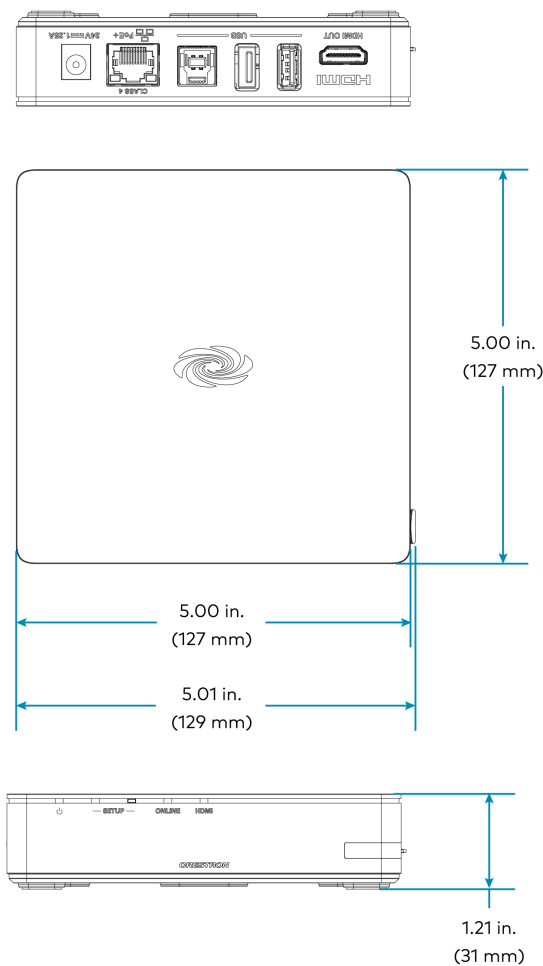

AM-3200 Specifications

Product specifications for the AM-3200 are provided below.

Specifications

Communications

Ethernet	100/1000 Mbps, auto-switching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS ⁵ , SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1x, Active Directory authentication, HTTPS web browser setup and XiO Cloud service, 802.3af compliant
AirMedia	Via Ethernet: IPv4, mDNS, TLS, AES ¹
USB Host	USB 2.0 for connecting a USB conferencing peripheral; USB 3.0 for connecting a USB conferencing peripheral
USB Device	USB 3.0 for computer console (Toolbox setup and firmware update)
RS-232	2-way display device control up to 115.2k baud with hardware and software handshaking
IR/Serial	1-way display device control via infrared up to 1.1 MHz or serial TTL/RS-232 (0-5V) up to 19.2k baud
HDMI Input	HDCP 1.4, EDID; Supports management of HDCP and EDID
HDMI Output	HDCP 2.2, EDID, CEC; Supports management of HDCP and EDID

AirMedia Software¹

OS Support	Apple® iOS®, Android™, Windows 10, Windows 11, macOS®, Chrome OS™
Video Frame Rate	Up to 30 fps, audio supported
Output Resolutions	640x480@60Hz, 800x600@60Hz, 1024x768@60Hz, 1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, 1366x768@60Hz, 1440x900@60Hz, 1600x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60)

NOTE: All video inputs will be scaled to the selected HDMI output resolution.

Bitrate Peak	0.25 to 8.5 Mbps, variable depending on content complexity
--------------	--

Bitrate Average 1.4 Mbps typical

NOTES:

- The bitrate for Apple native mirroring may deviate from above depending on the OS version and content.
- The AirMedia Extension for the Google Chrome browser relies on web technologies for screen sharing that are built-in to the web browser. Performance variations with motion video (quality and frame rate) may occur based upon the encoding capabilities of the Chrome OS device and the nature of the content being displayed (i.e., high-motion video).

Audio Format Stereo

Wireless Conferencing

OS Support (AirMedia Application)	Windows 10, Windows 11
OS Support (AirMedia Connect Adaptor)	Windows 10, Windows 11, macOS 11 or later
Supported Conferencing Services	Microsoft Teams software; Zoom software
Supported Conferencing Peripherals	For a list of supported conferencing peripherals, refer to OLH Answer ID 1001764 .

Video

Input Signal Types	AirMedia, HDMI (DVI & Dual-Mode DisplayPort™ compatible2); Simultaneous display of up to four sources with AirMedia Canvas
Maximum Input Resolutions	HDMI Input: 1920x1080@60Hz (HD 1080p60); AirMedia presentation: 1920x1080@30Hz (1080p30) NOTES: <ul style="list-style-type: none">• Other input resolutions are supported at pixel clock rates up to 148 MHz; interlaced video is not supported.• All video inputs will be scaled to the selected HDMI output resolution.
Output Signal Types	HDMI (DVI compatible2)
HDMI Output Resolutions	1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, 6 1366x768@60Hz, 1440x900@60Hz, 1600x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60), 3840x2160@30Hz (2160p30), 3840x2160@50Hz (2160p50), 3840x2160@60Hz (2160p60) NOTE: All video inputs will be scaled to the selected HDMI output resolution.
Background & Logo File Support	JPEG, PNG

Audio

Input Signal Types	AirMedia, HDMI (Dual-Mode DisplayPort™ compatible ²)
Output Signal Type	HDMI
Input/Output Format	2 channel LPCM

NOTE: Audio input signals are passed to the output without any processing. Volume control capability requires a display device with discrete volume, up, down, and mute commands available via CEC, IP, IR, or RS-232.

Connectors

IR	(1) 2-pin 3.5 mm detachable terminal block; IR/Serial output port for display device control; IR output up to 1.1 MHz; 1-way serial TTL/RS-232 (0-5V) up to 19200 baud
COM	(1) 5-pin 3.5 mm detachable terminal block; Bidirectional RS-232 port for display device control; Up to 115.2k baud, hardware and software handshaking support
AUDIO OUT	(1) 5-pin 3.5 mm detachable terminal block; Balanced/unbalanced stereo line-level audio output; Maximum Output Level: 4 Vrms balanced, 2 Vrms unbalanced; Output Impedance: 200 ohms balanced, 100 ohms unbalanced
microSD	For caching digital signage content
HDMI INPUT	(1) HDMI Type A connector; HDMI digital video/audio input; (DVI & Dual-Mode DisplayPort compatible ²)
HDMI OUTPUT	(1) HDMI Type A connector; HDMI digital video/audio output (DVI compatible ²)
USB	(2) USB Type A connectors; USB 2.0 host port for USB conferencing peripheral; USB 3.0 host port for USB conferencing peripheral; (1) USB Type B connector; USB 3.0 device port for computer console
LAN PoE+	(1) 8-pin RJ-45 connector; 100Base-TX/1000Base-T Ethernet port and PoE+ Class 4
LAN AUX	(1) 8-pin RJ-45 connector; 100Base-TX/1000Base-T Ethernet port; Connects to a secondary, guest-only network
24VDC 1.25A	(1) 2.1 x 5.5 mm DC power connector; 24VDC power input; PW-2412WU power pack sold separately

Controls and Indicators

PWR	(1) Green LED, indicates operating power supplied via the local power pack or PoE+
RESET	(1) Recessed push button for hardware reset
SETUP	(1) Green LED and (1) recessed push button for onscreen IP address display
ONLINE	(1) Green LED, indicates control system connection
HDMI IN/OUT	(2) Green LEDs, indicate HDMI signal presence at the HDMI input/output

microSD	(1) microSD slot
LAN PoE+	(2) LEDs, green LED indicates Ethernet link status, amber LED indicates Ethernet activity
LAN AUX	(2) LEDs, green LED indicates Ethernet link status, amber LED indicates Ethernet activity

Power

Power over Ethernet	IEEE 802.3af Class 4 Powered Device
Power Pack (sold separately)	Input: 100-240VAC, 50/60 Hz; Output: 1.25A @ 24VDC; Model: PW-2412WU
Power Consumption	14 W (typical)

NOTE: When wireless conferencing is used, the receiver must be powered by either Power over Ethernet+ (PoE+) or a power pack (sold separately).

Environmental

Temperature	32° to 104°F (-0° to 40° C)
Humidity	10% to 90% RH (non-condensing)
Heat Dissipation	47.8 BTU/hr

Construction

Chassis	Metal, black finish, with (2) integral mounting flanges, vented sides
Mounting	Freestanding, surface mount, or attach to a single rack rail

Dimensions

Height	1.26 in. (33 mm)
Width	7.40 in. (188 mm)
Depth	6.54 in. (166 mm)

Weight

1.9 lb (0.86 kg)

Compliance

Regulatory Model: M202018001


Intertek® Listed for US & Canada, CE, IC, FCC Part 15 Class B digital device

Notes:

1. AirMedia wireless presentation requires a wired network connection between the AirMedia receiver and an external Wi-Fi wireless access point (not included). Laptops may alternately connect to AirMedia using a wired Ethernet connection. Full-motion video performance is dependent upon the performance of the network and the sending device. Computer client software and mobile device apps are available for download at www.crestron.com/airmedia.
2. Using an appropriate adapter or interface cable, the HDMI input can support DVI and Dual-Mode DisplayPort sources, and the HDMI output can provide a DVI signal. CBL-HD-DVI interface cables are available separately.

3. When the AirMedia Canvas feature is enabled, the 4:2:0 color space is used for high definition sources connected to the HDMI input port. When the AirMedia Canvas feature is disabled, the 4:4:4 color space is used. If the 4:4:4 color space is required by sources connected to the HDMI input port, the AirMedia Canvas feature should be disabled.
4. Crestron supports most mainstream devices and applications. For a list of supported conferencing peripherals, refer to [OLH Answer ID 1001764](#).
5. TLS 1.3 is currently not supported.
6. With or without reduced blanking.

Dimension Drawings

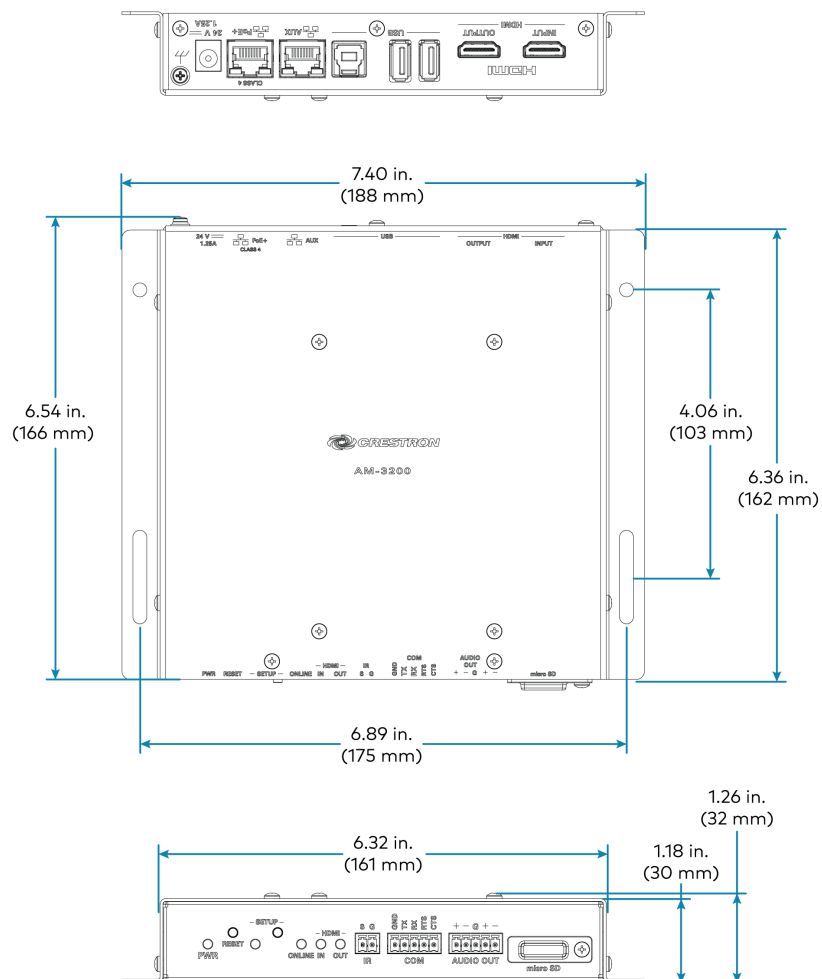

AM-3200-WF(-I) Specifications

Product specifications for the AM-3200-WF(-I) are provided below.

Specifications

Communications

Ethernet	100/1000 Mbps, auto-switching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS ⁵ , SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1x, Active Directory authentication, HTTPS web browser setup and XiO Cloud service, 802.3af compliant
Wi-Fi	Dual-band 802.11a/b/g/n/ac/ax (2.4 GHz & 5 GHz); Up to 70 ft (23 m) range at 80 Mbps, subject to site-specific conditions
Bluetooth®	Bluetooth version 5.0
Communications	
AirMedia	Via Ethernet: IPv4, mDNS, TLS, AES ¹ ; Via wireless access point: IEEE 802.11/b/g/n/ac/ax, 2.4 GHz or 5 GHz
USB Host	USB 2.0 for connecting a USB conferencing peripheral; USB 3.0 for connecting a USB conferencing peripheral
USB Device	USB 3.0 for computer console (Toolbox setup and firmware update)
RS-232	2-way display device control up to 115.2k baud with hardware and software handshaking
IR/Serial	1-way display device control via infrared up to 1.1 MHz or serial TTL/RS-232 (0-5V) up to 19.2k baud
HDMI Input	HDCP 1.4, EDID; Supports management of HDCP and EDID
HDMI Output	HDCP 2.2, EDID, CEC; Supports management of HDCP and EDID

AirMedia Software¹

OS Support	Apple® iOS®, Android™, Windows 10, Windows 11, macOS®, Chrome OS™
Video Frame Rate	Up to 30 fps, audio supported
Output Resolutions	640x480@60Hz, 800x600@60Hz, 1024x768@60Hz, 1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, 1366x768@60Hz, 1440x900@60Hz, 1600x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60)
	NOTE: All video inputs will be scaled to the selected HDMI output resolution.
Bitrate Peak	0.25 to 8.5 Mbps, variable depending on content complexity

Bitrate Average 1.4 Mbps typical

NOTES:

- The bitrate for Apple native mirroring may deviate from above depending on the OS version and content.
- The AirMedia Extension for the Google Chrome browser relies on web technologies for screen sharing that are built-in to the web browser. Performance variations with motion video (quality and frame rate) may occur based upon the encoding capabilities of the Chrome OS device and the nature of the content being displayed (i.e., high-motion video).

Audio Format Stereo

Wireless Conferencing

OS Support (AirMedia Application)	Windows 10, Windows 11
OS Support (AirMedia Connect Adaptor)	Windows 10, Windows 11, macOS 11 or later
Supported Conferencing Services	Microsoft Teams software; Zoom software
Supported Conferencing Peripherals	For a list of supported conferencing peripherals, refer to OLH Answer ID 1001764 .

Video

Input Signal Types	AirMedia, HDMI (DVI & Dual-Mode DisplayPort™ compatible2); Simultaneous display of up to four sources with AirMedia Canvas
Maximum Input Resolutions	HDMI Input: 1920x1080@60Hz (HD 1080p60); AirMedia presentation: 1920x1080@30Hz (1080p30); AirMedia Connect Adapter: 3840x2160@30Hz (4K30)

NOTES:

- Other input resolutions are supported at pixel clock rates up to 148 MHz; interlaced video is not supported.
- All video inputs will be scaled to the selected HDMI output resolution.

Output Signal Types	HDMI (DVI compatible2)
HDMI Output Resolutions	1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, 1366x768@60Hz, 1440x900@60Hz, 1600x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60), 3840x2160@30Hz (2160p30), 3840x2160@50Hz (2160p50), 3840x2160@60Hz (2160p60)

NOTE: All video inputs will be scaled to the selected HDMI output resolution.

Background & Logo File Support JPEG, PNG

Audio

Input Signal Types	AirMedia, HDMI (Dual-Mode DisplayPort™ compatible ²)
Output Signal Type	HDMI
Input/Output Format	2 channel LPCM

NOTE: Audio input signals are passed to the output without any processing. Volume control capability requires a display device with discrete volume, up, down, and mute commands available via CEC, IP, IR, or RS-232.

Connectors

ANT-A & ANT-B	(2) SMA connectors for external Wi-Fi antennas; Wi-Fi antennas included with 6.56 ft (2 m) cables
IR	(1) 2-pin 3.5 mm detachable terminal block; IR/Serial output port for display device control; IR output up to 1.1 MHz; 1-way serial TTL/RS-232 (0-5V) up to 19200 baud
COM	(1) 5-pin 3.5 mm detachable terminal block; Bidirectional RS-232 port for display device control; Up to 115.2k baud, hardware and software handshaking support
AUDIO OUT	(1) 5-pin 3.5 mm detachable terminal block; Balanced/unbalanced stereo line-level audio output; Maximum Output Level: 4 Vrms balanced, 2 Vrms unbalanced; Output Impedance: 200 ohms balanced, 100 ohms unbalanced
microSD	For caching digital signage content
HDMI INPUT	(1) HDMI Type A connector; HDMI digital video/audio input; (DVI & Dual-Mode DisplayPort compatible ²)
HDMI OUTPUT	(1) HDMI Type A connector; HDMI digital video/audio output (DVI compatible ²)
USB	(2) USB Type A connectors; USB 2.0 host port for USB conferencing peripheral; USB 3.0 host port for USB conferencing peripheral; (1) USB Type B connector; USB 3.0 device port for computer console
LAN PoE+	(1) 8-pin RJ-45 connector; 100Base-TX/1000Base-T Ethernet port and PoE+ Class 4
LAN AUX	(1) 8-pin RJ-45 connector; 100Base-TX/1000Base-T Ethernet port; Connects to a secondary, guest-only network
24VDC 1.25A	(1) 2.1 x 5.5 mm DC power connector; 24VDC power input; PW-2412WU power pack sold separately

Controls and Indicators

PWR	(1) Green LED, indicates operating power supplied via the local power pack or PoE+
RESET	(1) Recessed push button for hardware reset
SETUP	(1) Recessed push button for onscreen IP address display and for pairing the device to an AM-TX3-100; (1) Red/White LED, indicates pairing status
ONLINE	(1) Green LED, indicates control system connection
HDMI IN/OUT	(2) Green LEDs, indicate HDMI signal presence at the HDMI input/output
microSD	(1) microSD slot
LAN PoE+	(2) LEDs, green LED indicates Ethernet link status, amber LED indicates Ethernet activity
LAN AUX	(2) LEDs, green LED indicates Ethernet link status, amber LED indicates Ethernet activity

Power

Power over Ethernet	IEEE 802.3af Class 4 Powered Device
Power Pack (sold separately)	Input: 100-240VAC, 50/60 Hz; Output: 1.25A @ 24VDC; Model: PW-2412WU
Power Consumption	14 W (typical)

NOTE: When wireless conferencing is used, the receiver must be powered by either Power over Ethernet+ (PoE+) or a power pack (sold separately).

Environmental

Temperature	32° to 104°F (-0° to 40° C)
Humidity	10% to 90% RH (non-condensing)
Heat Dissipation	47.8 BTU/hr

Construction

Chassis	Metal, black finish, with (2) integral mounting flanges, vented sides
Mounting	Freestanding, surface mount, or attach to a single rack rail

Dimensions

Height	1.26 in. (33 mm)
Width	7.40 in. (188 mm)
Depth	6.93 in. (177 mm)

Weight

1.9 lb (0.86 kg)

Compliance


Regulatory Model: M202018001

Intertek® Listed for US & Canada, CE, IC, FCC Part 15 Class B digital device

Notes:

1. AirMedia wireless presentation requires a wired network connection between the AirMedia receiver and an external Wi-Fi wireless access point (not included). Laptops may alternately connect to AirMedia using a wired Ethernet connection. Full-motion video performance is dependent upon the performance of the network and the sending device. Computer client software and mobile device apps are available for download at www.crestron.com/airmedia.
2. Using an appropriate adapter or interface cable, the HDMI input can support DVI and Dual-Mode DisplayPort sources, and the HDMI output can provide a DVI signal. CBL-HD-DVI interface cables are available separately.
3. When the AirMedia Canvas feature is enabled, the 4:2:0 color space is used for high definition sources connected to the HDMI input port. When the AirMedia Canvas feature is disabled, the 4:4:4 color space is used. If the 4:4:4 color space is required by sources connected to the HDMI input port, the AirMedia Canvas feature should be disabled.
4. Crestron supports most mainstream devices and applications. For a list of supported conferencing peripherals, refer to [OLH Answer ID 1001764](#).
5. TLS 1.3 is currently not supported.
6. With or without reduced blanking.

Dimension Drawings

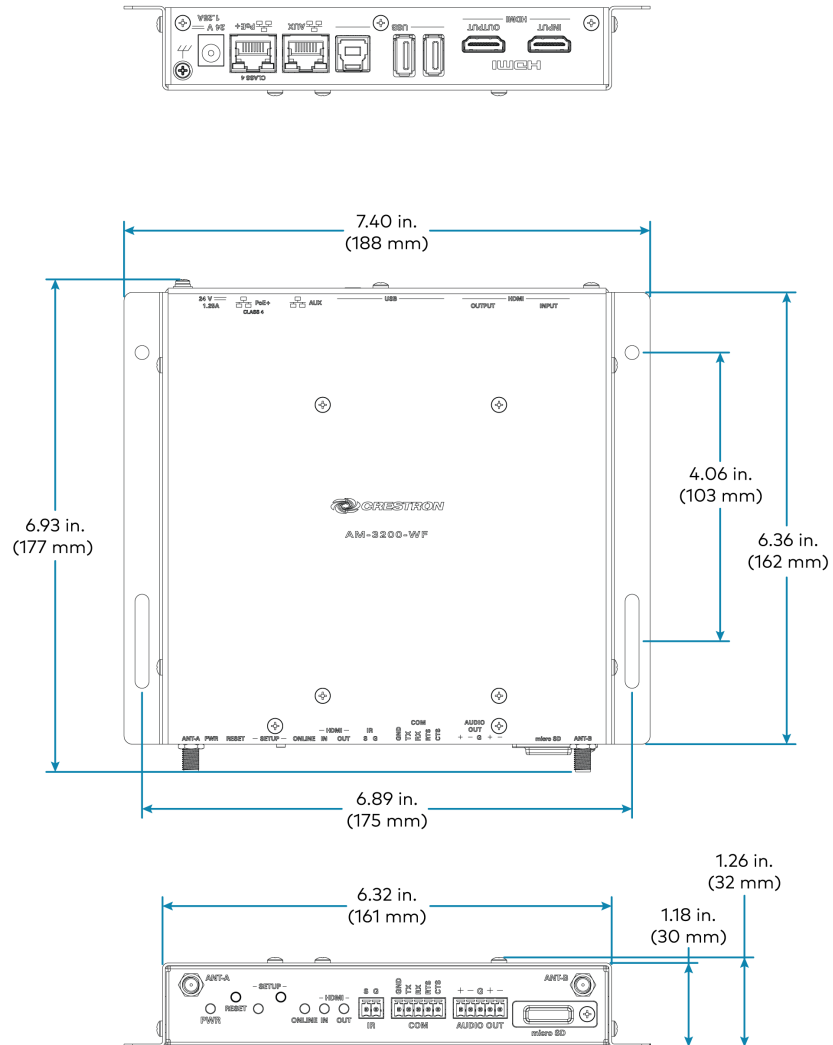

AM-3200-GV Specifications

Product specifications for the AM-3200-GV are provided below.

Communications

Ethernet	100/1000 Mbps, auto-switching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS ⁵ , SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1x, Active Directory authentication, HTTPS web browser setup and XiO Cloud service, 802.3af compliant
AirMedia	Via Ethernet: IPv4, mDNS, TLS, AES ¹
USB Host	USB 2.0 for connecting a USB conferencing peripheral; USB 3.0 for connecting a USB conferencing peripheral
USB Device	USB 3.0 for computer console (Toolbox setup and firmware update)
RS-232	2-way display device control up to 115.2k baud with hardware and software handshaking
IR/Serial	1-way display device control via infrared up to 1.1 MHz or serial TTL/RS-232 (0-5V) up to 19.2k baud
HDMI Input	HDCP 1.4, EDID; Supports management of HDCP and EDID
HDMI Output	HDCP 2.2, EDID, CEC; Supports management of HDCP and EDID

AirMedia Software¹

OS Support	Apple® iOS®, Android™, Windows 10, Windows 11, macOS®, Chrome OS™
Video Frame Rate	Up to 30 fps, audio supported
Output Resolutions	640x480@60Hz, 800x600@60Hz, 1024x768@60Hz, 1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, 1366x768@60Hz, 1440x900@60Hz, 1600x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60)

NOTE: All video inputs will be scaled to the selected HDMI output resolution.

Bitrate Peak	0.25 to 8.5 Mbps, variable depending on content complexity
Bitrate Average	1.4 Mbps typical

NOTES:

- The bitrate for Apple native mirroring may deviate from above depending on the OS version and content.
- The AirMedia Extension for the Google Chrome browser relies on web technologies for screen sharing that are built-in to the web browser. Performance variations with motion video (quality and frame rate) may occur based upon the encoding capabilities of the Chrome OS device and the nature of the content being displayed (i.e., high-motion video).

Audio Format	Stereo
--------------	--------

Wireless Conferencing

OS Support (AirMedia Application)	Windows 10, Windows 11
Supported Conferencing Services	Microsoft Teams software; Zoom software
Supported Conferencing Peripherals	For a list of supported conferencing peripherals, refer to OLH Answer ID 1001764 .

Video

Input Signal Types	AirMedia, HDMI (DVI & Dual-Mode DisplayPort™ compatible ²); Simultaneous display of up to four sources with AirMedia Canvas
Maximum Input Resolutions	HDMI Input: 1920x1080@60Hz (HD 1080p60); AirMedia presentation: 1920x1080@30Hz (1080p30) <div>NOTES:<ul style="list-style-type: none">Other input resolutions are supported at pixel clock rates up to 148 MHz; interlaced video is not supported.All video inputs will be scaled to the selected HDMI output resolution.</div>
Output Signal Types	HDMI (DVI compatible ²)
HDMI Output Resolutions	1280x720@50Hz (720p50), 1280x720@60Hz (720p60), 1280x800@60Hz, 1366x768@60Hz, 1440x900@60Hz, 1600x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1080@50Hz (1080p50), 1920x1080@60Hz (1080p60), 3840x2160@30Hz (2160p30), 3840x2160@50Hz (2160p50), 3840x2160@60Hz (2160p60) <div>NOTE: All video inputs will be scaled to the selected HDMI output resolution.</div>
Background & Logo File Support	JPEG, PNG

Audio

Input Signal Types	AirMedia, HDMI (Dual-Mode DisplayPort™ compatible ²)
Output Signal Type	HDMI
Input/Output Format	2 channel LPCM

NOTE: Audio input signals are passed to the output without any processing. Volume control capability requires a display device with discrete volume, up, down, and mute commands available via CEC, IP, IR, or RS-232.

Connectors

IR	(1) 2-pin 3.5 mm detachable terminal block; IR/Serial output port for display device control; IR output up to 1.1 MHz; 1-way serial TTL/RS-232 (0-5V) up to 19200 baud
----	---

COM	(1) 5-pin 3.5 mm detachable terminal block; Bidirectional RS-232 port for display device control; Up to 115.2k baud, hardware and software handshaking support
AUDIO OUT	(1) 5-pin 3.5 mm detachable terminal block; Balanced/unbalanced stereo line-level audio output; Maximum Output Level: 4 Vrms balanced, 2 Vrms unbalanced; Output Impedance: 200 ohms balanced, 100 ohms unbalanced
microSD	For caching digital signage content
HDMI INPUT	(1) HDMI Type A connector; HDMI digital video/audio input; (DVI & Dual-Mode DisplayPort compatible ²)
HDMI OUTPUT	(1) HDMI Type A connector; HDMI digital video/audio output (DVI compatible)
USB	(2) USB Type A connectors; (1) USB Type B connector; USB 3.0 device port for computer console
LAN PoE+	(1) 8-pin RJ-45 connector; 100Base-TX/1000Base-T Ethernet port and PoE+ Class 4
LAN AUX	(1) 8-pin RJ-45 connector; 100Base-TX/1000Base-T Ethernet port; Connects to a secondary, guest-only network
24VDC 1.25A	(1) 2.1 x 5.5 mm DC power connector; 24VDC power input; PW-2412WU power pack sold separately

Controls and Indicators

PWR	(1) Green LED, indicates operating power supplied via the local power pack or PoE+
RESET	(1) Recessed push button for hardware reset
SETUP	(1) Green LED and (1) recessed push button for onscreen IP address display
ONLINE	(1) Green LED, indicates control system connection
HDMI IN/OUT	(2) Green LEDs, indicate HDMI signal presence at the HDMI input/output
microSD	(1) microSD slot
LAN PoE+	(2) LEDs, green LED indicates Ethernet link status, amber LED indicates Ethernet activity
LAN AUX	(2) LEDs, green LED indicates Ethernet link status, amber LED indicates Ethernet activity

Power

Power over Ethernet	IEEE 802.3af Class 4 Powered Device
Power Pack (sold separately)	Input: 100-240VAC, 50/60 Hz; Output: 1.25A @ 24VDC; Model: PW-2412WU
Power Consumption	14 W (typical)

NOTE: When wireless conferencing is used, the receiver must be powered by either Power over Ethernet+ (PoE+) or a power pack (sold separately).

Environmental

Temperature	32° to 104°F (-0° to 40° C)
Humidity	10% to 90% RH (non-condensing)
Heat Dissipation	47.8 BTU/hr

Construction

Chassis	Metal, black finish, with (2) integral mounting flanges, vented sides
Mounting	Freestanding, surface mount, or attach to a single rack rail

Dimensions

Height	1.26 in. (33 mm)
Width	7.40 in. (188 mm)
Depth	6.54 in. (166 mm)

Weight

1.9 lb (0.86 kg)

Compliance

Regulatory Model: M202018001

Intertek® Listed for US & Canada, CE, IC, FCC Part 15 Class B digital device

68 • AirMedia® Series 3



AM-TX3-100 Specifications

Product specifications for the AM-TX3-100 are provided below.

Specifications

Communications

Wi-Fi	Dual-band Wi-Fi 6 802.11a/b/g/n/ac/ax (2.4 GHz & 5 GHz); Up to 70 ft (23 m) range at 80 Mbps, subject to site-specific conditions; Refer to Wireless Best Practices for more information.
USB	USB 2.0
OS Support	Windows 10, Windows 11, macOS® 11 or newer

Video

Input Signal Types	DisplayPort™ Alt Mode over USB-C
Output Signal Types	Network stream, received by a paired AirMedia Series 3 receiver (AM-3000-WF , AM-3100-WF , or AM-3200-WF)
Maximum Resolution	3840x2160@30Hz (2160p30); Output resolution is determined by the HDMI® output on a paired AirMedia Series 3 receiver (AM-3000-WF , AM-3100-WF , or AM-3200-WF)

NOTE: All video inputs will be scaled to the selected HDMI output resolution.

Audio

Input Signal Types	DisplayPort Alt Mode over USB-C
Output Signal Type	Network stream, received by a paired AirMedia Series 3 receiver (AM-3000-WF , AM-3100-WF , or AM-3200-WF)
Input/Output Format	2 channel LPCM

Connectors

USB	(1) USB-C connector, male
-----	---------------------------

Controls and Indicators

Status Ring	RGB LED Ring indicates device status
Screenshare	(1) RGB backlit capacitive touch button controls screensharing functions
Peripherals	(1) RGB backlit capacitive touch button controls various peripheral ¹ functions

Power

Power supply:	USB: Powered via USB-C connection to personal device, or PoE: IEEE 802.3af Class 0 Powered Device, or Power Pack (sold separately): Input 100-240VAC, 50/60 Hz; Output 2.5A @ 24VCD; Model: PW-2420RU
Power Consumption	2.5 W (typical)

Environmental

Temperature	32° to 104°F (0° to 40°C)
Humidity	10% to 90% RH (noncondensing)
Heat Dissipation	8.5 BTU/hr

Construction

Chassis	Plastic, black finish
Mounting	Freestanding, surface mount

Dimensions (Device)

Height	2.95 in. (75 mm)
Width	0.66 in. (17 mm)
Depth	7 in. (178 mm) including cable

Weight

3.17 oz (90 g)

Compliance


Regulatory Model: M202018001

Intertek® Listed for US & Canada, CE, IC, FCC Part 15 Class B digital device

Note:

1. Wireless Conferencing functionality through the AirMedia Connect Adaptor requires a WiFi® network and Wireless Conferencing compatible AirMedia Series 3 Receiver.

Dimension Drawings

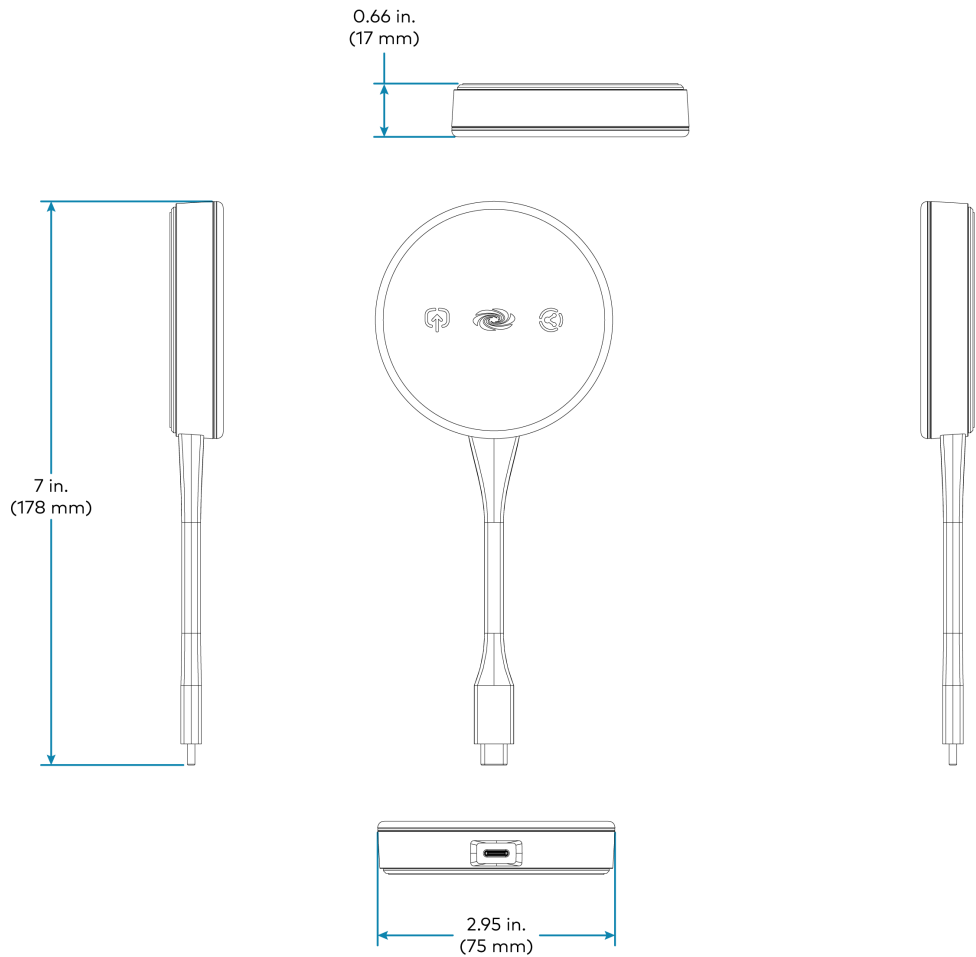

AM-TX3-200 Specifications

Product specifications for the AM-TX3-200 are provided below.

Communications

Ethernet	100/1000 Mbps, autoswitching, autonegotiating, full/half duplex, TCP/IP, UDP/IP, DHCP, SSL, TLS, 802.3af compliant
Wi-Fi	Dual-band Wi-Fi 6 802.11a/b/g/n/ac/ax (2.4 GHz & 5 GHz); Up to 70 ft (23 m) range at 80 Mbps, subject to site-specific conditions; Refer to Wireless Best Practices for more information.
HDMI Input	HDCP 1.4, EDID
USB	USB 2.0
OS Support	Windows 10, Windows 11, macOS® 11 or newer

Video

Input Signal Types	DisplayPort™ Alt Mode over USB-C; HDMI
Output Signal Types	Network stream, received by a paired AirMedia Series 3 receiver
Maximum Resolution	3840x2160@30Hz (2160p30); Output resolution is determined by the HDMI® output on a paired AirMedia Series 3 receiver

NOTE: All video inputs will be scaled to the selected HDMI output resolution.

Audio

Input Signal Types	DisplayPort Alt Mode over USB-C; HDMI
Output Signal Type	Network stream, received by a paired AirMedia Series 3 receiver
Input/Output Format	2 channel LPCM

Connectors

HDMI INPUT	(1) HDMI Type A connector; HDMI digital video/audio input; Connect personal device for content sharing.
USB2 TO HOST	(1) USB-C connector, provides access to peripherals. Connect a USB-C to USB-A cable for use with devices without USB-C.
USB2 / DP-S TO HOST	(1) USB-C connector, supports presentation using DisplayPort Alt-Mode and access to peripherals
USB2 TO DEVICE	Reserved for future use
MAIN PoE PD	(1) 8-pin RJ-45 connector; 100BASE-TX/1000BASE-T Ethernet port and PoE Class 0

AUX PoE+ PSE	(1) 8-pin RJ-45 connector; 100BASE-TX/1000BASE-T Ethernet port and PoE+ Class 4; If enabled, connect a device such as a touch panel to provide passthrough network access. Provides PoE+ when the device is powered via DC power supply.
24V 2.5A	(1) 2.1 x 5.5 mm DC power connector; 24VDC power input; PW-2420RU power pack sold separately

Controls and Indicators

Power	(1) White LED, power supplied via the local power pack, PoE, or connected USB-C device
MAIN LAN	(1) White LED, indicates a network connection on the Main network interface.
AUX LAN	(1) White LED, indicates a network connection on the Auxillary network interface
VIDEO IN	(1) White LED indicates the presence of a USB-C or HDMI video signal
PERIPHERAL	(1) White LED indicates that conferencing peripherals are in use by the device
SETUP	(1) White LED and (1) push button for pairing to an AirMedia Receiver
RESET	(1) Recessed push button for restoring device to factory defaults

Power

Power supply:	USB: Powered via USB-C connection to personal device, or PoE: IEEE 802.3af Class 0 Powered Device, or Power Pack (sold separately): Input 100-240VAC, 50/60 Hz; Output 2.5A @ 24VCD; Model: PW-2420RU
Power Consumption (idle)	4W
Power Consumption (in use)	12.5W
Power Consumption (in use and AUX PoE+ PSE passthrough)	45W

Environmental

Temperature	32° to 104°F (0° to 40°C)
Humidity	10% to 90% RH (noncondensing)
Heat Dissipation	47.5 BTU/hr

Construction

Chassis	Plastic, black finish, with (4) integrated mounting holes, vented sides
Mounting	Freestanding, surface mount
Mounting Bracket	Metal

Dimensions (Device)

Height	1.18 in. (30 mm)
---------------	------------------

Width	7.87 in. (200 mm)
Depth	7.08 in. (180 mm)

Dimensions (Device with Attached Mounting Bracket)

Height	1.26 in. (32 mm)
Width	8.85 in. (225 mm)
Depth	7.08 in. (180 mm)

Weight

Weight (device)	21.06 oz (597 g)
Weight (mounting bracket)	11.18 oz (317 g)

Compliance

Regulatory Model: M202018001


Intertek® Listed for US & Canada, CE, IC, FCC Part 15 Class B digital device

Notes:


1. Wireless Conferencing functionality through the AirMedia Connect Endpoint requires a Wi-Fi network and Wireless Conferencing compatible AirMedia Series 3 Receiver.
2. The recommended compatible cables are [CBL-USB2-A-C-9](#), [CBL-USB2-A-C-12](#), [CBL-8K-HD-9](#), [CBL-8K-HD-12](#), and [CBL-USB3G1-C-C-9](#).
3. Crestron supports most mainstream devices and applications. For a list of supported conferencing peripherals, refer to [OLH Answer ID 1001764](#).

Dimension Drawings

AM-TX3-200

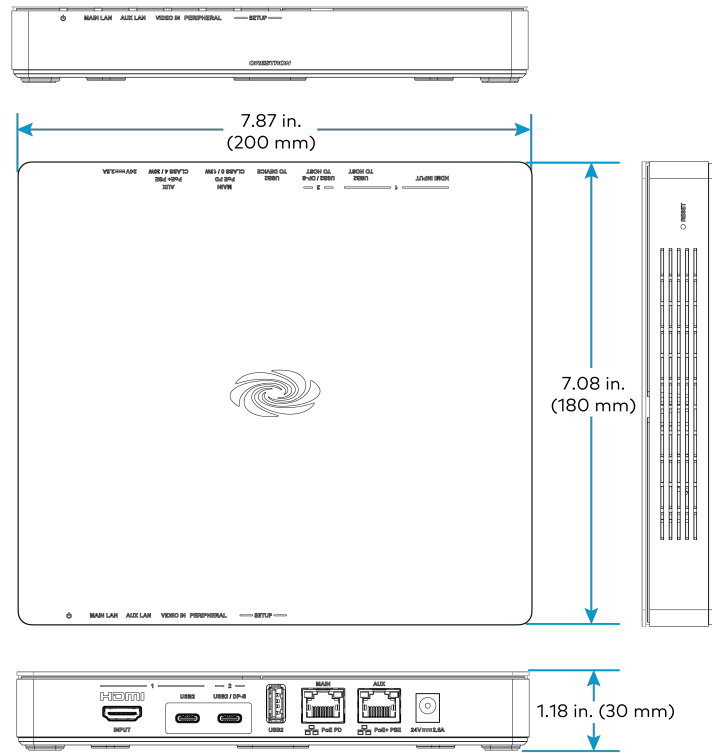

Mounting Bracket

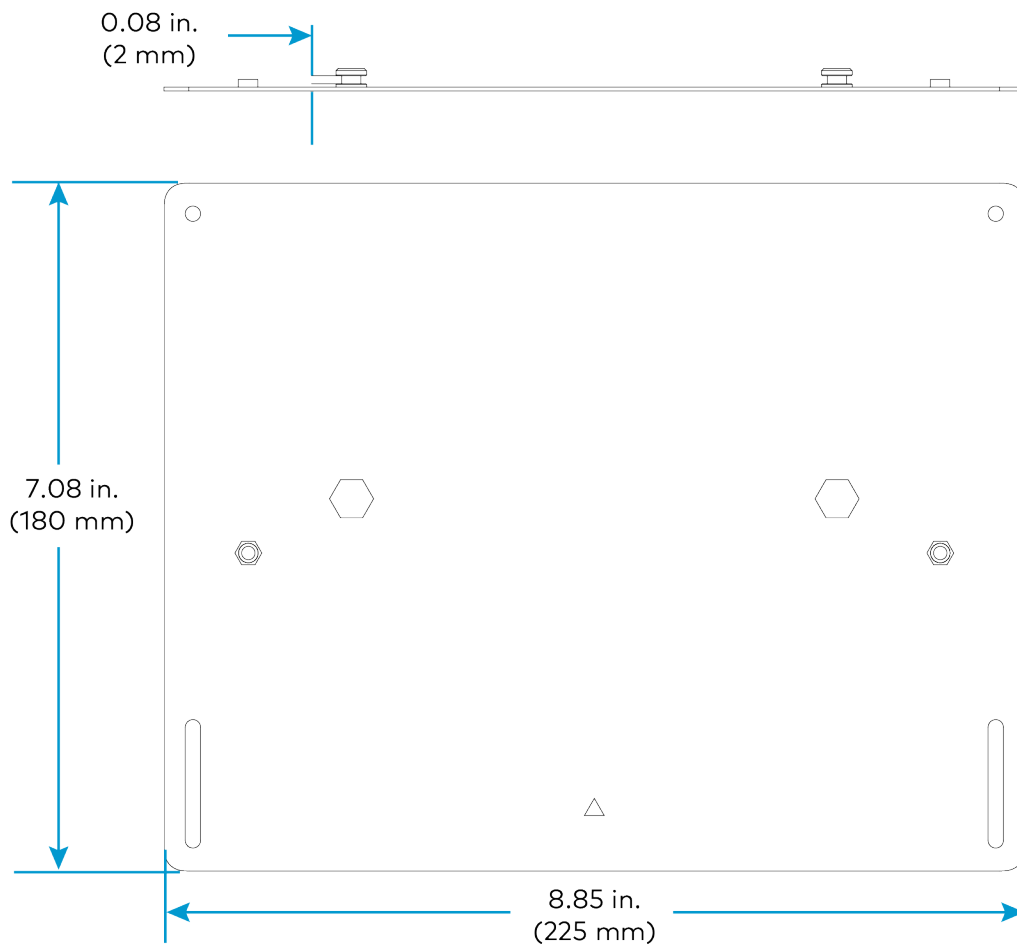

UC-SB-P50-AM-WF(-I) KIT Specifications

Product specifications for the UC-P50-AM-WF(-I) KIT are provided below.

Components

AM-3100-WF	AirMedia® Receiver 3100 with Wi-Fi® Network Connectivity
UC-SB-P50	Jabra PanaCast 50 intelligent video bar

Jabra® PanaCast 50 Video Bar

Speakers	(4) speakers, stereo; 2 in. (50 mm) woofers; 2 x 3/4 in. (50 x 20 mm) tweeters; 80 Hz to 20 kHz frequency response; Automatic speaker detection
Microphone	(8) microphone beamforming array; -37 dBFS microphone sensitivity; 100 Hz to 8 kHz microphone frequency range; Suitable for rooms up to 15 x 15 ft (4.5 x 4.5 m)

NOTE: Microphone pickup range may vary in rooms with highly reflective infrastructure (e.g., glass walls, metal furniture, open ceilings, etc.) or above average ambient noise.

Camera Optics	(3) cameras; 13 Megapixels
Camera Field of View	180° horizontal, 54° vertical
Autozoom	Automatic digital zoom dynamically frames people within 11 ft (3.5 m)
Camera Resolution	3840 x 1080 @ 30 fps
Power	From external power pack; Input: 100-240VAC, 50/60 Hz; Output: 5A @ 12V
Enclosure	Black speaker and camera housing, rear air vents, integrated adjustable mounting bracket
Mounting	Wall mount using integrated mounting bracket; Optional table mount or VESA® compliant screen mount (both sold separately)
Dimensions	Height: 3.1 in. (90 mm) Width: 25.6 in. (650 mm) Depth: 4.9 in. (125 mm)
Weight	4.85 lb (2.2 kg)

Installation

Refer to the following sections for instructions on how to install the various AirMedia Series 3 devices and bundles.

- [AM-3000-WF\(-I\) and AM-3100-WF\(-I\) on page 79](#)
- [AM-3200, AM-3200-WF\(-I\), and AM-3200-GV on page 84](#)
- [AM-TX3-100 on page 90](#)
- [AM-TX3-200 on page 93](#)
- [UC-SB-P50-AM-WF\(-I\) KIT on page 97](#)

AM-3000-WF(-I) and AM-3100-WF(-I)

Refer to the following sections to install the AM-3000-WF(-I) and AM-3100-WF(-I).

- [In the Box on page 79](#)
- [Connect the Receiver on page 82](#)
- [Observe the LEDs on page 83](#)

In the Box

Qty. Description

- | | |
|---|---|
| 1 | AirMedia Series 3 Receiver
AM-3000-WF (6513018), AM-3000-WF-I, (6513019),
AM-3100-WF (6511540), or AM-3100-WF-I (6511541) |
|---|---|

Additional Items

- | | |
|---|---|
| 2 | Anchor, Wall, Plastic (2057414) |
| 2 | Screw, Metal, 1.18 in (30 mm) (2057420) |
-

Install the Receiver


The device can be placed or mounted onto a flat surface.

Place onto a Flat Surface


Place the device onto any flat, level surface. The rubber strips on the bottom of the receiver prevent it from moving easily.

Mount onto a Flat Surface

Using the included mounting screws and anchors, mount the device onto a flat surface such as a wall or the underside of a table. Use the mounting dimensions on the following page to determine the mounting hole locations.

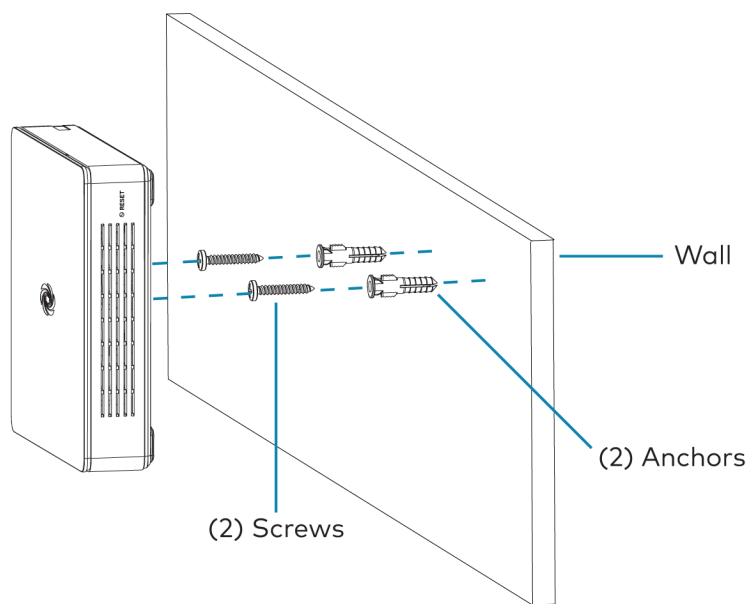

AM-3000-WF, AM-3000-WF-I, AM-3100-WF, and AM-3100-WF-I Mounting

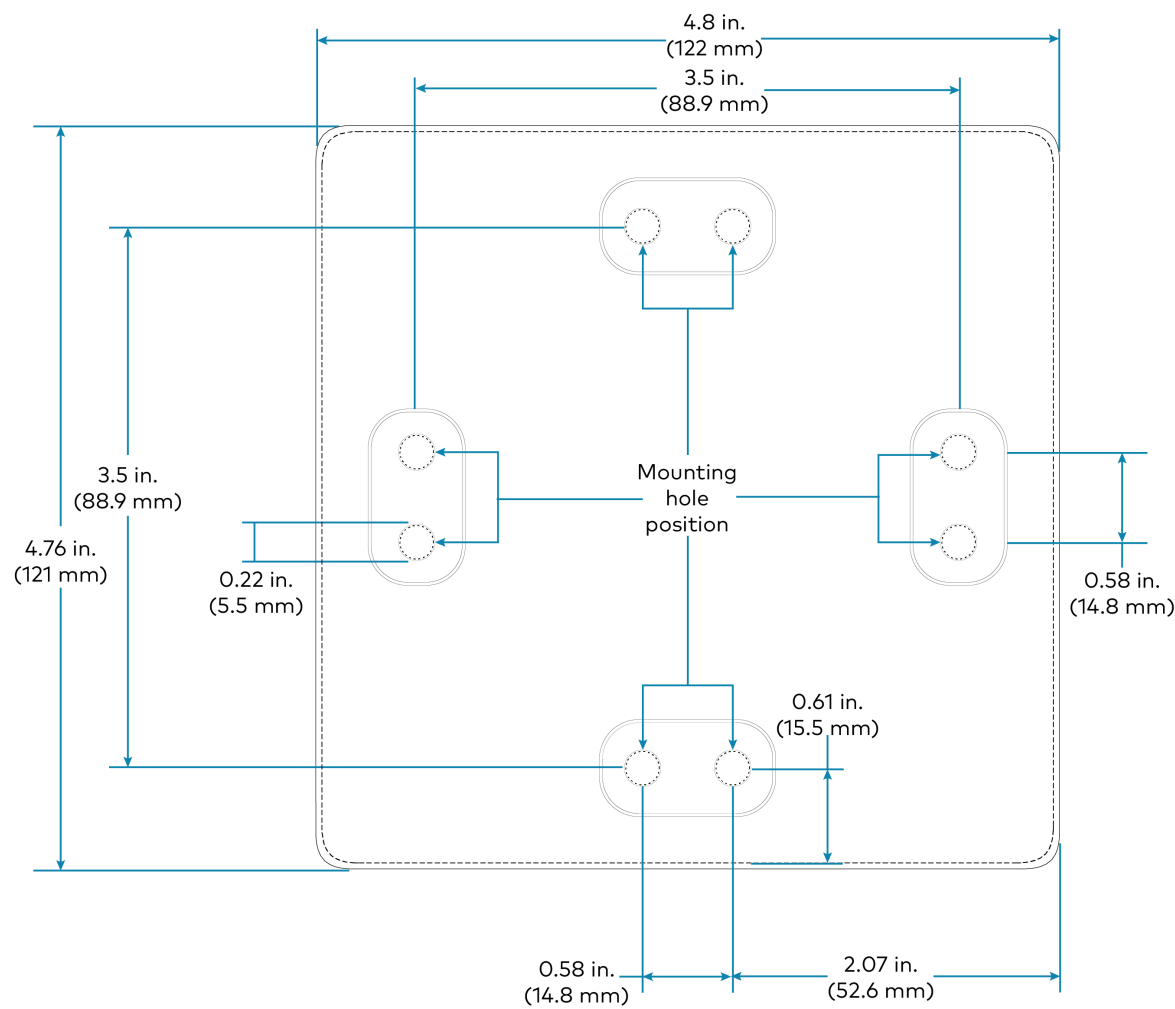


Connect the Receiver

Make connections to the device as shown in the following diagram.

NOTES:

- The device receives power from a Power over Ethernet (PoE, IEEE 802.3af) or Power over Ethernet+ (PoE+, IEEE 802.3at) connection. It can also receive power from the [PW-2412WU](#) power pack (sold separately).
- PoE-type networks connected to the LAN PoE+ port are for intrabuilding use only. Do not connect this device to lines that run outside of the building.

Rear Panel Connections

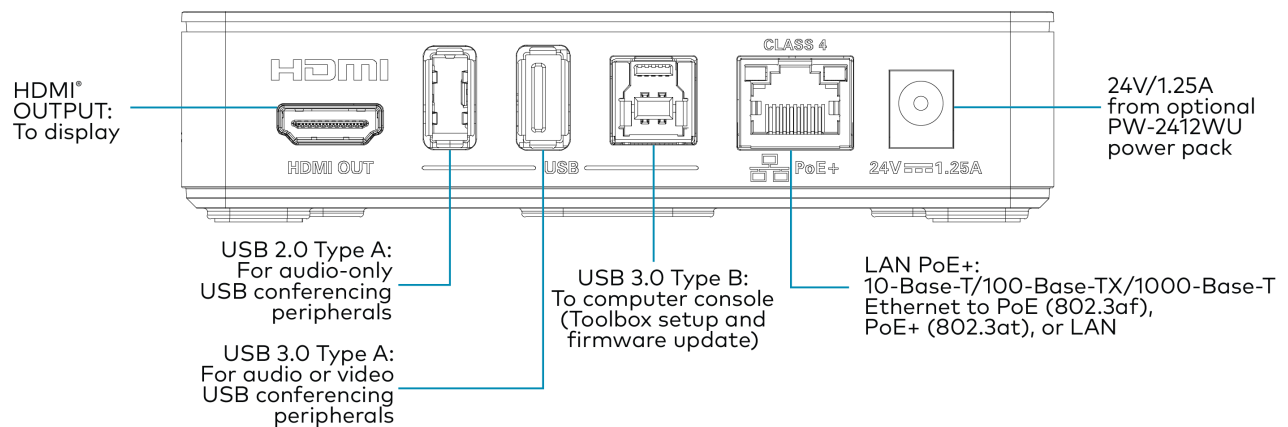

Wireless Conferencing Peripherals

Connect Wireless Conferencing peripherals to the following USB ports:

- **USB 3.0:** Cameras or all-in-one audio and video devices:
- **USB 2.0:** Microphones, speakers, or DSPs

NOTES:


- Wireless Conferencing is unavailable on the AM-3000-WF and AM-3000-WF-I. Connected conferencing peripherals will not function
- To use USB conferencing peripherals, the device must be powered by PoE+ or the PW-2412WU power pack. Do not simultaneously provide PoE or PoE+ and local power.

Observe the LEDs

Refer to the following table and diagram for information about the LED indicators on the device.

LED Indicator	Color	Meaning
Power	White	Power is being applied to the device. The device is operational.
	Amber	Power is being applied to the device. The device is booting.
Setup	White	The setup button was pressed.
Online	White	The device is connected to a Crestron Control System.
HDMI	White	A video signal is being transmitted to the HDMI output.
LAN Indicators (located on rear panel)	Green	An Ethernet link is established.
	Flashing amber	Data activity is occurring on the Ethernet link.

LED Indicators - Front Panel

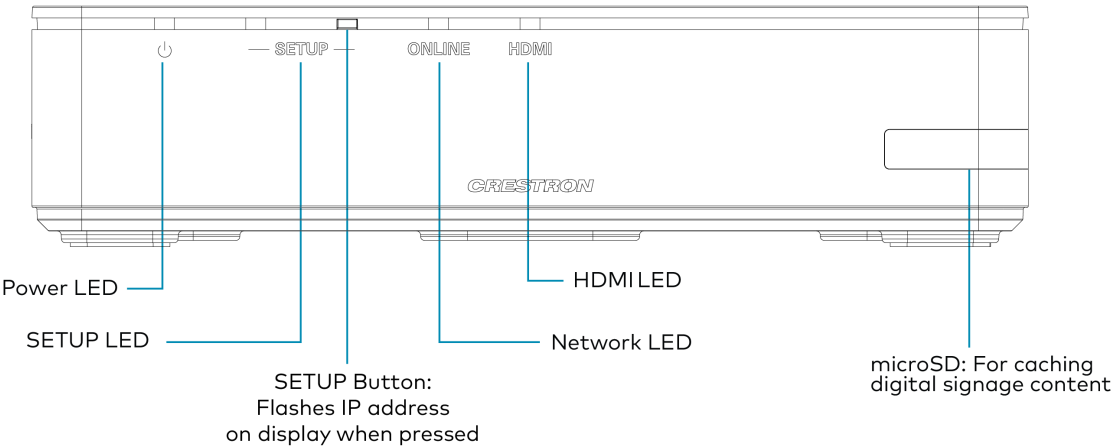

NOTE: To install a microSD card, remove the screw on the side of the unit using a Philips screwdriver. Remove the flap and insert the card into the slot. Then, secure the flap by reinstalling the same screw.

AM-3200, AM-3200-WF(-I), and AM-3200-GV

Refer to the following sections to install the AM-3200, AM-3200-WF(-I), and AM-3200-GV.

- [In the Box on page 84](#)
- [Connect the Receiver on page 87](#)
- [Observe the LEDs on page 89](#)

In the Box

Qty. Description

- | | |
|---|--|
| 1 | AirMedia Series 3 Receiver
AM-3200 (6511482), AM-3200-WF, (6511483),
AM-3200-WF-I (6511484), or AM-3200-GV (6513188) |
|---|--|

Additional Items

- | | |
|---|---|
| 4 | Anchor, Wall, Plastic (2057414) |
| 4 | Screw, Metal, 0.98 in (25 mm) (2057419) |
| 1 | Connector, 2-Pin (2057409) |
| 2 | Connector, 5-Pin (2057410) |

Additional Item for AM-3200-WF(-I) Only

- | | |
|---|---|
| 2 | Antenna with cable, SMA, Female (2057413) |
|---|---|
-


Install the Receiver

The device can be mounted onto a rack rail or flat surface.

Mounting onto a Rack Rail


The device can be mounted onto a front or rear rack rail. To mount the device:

1. Position either the left or right mounting flange so that the holes align with the holes in the rack rail.
2. Secure the device to the rack rail using two rack mount screws (not included).

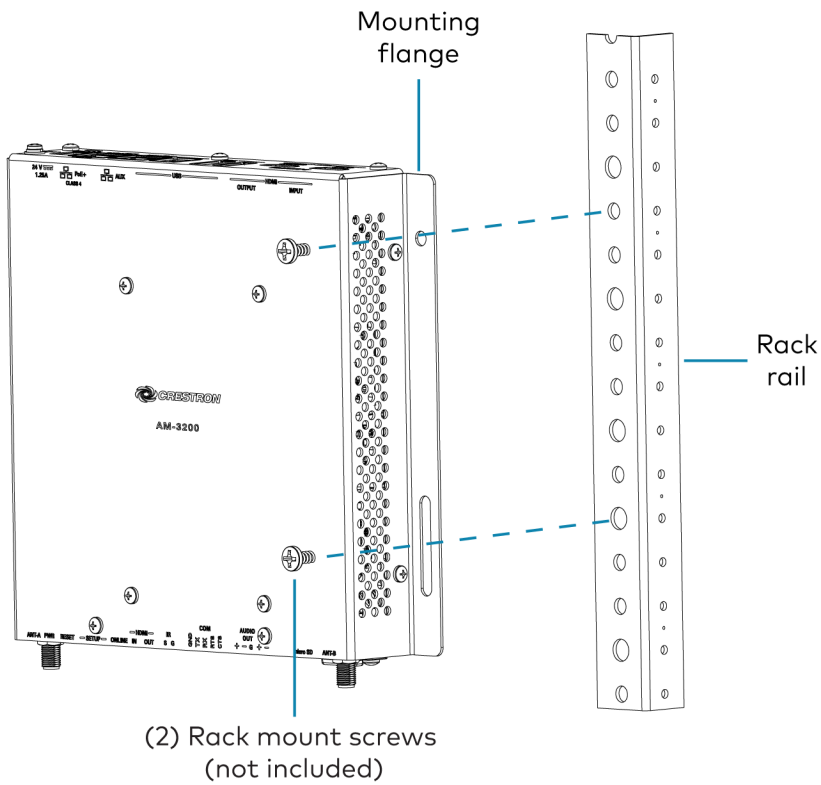


Mounting onto a Flat Surface

Using the included mounting screws and anchors, mount the device onto a flat surface such as a wall or the underside of a table. Use the mounting dimensions on the following page to determine the mounting hole locations.

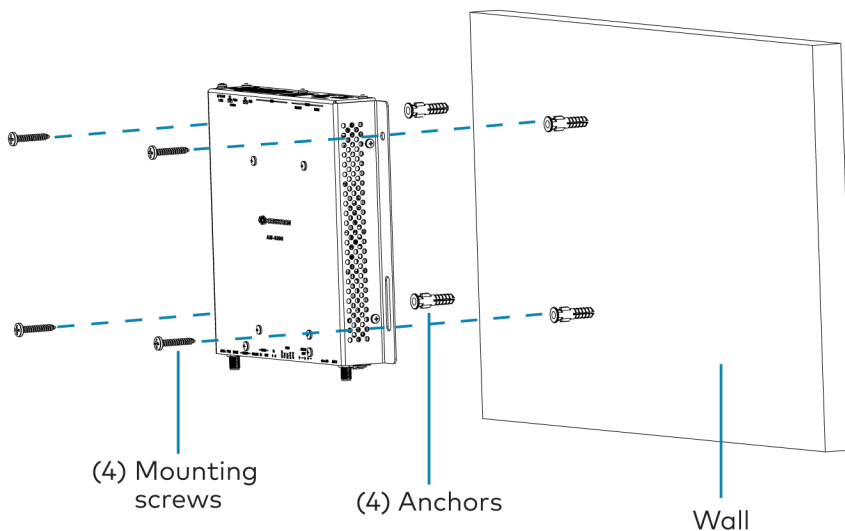

AM-3200, AM-3200-WF, AM-3200-WF-I, and AM-3200-GV Mounting

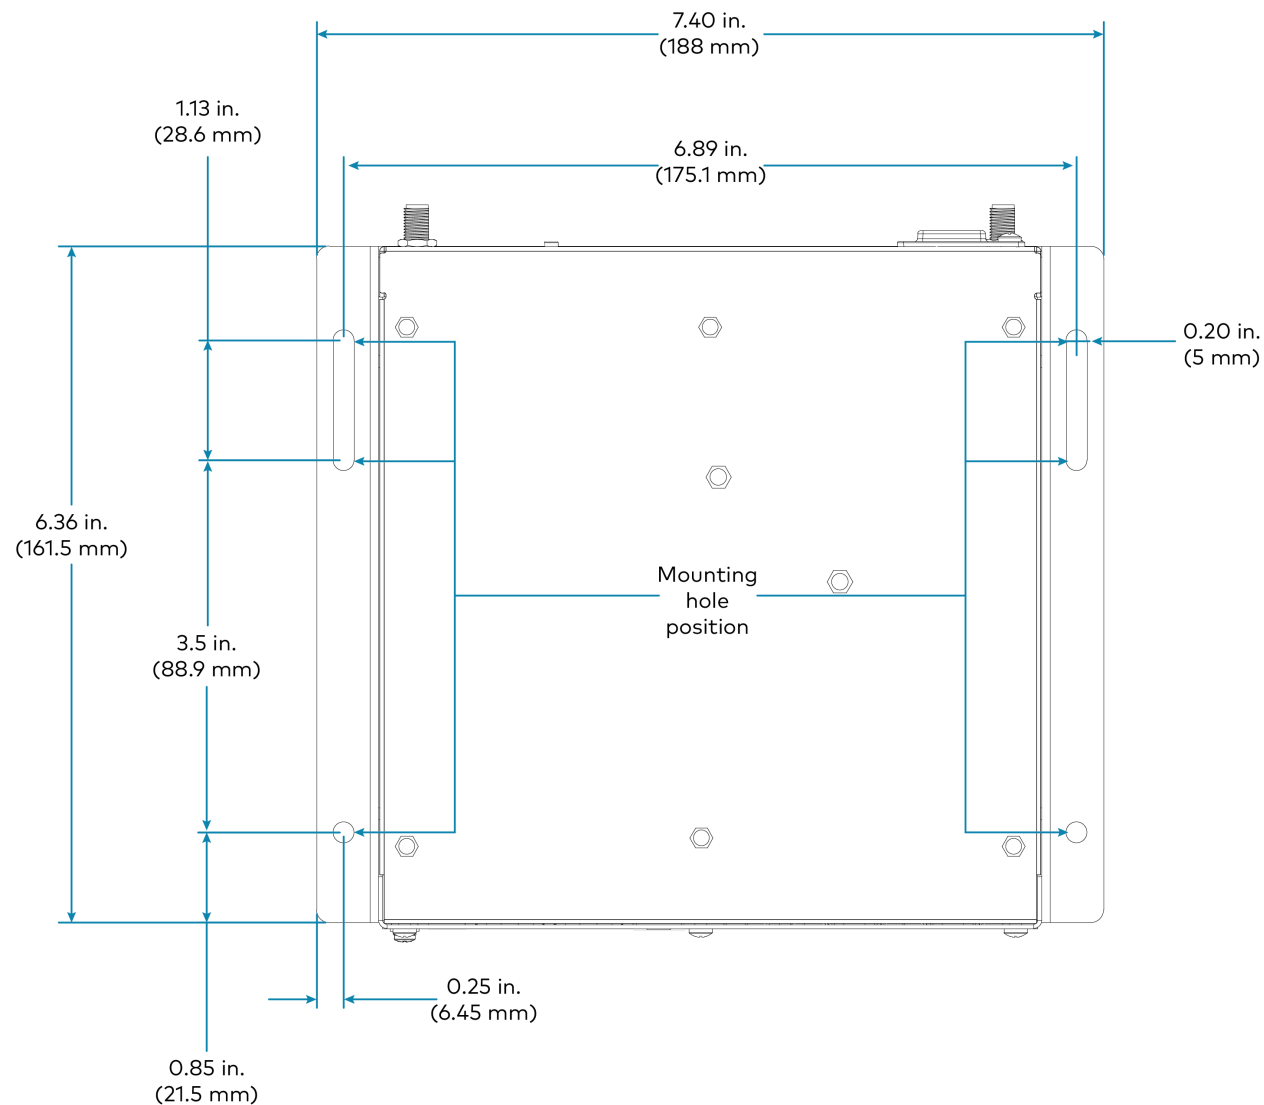


Connect the Receiver

Make connections to the device as shown in the following diagrams.


NOTES:

- Only use the LAN AUX port to connect to a secondary, guest-only LAN. Do not use the LAN AUX port to connect to the main LAN.
- The device receives power from a Power over Ethernet (PoE, IEEE 802.3af) or Power over Ethernet+ (PoE+, IEEE 802.3at) connection. It can also receive power from the [PW-2412WU](#) power pack (sold separately).
- PoE-type networks connected to the LAN PoE+ port are for intrabuilding use only. Do not connect this device to lines that run outside of the building.
- Connect the external antennas included with the AM-3200-WF(-I) before powering on the device.

Top Panel Connections - AM-3200, AM-3200-WF, AM-3200-WF-I, and AM-3200-GV

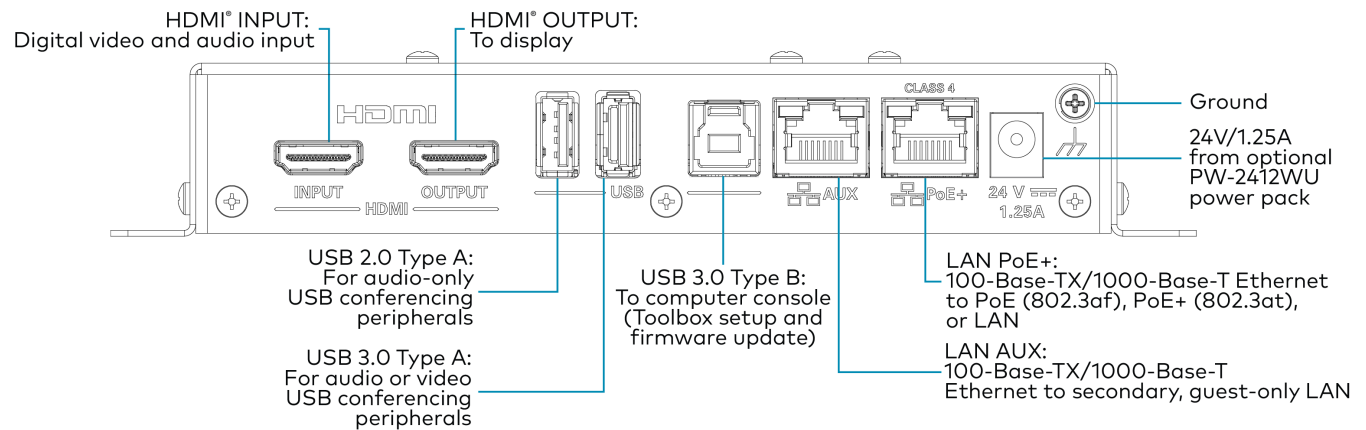


Bottom Panel Connections - AM-3200 and AM-3200-GV

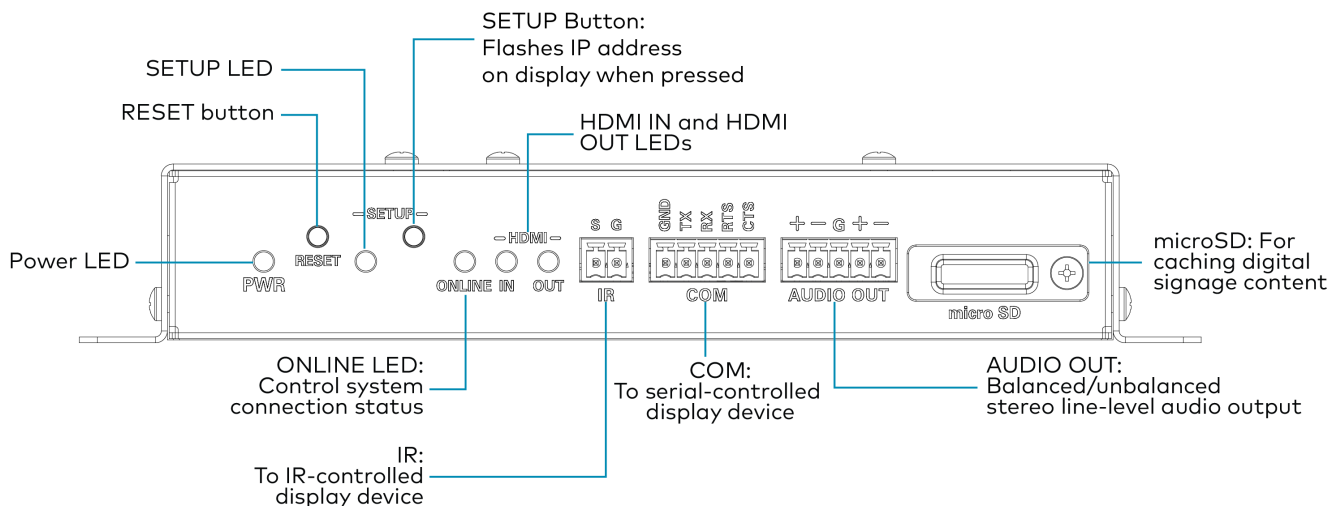

NOTE: To install a microSD card, remove the screw on the cover using a Phillips screwdriver and insert the microSD card into the slot. Then, secure the slot cover by reinstalling the same screw.

Bottom Panel Connections - AM-3200-WF, AM-3200-WF-I

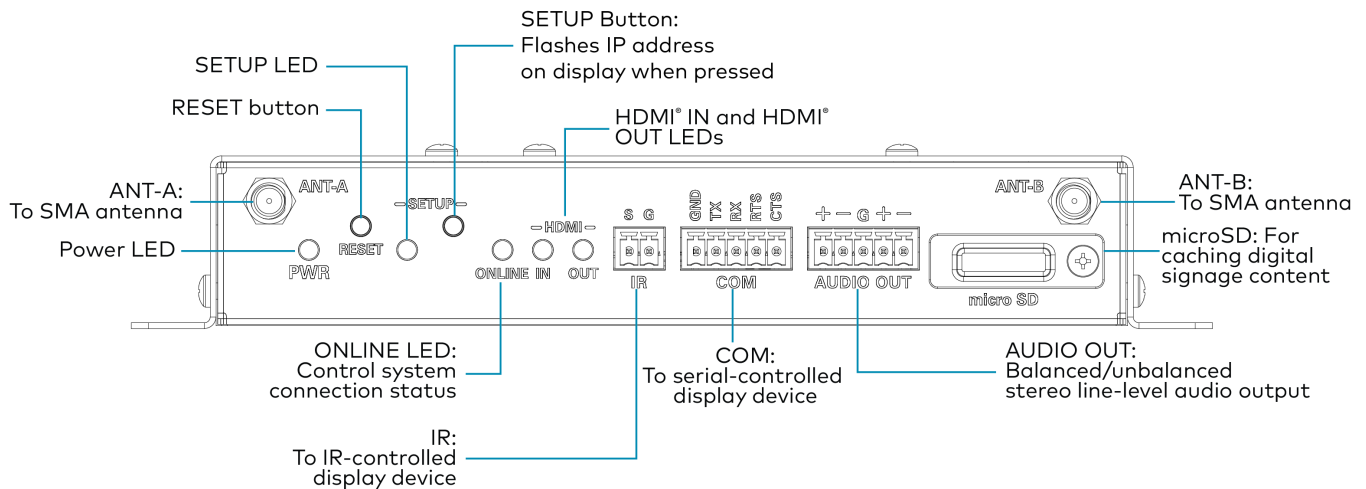

NOTE: To install a microSD card, remove the screw on the cover using a Phillips screwdriver and insert the microSD card into the slot. Then, secure the slot cover by reinstalling the same screw.

Wireless Conferencing Peripherals

NOTE: To use USB conferencing peripherals, the device must be powered by PoE+ or the PW-2412WU power pack. Do not simultaneously provide PoE or PoE+ and local power.

Connect Wireless Conferencing peripherals to the following USB ports:

- Cameras or all-in-one audio and video devices: USB 3.0
- Microphones, speakers, or DSPs: USB 2.0

Observe the LEDs

Refer to the following table for information about the LED indicators on the device.

LED Indicator	Color	Meaning
Power	Green	Power is being applied to the device. The device is operational.
	Amber	Power is being applied to the device. The device is booting.
Setup	White	The setup button was pressed.
Online	Green	The device is connected to a Crestron Control System.
HDMI In	Green	A video signal is detected at the HDMI input.
HDMI Out	Green	A video signal is being transmitted to the HDMI output.
LAN PoE+ and LAN AUX	Green	An Ethernet link is established.
	Flashing amber	Data activity is occurring on the Ethernet link.

AM-TX3-100

Refer to the sections below to install the AM-TX3-100.

In the Box

Qty.	Description
1	AirMedia Series 3 Connect Adaptor AM-TX3-100 (6511527) or AM-TX3-100-I (6511528)
1	AirMedia® Series 3, AirMedia® Series 3 Wireless Presentation and Wireless Video Conferencing
Additional Items	
1	Mounting bracket (2063783)
2	Screws, 0.22 in. (5.5 mm), Flat Head, Philips, Black (2063784)
4	Mounting Screws 1.18 in. (30 mm), Philips, Black (2057420)
4	Anchors, plastic (2057414)

Install the AM-TX3-100

Use the following procedures to install the AM-TX3-100.


1. Plug the AM-TX3-100 into a personal device's USB-C port.

NOTE: The personal device's USB-C port must be DisplayPort Alt mode compatible.

2. Follow the instructions in [Connect Devices on page 164](#) and [Wireless Best Practices on page 222](#).
3. Set the paired AirMedia receiver's System Mode to **Optimized for Multiple Presentations**. For details, refer to [General Settings on page 121](#).

Observe the LEDs

Refer to the following table for information about the LED indicators on the device.

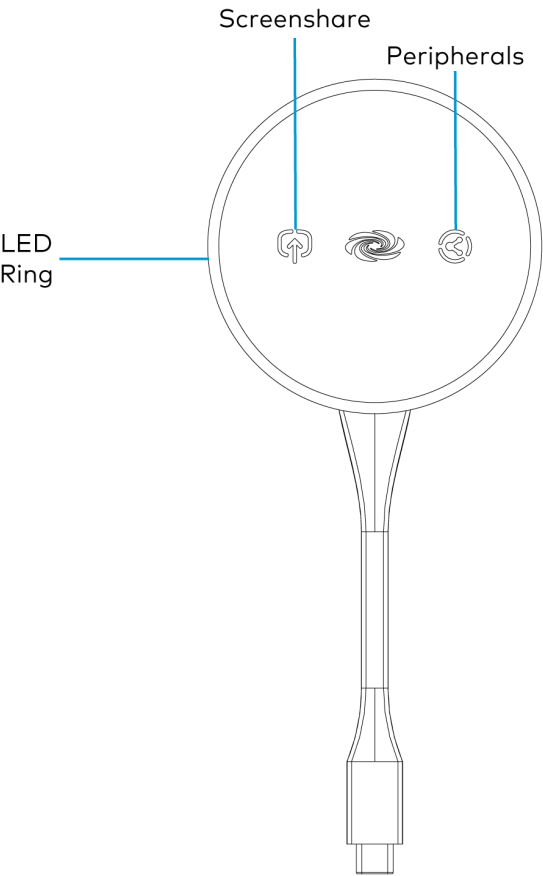

Status	LED Ring	Screenshare Button	Peripherals Button
Startup	White breathing	White breathing	White breathing
Connection	White circling		
Presentation Starting	Green circling		
Presentation Active	Green solid	Green solid	
Presentation Stopped	Green solid	White solid	Red solid (Flex mode disabled)
Presentation Paused	Green solid	Green blinking	
Presentation Active and Wireless Conferencing Available	Green solid	Green solid	White solid
Presentation and Wireless Conferencing Active	Green solid	Green solid	Green solid

Status	LED Ring	Screenshare Button	Peripherals Button
Presentation Active and Wireless Conferencing Unavailable	Green solid	Green solid	Red solid
Error	Red blinking	Red blinking	Red blinking
Firmware Update in Progress	Incremental amber segments		
Pairing in Progress	Alternating amber and white		
Ready for Pairing	White solid		

NOTE: If an AirMedia Connect Device encounters an error, all of the LED indicators will blink red. For troubleshooting information, visit crestron.com/airmediahelp or scan the QR code displayed on the front of the room display.

AM-TX3-200

Refer to the sections below to install the AM-TX3-200.

- [Install the AM-TX3-200 on page 93](#)
- [Connect the AM-TX3-200 on page 95](#)
- [Observe the AM-TX3-200 LEDs on page 96](#)

Install the AM-TX3-200

The AM-TX3-200 can be placed or mounted onto a flat surface. The AirMedia Series 3 Connect Endpoint enables presentation and conferencing when paired with a Wi-Fi® network capable AirMedia Series 3 Receiver. Deploy the AM-TX3-200 alongside an AirMedia Series 3 Receiver in almost any space to establish a productive meeting or learning environment.

In the Box

Qty.	Description
1	AirMedia Series 3 Connect Adaptor AM-TX3-100 (6511527) or AM-TX3-100-I (6511528)
1	AirMedia® Series 3, AirMedia® Series 3 Wireless Presentation and Wireless Video Conferencing
Additional Items	
1	Mounting bracket (2063783)
2	Screws, 0.22 in. (5.5 mm), Flat Head, Philips, Black (2063784)
4	Mounting Screws 1.18 in. (30 mm), Philips, Black (2057420)
4	Anchors, plastic (2057414)


Place onto a Flat Surface

Place the device onto any flat, level surface.


Mount Underneath a Table or onto a Flat Surface

Use the included mounting bracket to mount the device to a flat surface such as a wall or the underside of a table. Perform the following steps.

1. Use the included screws to attach the mounting bracket to the AM-TX3-200.

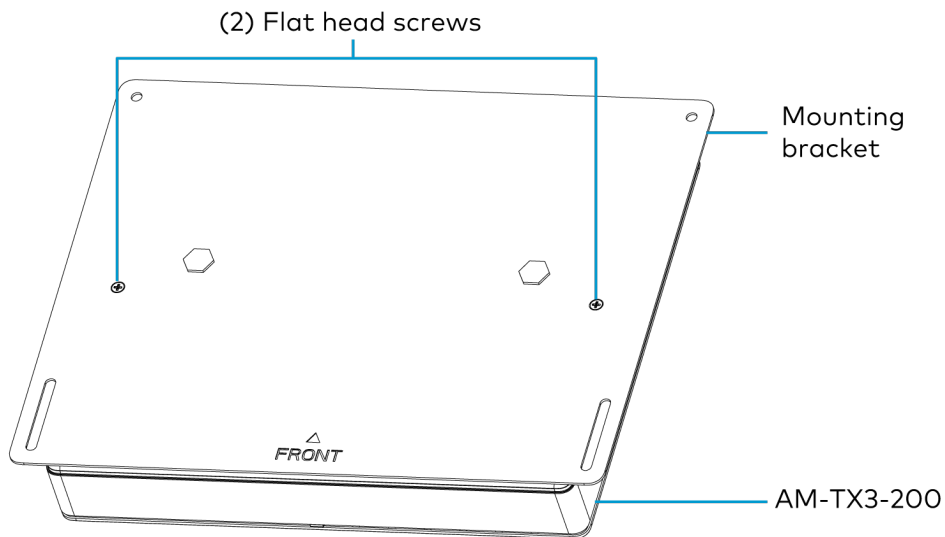

2. Using the included mounting screws, attach the mounted AM-TX3-200 to a flat surface.

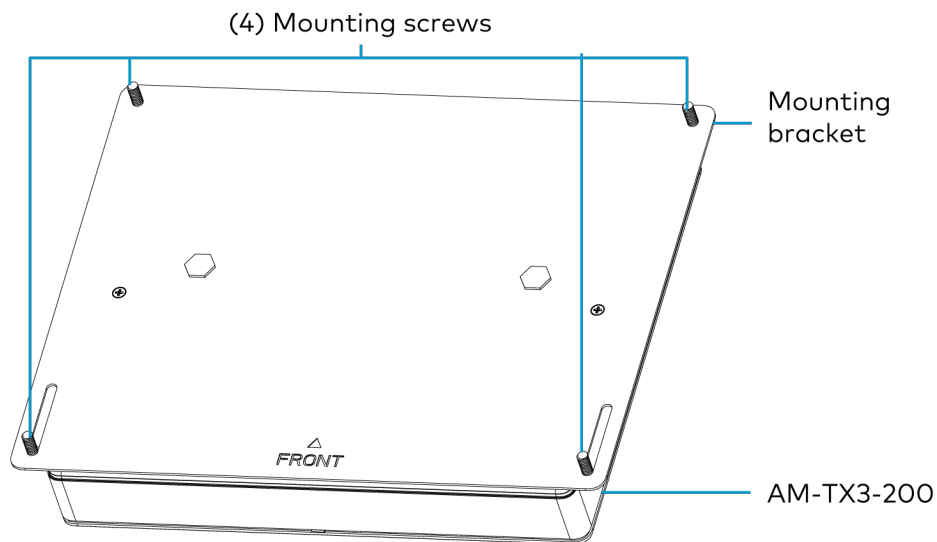


Connect the AM-TX3-200

Make connections to the AM-TX3-200 as shown in the following diagram.


NOTES:

- The AM-TX3-200 receives power from a Power over Ethernet (PoE, IEEE 802.3af) or Power over Ethernet+ (PoE+, IEEE 802.3at) connection. It can also receive power from the [PW-2420RU](#) power pack (sold separately).
- Only use the AUX PSE port to connect to a peripheral device, such as a [TS-770](#) touch screen. Do not use the AUX PSE port to connect to the main LAN. The AUX PSE port is only available when using local power.
- PoE-type networks connected to the PD port are for intrabuilding use only. Do not connect the AM-TX3-200 to lines that run outside of the building.
- The AM-TX3-200 automatically switches power sources in the following priority:
 - Local DC power supply
 - PoE on primary LAN port
 - Power from USB-C connected user device

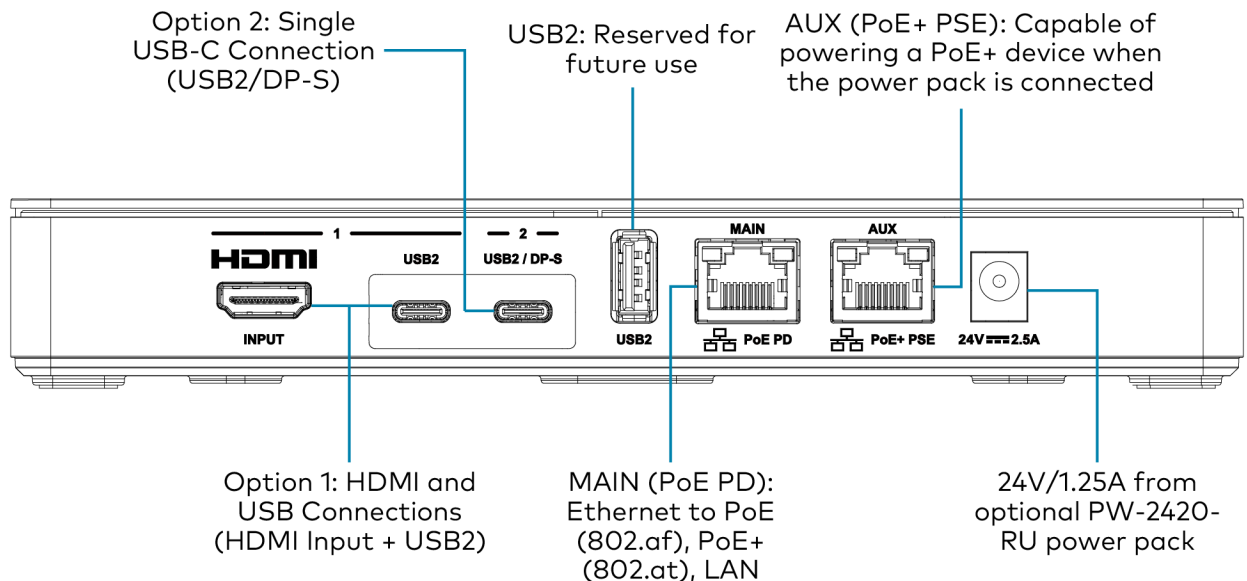

Observe the AM-TX3-200 LEDs

Refer to the following diagram for information about the AM-TX3-200's LED indicators.

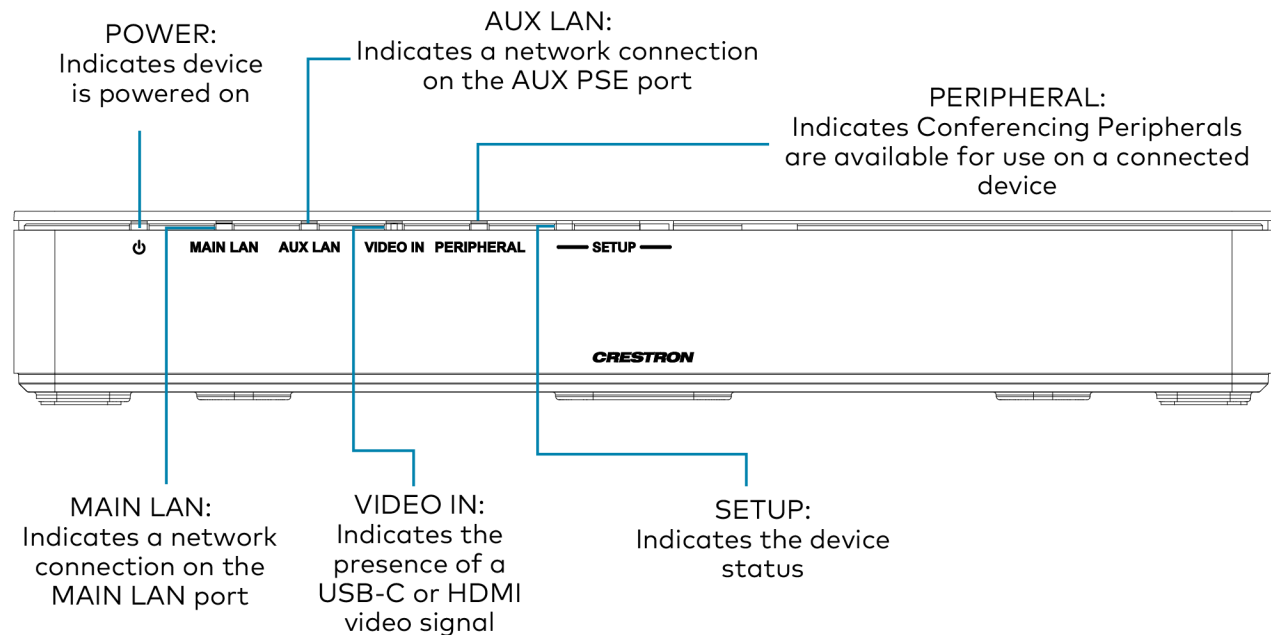

Status	POWER	VIDEO IN	PERIPHERAL	SETUP
Unpaired	Solid			
Pairing in Progress	Solid			Fast blinking
Connected to Receiver and Paired	Solid			Solid
Disconnected from Receiver and Paired	Solid			Slow blinking
Presentation Active	Solid	Solid		Solid
Conferencing Active	Solid		Solid	Solid
Presentation and Conferencing Active	Solid	Solid	Solid	Solid
Firmware Update in Progress	Slow blinking			
Error	Solid	Slow blinking		Solid
Restoring	Fast blinking			

NOTE: MAIN LAN and AUX LAN LEDs remain solid when a network connection is established.

UC-SB-P50-AM-WF(-I) KIT

Use the following procedure to install the UC-SB-P50-AM-WF(-I) KIT.

1. Install the Jabra PanaCast 50 video bar according to its included documentation.
2. Use the included USB-C to USB-A cable to connect the Jabra PanaCast 50 video bar to the AM-3200-WF(-I)'s USB 3.0 port.
3. Follow the installation instructions for the [AM-3200](#), [AM-3200-WF\(-I\)](#), and [AM-3200-GV](#) on [page 84](#).

Configuration

To configure receiver settings using the web configuration interface, deploy multiple receivers across an enterprise, or enable Modern Authentication for EWS, refer to the following sections:

NOTE: The AM-3200-GV reports as and follows the same device definitions as the AM-3200. AM-3200-GV units can be identified by the product label and a serial number that includes the letters **GST**.

- [Web Configuration Interface on page 99](#)
- [Enterprise Deployment Options on page 178](#)
- [Modern Authentication for EWS on page 180](#)

Web Configuration Interface

Configure the AirMedia receiver using the included web configuration interface.

To connect to the receiver and configure its settings, refer to the following sections:

- [Connect to the Receiver on page 99](#)
- [Action Menu on page 102](#)
- [Status on page 109](#)
- [Settings on page 118](#)
- [Security on page 169](#)
- [802.1x Configuration on page 175](#)

Connect to the Receiver

To connect to the receiver's web configuration interface, a computer must be connected to the same network as the AirMedia receiver. The web configuration interface is accessible from a web browser. This interface is also accessible using the XiO Cloud® service.

Supported Web Browsers

When connecting to the receiver's web configuration interface, use one of the supported web browsers listed below.

Web Configuration Interface Supported Web Browsers


OPERATING SYSTEM	SUPPORTED WEB BROWSERS
Windows® operating system	Chrome™ web browser, version 31 and later
	Firefox® web browser, version 31 and later
	Microsoft Edge® web browser, version 86 and later
macOS® operating system	Chrome web browser, version 31 and later
	Firefox web browser, version 31 and later
	Safari® web browser, version 6 and later

Sign in to the Receiver

To connect to the receiver using the web configuration interface:

1. On a computer, open a web browser and navigate to the IP address or host name that is shown on the display device. The welcome screen is displayed.

Welcome Screen

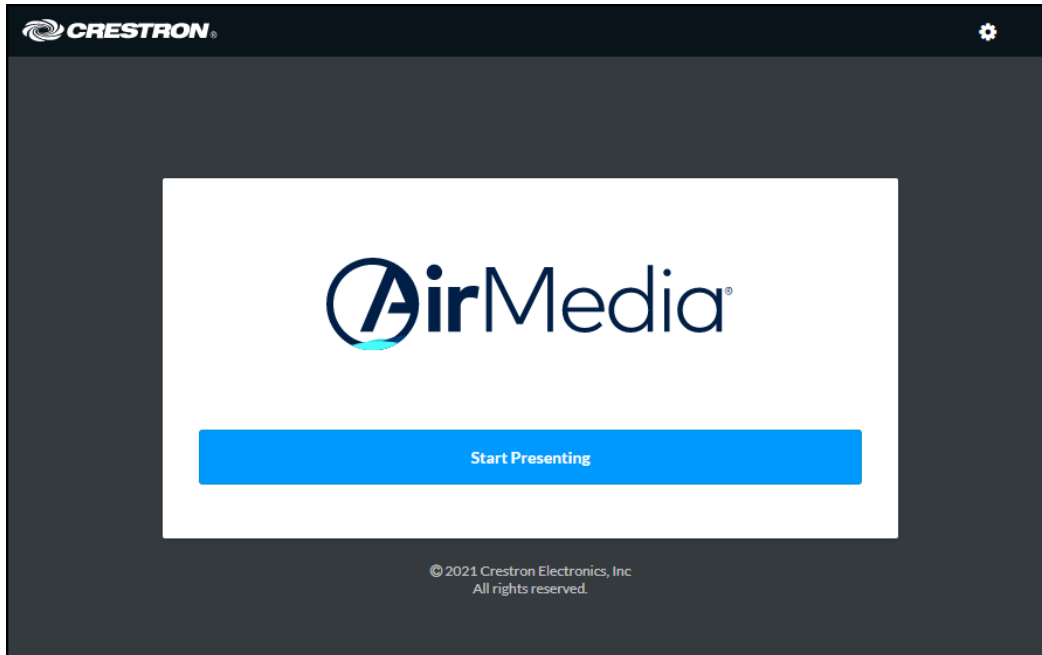


2. Select the settings button  in the title bar to log in.


NOTE: Prior to displaying the prompt for login credentials, the web browser may display a security warning message about the security certificate. It is safe to ignore this warning as long as the user verifies that the browser's address bar indicates the receiver IP address or host name as shown on the display device.

3. If this is a new sign-on, enter the new username and password in their respective fields and select **Create User** to continue. Otherwise, enter the username and password that were previously configured, and select **Sign In** to continue. The receiver's web configuration interface is displayed.

Login Screen

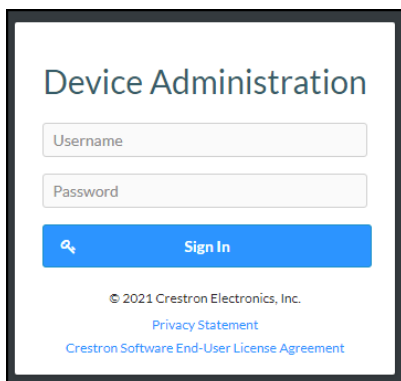

Enter New User Name and Password

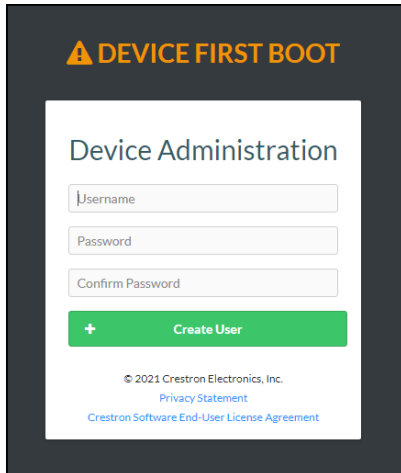

⚠️ DEVICE FIRST BOOT

Device Administration

Username

Password

Confirm Password

+ Create User

© 2021 Crestron Electronics, Inc.
[Privacy Statement](#)
[Crestron Software End-User License Agreement](#)


Log Out from the Receiver

Select **Sign Out** to log out of the receiver's web configuration interface and return to the welcome screen. If **Sign Out** is not selected, the user will be logged out automatically after 20 minutes of inactivity.

Action Menu

The web configuration interface provides an **Action** drop-down menu. The **Action** menu may be accessed at any time.

Action Menu

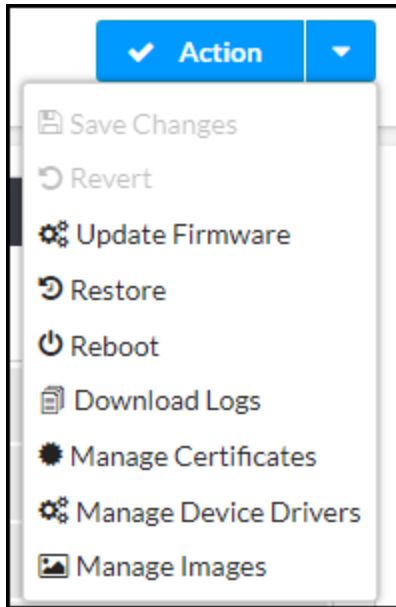

The **Action** menu provides the following selections.

Save Changes

Once any changes have been made to the receiver configuration, the **Action** button becomes a **Save Changes** button. Select **Save Changes** to save changes to the configuration settings.

If a reboot is required after changes have been saved, select **Yes** to reboot the device or **No** to cancel the reboot.

Revert

Select **Revert** to revert the receiver to the last saved configuration settings.


Update Firmware

To upgrade the device firmware manually with a downloaded PUF (package update file), select **Update Firmware**. The **Firmware Upgrade** dialog box opens.

NOTES:

- When first connected, the device may update automatically.
- To push an update manually, visit crestron.com/firmware to download the latest firmware PUF.

Firmware Upgrade Dialog Box

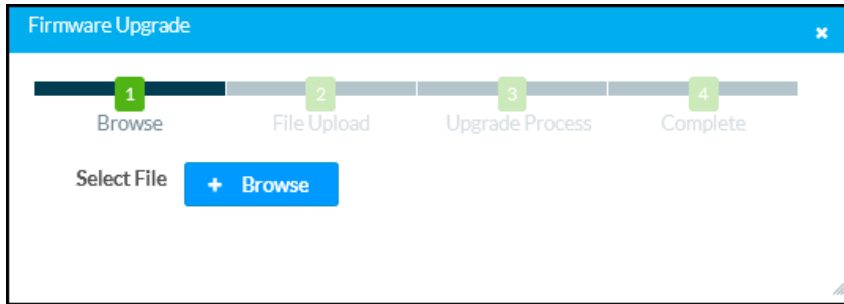

To upload a firmware PUF through the web configuration interface:

1. Select **Browse**, and then navigate to the firmware PUF on the host computer.
2. Select the firmware PUF, and then select **Open**.
3. Select **Load** to load the PUF to the receiver. The upload progress is shown in the dialog box.
4. Once the device has completed the firmware upgrade, select **OK**.

Select the **x** button to close the **Firmware Upgrade** dialog box. Selecting the **x** button before the PUF is uploaded to the device cancels the upgrade. Once the PUF upload process begins, the dialog box cannot be closed, and the upload process cannot be canceled.

Restore

Select **Restore** to restore the device configuration settings to their default values. Select **Yes** to restore the settings or **No** to cancel the restore.

NOTE: If the device is restored to factory settings, the default user name and password used to configure the device will be restored as well. Any custom user names or passwords will no longer function.

Reboot

Select **Reboot** to reboot the device. Select **Yes** to reboot the device or **No** to cancel the reboot.

Download Logs

Select **Download Logs** to download the device message logs for diagnostic purposes. The message files download as a compressed .tgz file. Once the compressed file is downloaded, extract the message log files to view them.


Manage EDIDs (AM-3200(-WF)(-I) Models Only)

Select **Manage EDIDs** to manage Extended Display Identification Data (EDID) profiles that are installed on the receiver. The **Manage EDIDs** window opens.

Default EDIDs

Select **Default EDIDs** to view EDIDs preinstalled on the receiver.

Manage EDIDs - Default EDIDs Tab

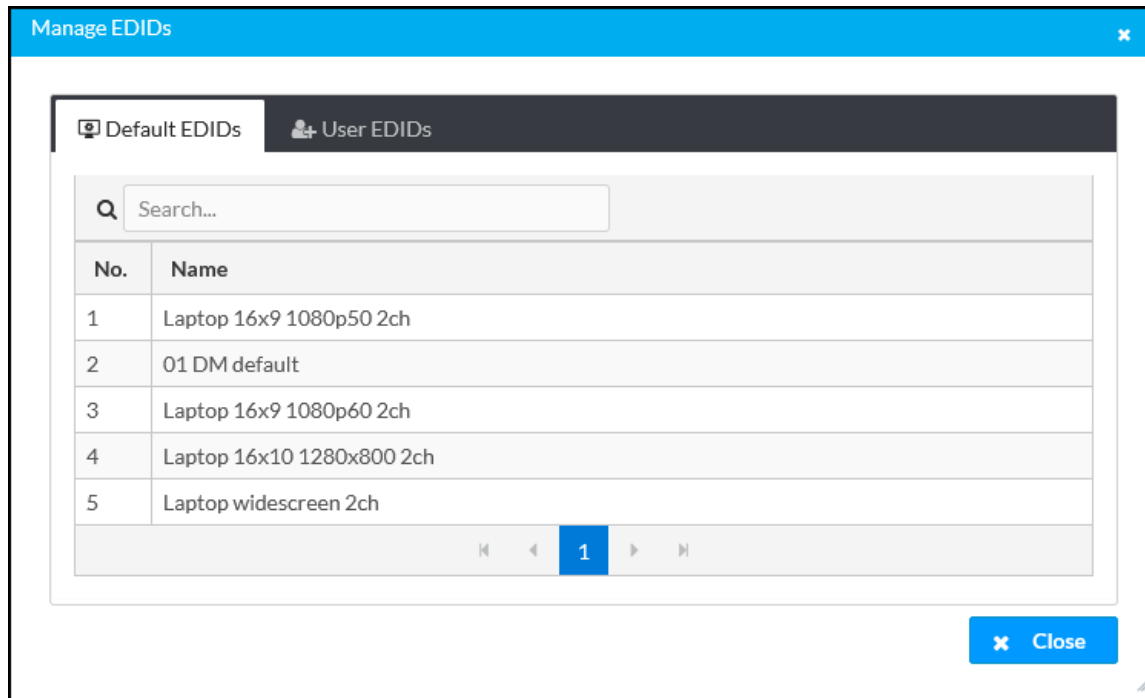

Enter text in the **Search...** field to find and display EDIDs that match the search term(s).

EDIDs are listed in table format. If the EDIDs span multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

Select **Close** to close the **Manage EDIDs** window.

User EDIDs

Select **User EDIDs** to manage EDIDs installed by users.

Manage EDIDs - User EDIDs Tab


The screenshot shows a window titled "Manage EDIDs" with a close button (X) in the top right corner. Inside the window, there are two tabs: "Default EDIDs" and "User EDIDs", with "User EDIDs" being the active tab. Below the tabs is a search bar with a magnifying glass icon and the text "Search...". To the right of the search bar is a blue button with a plus sign and the text "Add EDID". Below the search bar is a table with three columns: "No.", "Name", and "Action". The table is currently empty, and the text "No records found" is displayed in the center. At the bottom of the table, there are navigation arrows and a page number "1". In the bottom right corner of the window is a blue button with a close icon (X) and the text "Close".

Enter text in the **Search...** field to find and display EDIDs that match the search term(s).

EDIDs are listed in table format. If the EDIDs span multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

To upload an EDID file:

1. Select **Add EDID**.
2. Select **Browse**.
3. Navigate to the EDID file on the host computer.
4. Select the EDID file, and then select **Open**.
5. Select **Load** to load the EDID file to the receiver. The upload progress is shown in the dialog box.
6. Once the receiver has completed the upload, select **OK**.

Select the trashcan button  in the **Action** column to delete the EDID. Select **Yes** to delete the EDID or **No** to cancel.

Select **Close** to close the **Manage EDIDs** window.

Manage Certificates

Select **Manage Certificates** to manage any certificates that are installed on the receiver. For more information on certificate management, refer to [802.1x Configuration on page 175](#).


Manage Device Drivers

Select **Manage Device Drivers** to manage any drivers that are installed on the receiver. The **Manage Device Drivers** window appears. Support for CEC, Crestron Connected® control, IP, serial, and infrared profiles are built-in.

Default Drivers

Select **Default Drivers** to view information for the drivers preinstalled on the receiver.

Manage Device Drivers - Default Drivers Tab

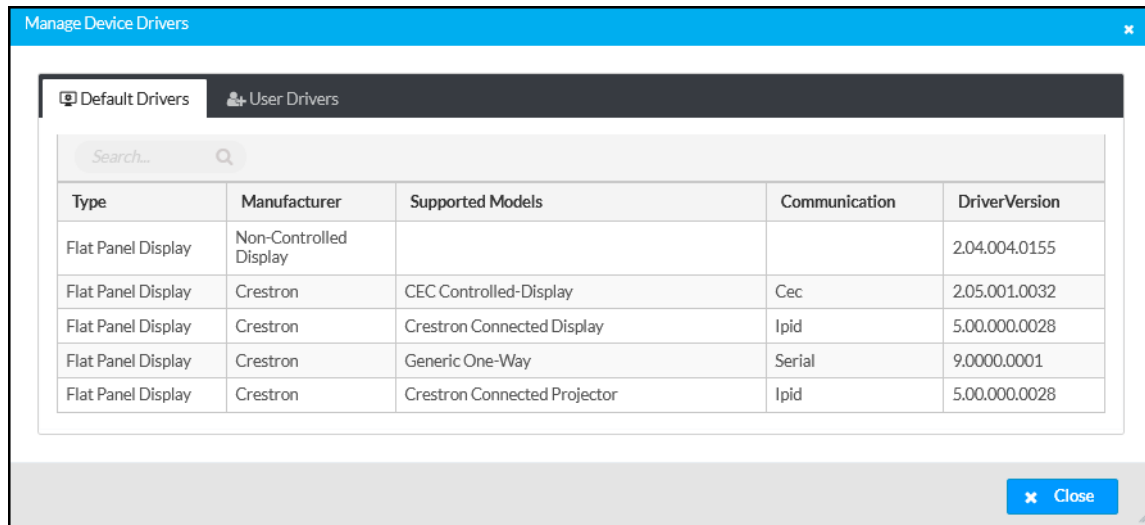

Enter text in the **Search...** field to find and display drivers that match the search term(s).

Drivers are listed in table format. The following information is displayed for each driver:


- **Type:** The supported display type (flat panel display, projector, etc.)
- **Manufacturer:** The driver manufacturer
- **Supported Models:** The display model name
- **Communication:** The driver communication type (Serial/RS-232, IR, IP, CEC)
- **DriverVersion:** The version of the installed driver

Select **Close** to close the **Manage Device Drivers** window.

User Drivers

Select **User Drivers** to manage drivers installed by users.

Manage Device Drivers - User Drivers Tab

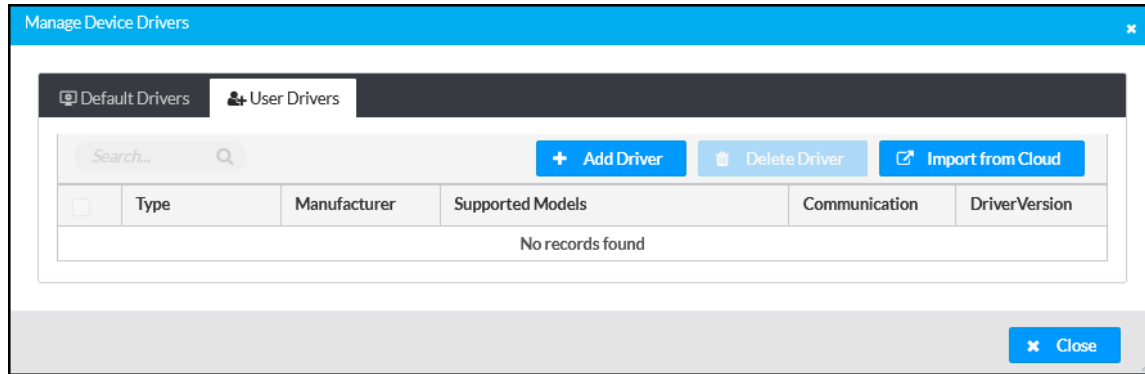

Drivers are listed in table format. The following information is displayed for each driver:

- **Type:** The supported display type (flat panel display, projector, etc.)
- **Manufacturer:** The driver manufacturer
- **Supported Models:** The display model name
- **Communication:** The driver communication type (Serial/RS-232, IR, IP, CEC)
- **DriverVersion:** The version of the installed driver

Select **Close** to close the **Manage Device Drivers** window.

Add Driver

To upload a driver:

1. Select **Add Driver**.
2. Select **Browse**.
3. Navigate to the driver file on the host computer.
4. Select the driver file, and then select **Open**.
5. Select **Load** to load the driver file to the receiver. The upload progress is shown in the dialog box.
6. Once the receiver has completed the upload, select **OK**.

Delete Driver

To delete a driver from the receiver:

1. Locate the driver that you wish to delete in the driver table, and then select the corresponding checkbox.
2. Select **Delete Driver**.
3. Select **Yes** to delete the driver.

Import from Cloud

Crestron maintains a cloud-based driver database. To load drivers to the receiver from the cloud:

1. Select **Import from Cloud**.
2. Enter text in the **Search...** field to find and display drivers that match the search term(s).
3. Locate the driver that you wish to upload to the receiver, and then select the corresponding radio

button .

4. Select **Add** to add the driver to the receiver.

Manage Images

Select **Manage Images** to add or remove images used as custom logo graphics or custom backgrounds.

NOTE: For more details on using custom logo graphics and custom backgrounds, refer to [Connected Devices on page 147](#).

Manage Images

Manage Images

Images Loaded 0 of 20

Storage Capacity 0 of 100 MB

+ Add

✕ Remove

<input type="checkbox"/>	Index	File Name	Status	Preview
	1	<Empty>		
	2	<Empty>		
	3	<Empty>		
	4	<Empty>		
	5	<Empty>		

✕ Close

To add an image to the receiver:

NOTES:

- Up to 20 images can be loaded. The receiver's storage capacity is 100 MB.
- Custom background images should be jpg files with resolutions no higher than 4096 x 2304 pixels. Images with resolutions higher than 4096 x 2304 pixels may exceed the receiver's storage limit when rendered and will inhibit performance.

1. Select **Add**.
2. Select **Browse**, and then navigate to the image file on the host computer.
3. Select the image file, and then select **Open**.
4. Select **Load** to load the image to the receiver.
5. Once the receiver has completed the image upload, select **OK**.

Select the **x** button to close the **File Upload** dialog box at any time during the upgrade process. Selecting the **x** button before the image file is uploaded to the receiver cancels the upload.


Once the image file is uploaded, the file's name, status, and preview will appear in the **Manage Images** table.

To remove an image from the receiver, select the checkbox in the corresponding table row, and then select **Remove**.

Status

Select **Status** to display selections for viewing the status of receiver, network, and control system settings. Select a section name to expand the menu. If the menu is expanded, select the section name again to collapse the section.


Status Screen

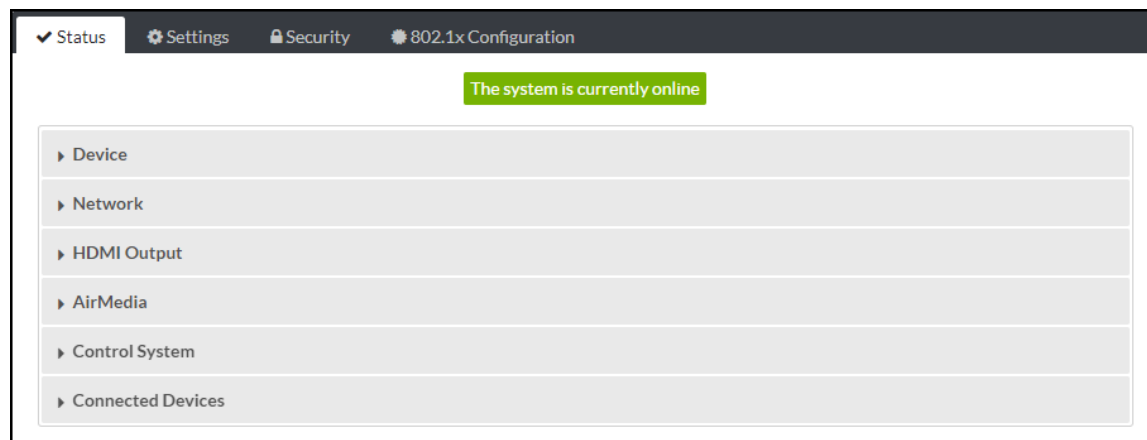

Device

Select **Device** to view general receiver information.

Status – Device

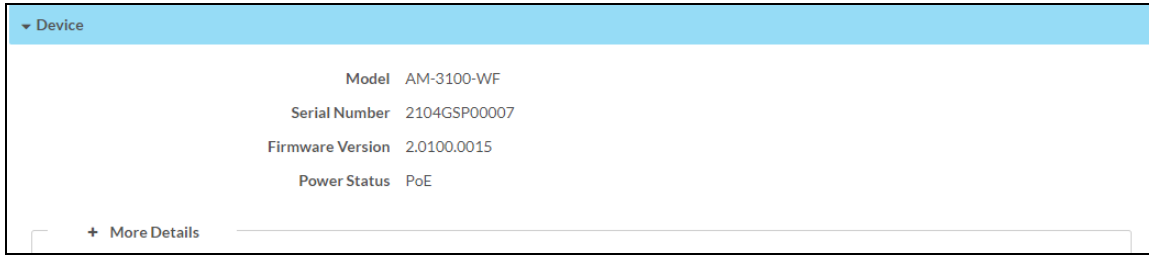

The screenshot shows a web interface with a tab labeled "Device" in a light blue header. Below the header, the following information is displayed:

Model	AM-3100-WF
Serial Number	2104GSP00007
Firmware Version	2.0100.0015
Power Status	PoE

At the bottom of the tab, there is a button labeled "+ More Details" next to a horizontal line.

The following **Device** information is displayed:

- **Model:** The receiver model name.
- **Serial Number:** The receiver serial number.
- **Firmware Version:** The firmware version loaded onto the receiver.
- **Power Status:** Displays how the device is currently being powered (DC, PoE, or PoE+).

Select **+ More Details** at the bottom of the tab to display an expanded section that shows additional information. Select **- More Details** to collapse the section.

Network

Select **Network** to view the status of the network settings for the receiver.

Status – Network

▼ Network

Hostname

AM-3200-WF-000000000000

Domain

hsd1.nj.comcast.net

DNS Servers

75.75.75.75(DHCP),75.75.76.76(DHCP)

– Adapter 1

DHCP

Yes

IP Address

10.0.0.238

Subnet Mask

255.255.255.0

Default Gateway

10.0.0.1

Link Active

True

MAC Address

00.10.7f.ed.7a.6c

+ Adapter 2

– Wireless Access Point

DHCP Enabled

Yes

SSID

IP Address

0.0.0.0

Subnet Mask

0.0.0.0

Default Gateway

0.0.0.0

Link Active

False

MAC Address

00.10.7f.ed.7a.6e

The following **Network** information is displayed:

- **Host Name:** The receiver hostname
- **Domain:** The receiver domain name
- **DNS Servers:** The DNS (domain name server) addresses used to resolve the receiver domain to an IP address

Select the + (plus) icon next to **Adapter 1** and/or **Adapter 2** to view the following DHCP server settings:

- **DHCP:** Reports whether the IP address is dynamic (Yes) or static (No)
- **IP Address:** The receiver IP address
- **Subnet Mask:** The receiver subnet mask
- **Default Gateway:** The gateway router address
- **Link Active:** Reports the status of the Ethernet connection. A true message indicates that the Ethernet connection is active, while a false message indicates that the Ethernet connection is inactive.
- **MAC Address:** The unique device MAC (media access control) address

Select the + (plus) icon next to **Wireless Access Point** to view the following wireless access point settings:

NOTE: Values are shown for the following settings only if a wireless access point is used.

- **DHCP Enabled:** Reports whether the IP address is dynamic (Yes) or static (No)
- **SSID:** The wireless access point network name
- **IP Address:** The wireless access point IP address
- **Subnet Mask:** The wireless access point subnet mask
- **Default Gateway:** The gateway router address
- **Link Active:** Reports the status of the Ethernet connection. A true message indicates that the Ethernet connection is active, while a false message indicates that the Ethernet connection is inactive.

HDMI Input (AM-3200(-WF)(-I) Models Only)

Select **HDMI Input** to view the status of a device connected to the HDMI input.

Status – HDMI Input

▼ HDMI Input	
Sync Detected	No
Resolution	0x0@0
Source HDCP	Inactive
- More Details	
HDCP State	NonHdcpSource
Interlaced	No
Horizontal Resolution	0
Vertical Resolution	0
Frames Per Second	0
Aspect Ratio	No signal
Audio Format	No Audio
Audio Channels	0

The following HDMI Input information is displayed:

- **Sync Detected:** Indicates whether a sync is present between the source connected to the HDMI input and the receiver
- **Resolution:** The resolution of the source connected to the HDMI input
- **Source HDCP:** Indicates whether HDCP is active or inactive

Select **+ More Details** at the bottom of the tab to display an expanded section that shows additional information. Select **- More Details** to collapse the section.

HDMI Output

Select **HDMI Output** to view the status of a display device connected to the HDMI output.

Status – HDMI Output

▼ HDMI Output

– Connected Display

Sink Connected	Yes
Manufacturer	ACI
Name	VE248

– Output Signal

Resolution	1920x1080@60
Disabled by HDCP	No

+ More Details

Select the + (plus) icon next to **Connected Display** to view the following display settings:

- **Sink Connected:** Reports whether or not a display is connected
- **Manufacturer:** The manufacturer name of the display device
- **Name:** The name of the display device

Select the + (plus) icon next to **Output Signal** to view the following output signal settings:

- **Resolution:** The resolution and frame rate of the display device
- **Disabled by HDCP:** Reports whether or not the display signal is disabled by HDCP

Select + **More Details** at the bottom of the tab to display an expanded section that shows additional information. Select - **More Details** to collapse the section.

AirMedia

Select **AirMedia** to view the status of the AirMedia connection.

Status – AirMedia Connection

AirMedia

– Connections

Summary

Status

Presenting

Total Users

2

Connected Users

User Name	Platform/OS	Resolution	IP Address	Status
David	Windows	1920x1080	10.0.0.180	Connected
iPhone	iOS	500x1080	10.0.0.73	Presenting

Select the + (plus) icon next to **Connections** to view the connection settings for devices using AirMedia:

- **Summary:** Reports the status of the device and the total amount of users connected to the receiver
 - **Status:** Reports **Idle** when no users are connected, **Active** when a user is connected but not presenting, and **Presenting** when a user is presenting
 - **Total Users:** The total amount of users with an active connection to the receiver. The receiver supports a maximum of ten simultaneous connections and up to two simultaneous presenters.
- **Connected Users:** Reports the details of all users with an active connection to the device
 - **User Name:** The user name of a connected user
 - **Platform/OS:** The operating system of a connected device
 - **Resolution:** The resolution of a connected device
 - **IP Address:** The IP address of a connected device
 - **Status:** Reports **Idle** when no users are connected, **Active** when the user is connected but not presenting, and **Presenting** when the user is presenting

Control System

Select **Control System** to view the status of the receiver's control system connection.

Status – Control System

▼ Control System

Encrypt Connection OFF

– IP Table

IP ID	Room ID	IP Address/Hostname	Type	Server Port	Connection	Status
No records found						

The following **Control System** information is displayed:

- **Encrypt Connection:** Indicates whether the connection between the control system and the receiver is encrypted
- **IP Table:** Displays the IP table information for the control system connection:
 - **IP ID:** The IP ID used to connect the receiver to a control system
 - **Room ID:** The control system room ID that the receiver is associated with (for connections to the Crestron Virtual Control server-based control system)
 - **IP Address/Hostname:** The control system IP address or hostname
 - **Type:** The control system type
 - **Server Port:** The control system server port
 - **Connection:** The control system connection type
 - **Status:** The control system connection status

Connected Devices

Select **Connected Devices** to view the status of any connected devices such as a display, occupancy sensor, or touch panel.

Select the + (plus) icon next to **Connected Display** to view the following display settings:

Status – Connected Devices (Connected Display)

- Connected Display	
Manufacturer	ACI
Name	Display

- **Detected Manufacturer:** The manufacturer of the connected display
- **Detected Name:** The name given to the connected display

Select the + (plus) icon next to **Network Occupancy Sensor** to view the following occupancy sensor settings:

Status – Connected Devices (Network Occupancy Sensor)

- Network Occupancy Sensor	
Connection Status	NA
Occupancy Status	NA

- **Connection Status:** The occupancy sensor connection status
- **Occupancy Status:** The occupancy status (either **Occupied** or **Vacant**) of the space monitored by an occupancy sensor

Select the + (plus) icon next to **Touch Panel** to view the following touch panel settings:


Status – Connected Devices (Touch Panel)

- Touch Panel	
Connection Status	NA
Model	TSW-1070

- **Connection Status:** The touch panel connection status
- **Model:** The model name of the touch panel

Select the + (plus) icon next to **Conferencing Peripherals** to view the following settings:

Status – Conferencing Peripherals

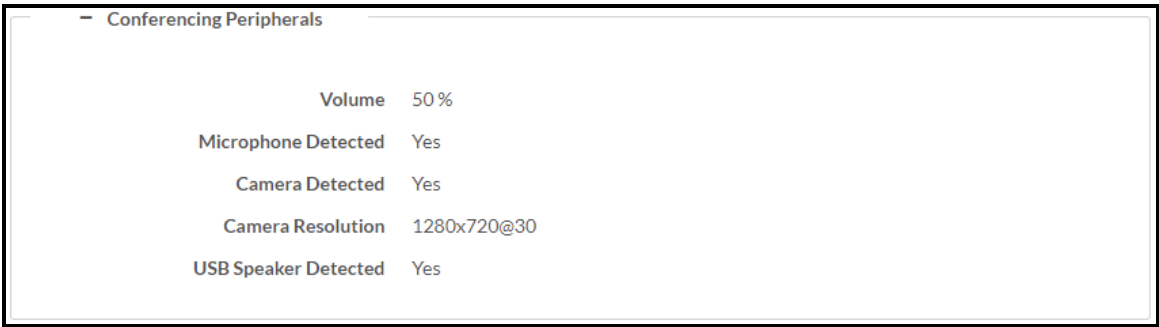

Volume	50 %
Microphone Detected	Yes
Camera Detected	Yes
Camera Resolution	1280x720@30
USB Speaker Detected	Yes


- **Volume:** The maximum allowed volume of connected USB speakers.
- **Microphone Detected:** Indicates whether or not a microphone is connected
- **Camera Detected:** Indicates whether or not a camera is connected
- **Camera Resolution:** The resolution of a connected camera
- **USB Speaker Detected:** Indicates whether or not a USB speaker is connected

Settings

Select **Settings** to configure various device settings. Once any changes have been made to the receiver configuration, the **Action** button becomes a **Save Changes** button. Select **Save Changes** to save changes to the configuration settings. If a reboot is required after changes have been saved, select **Yes** to reboot the device or **No** to cancel the reboot.

Select a section name to expand the menu. If the menu is expanded, select the section name again to collapse the section.


Settings Screen

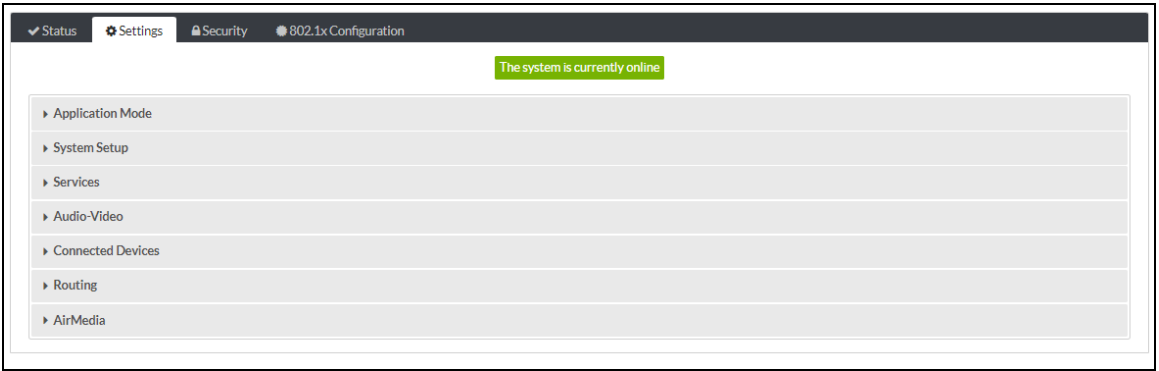

Application Mode

Select **Application Mode** to configure digital signage functionality. The AirMedia receiver can display content from Appspace or a URL.

Settings Screen – Application Mode

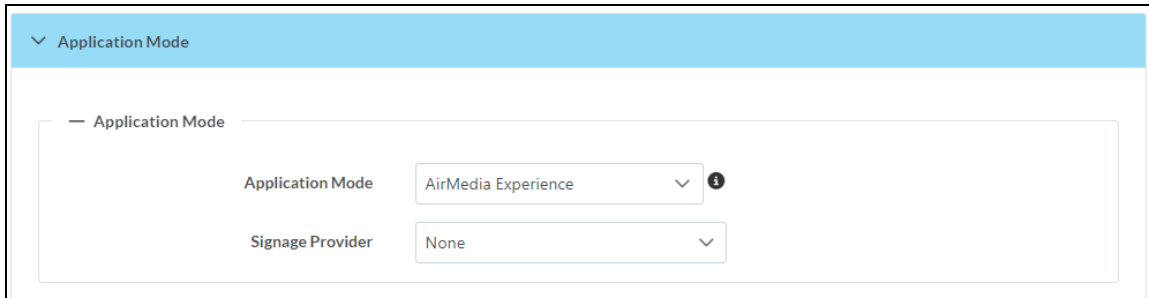

NOTES:

- For best practices when configuring the AirMedia receiver for use with Appspace, visit docs.appspace.com.
- For optimal performance, do not exceed the following resolutions:
 - Cards and images: 3840x2160
 - Videos and Streaming IPTV sources: 1920x1080


- **Application Mode:** Use the drop-down list to select a mode. These modes are detailed in the sections below.
 - **AirMedia Experience**
 - **Signage Only**

NOTE: The drop-down list also contains **AirMedia Experience (Legacy)**, but it is not selectable. This mode is no longer supported and can no longer be configured as an application mode.

AirMedia Experience

This is the standard AirMedia experience.

AirMedia Experience Screen

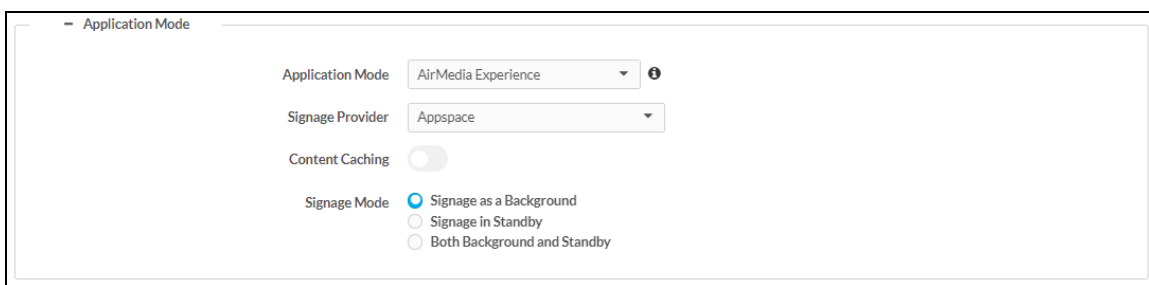


- **Signage Provider:** Select one of the following digital signage options.
 - **Appspace:** Use Appspace.
 - **General Web:** Use a specified URL.
 - **None:** Do not use digital signage.

- **Content Caching (Appspace only):** Only available if a MicroSD card is inserted. Turn on the toggle to allow Appspace to use the MicroSD for content caching. Note the following MicroSD requirements.
 - Format: ExFAT (formatted prior to insertion in AirMedia receiver)
 - Minimum size: 8GB
 - Maximum size: 128GB
 - Partitions: The card must have a partition of at least 4GB. The AirMedia receiver will utilize the largest available partition.
 - Hot Plugging: Hot plugging the MicroSD card is not supported. Reboot the receiver when a card is inserted or removed.
- **Signage Mode:** Select one of the following options.
 - **Signage as a Background:** Display signage content on the Front of Room display when there is no active presentation. The connection instruction tiles will be shown if enabled, but other front of room elements are not shown to avoid overlap with signage content. Background and logo images are not displayed.
 - **Signage in Standby:** Display signage content in full screen when the room is not occupied. The standard Welcome Screen is displayed when the room is occupied and there is no active presentation.
 - **Both Background and Standby:** Enables both options above.
- **Signage URL (General Web only):** Enter the location of the hosted digital signage content.

Signage Only

In this mode, the device will function as a digital signage player. AirMedia functionality is disabled. In this mode, **Power Setting** is forced to **Signage Only**.

Signage Only Screen

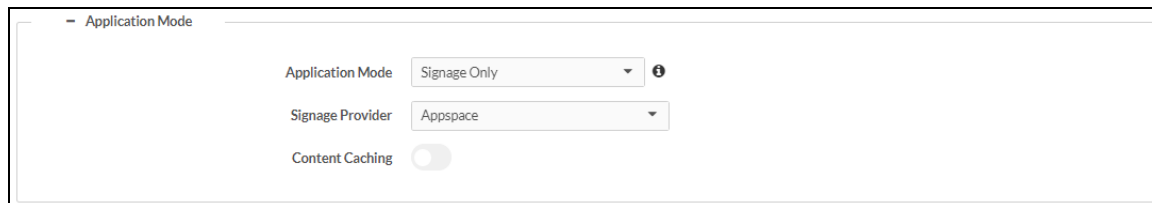

- **Signage Provider:** Select one of the following digital signage options.
 - **Appspace:** Use Appspace.
 - **General Web:** Use a specified URL.

- **Content Caching (Appspace only):** Only available if a MicroSD card is inserted. Turn on the toggle to allow Appspace to use the MicroSD for content caching. Note the following MicroSD requirements.
 - Format: ExFAT
 - Minimum size: 8GB
 - Maximum size: 128GB
 - Partitions: The card must have a partition of at least 4GB. The AirMedia receiver will utilize the largest available partition.
 - Hot Plugging: Hot plugging the MicroSD card is not supported. Reboot the receiver when a card is inserted or removed.


System Setup

Select **System Setup** to modify general, network, power, cloud, update, date/time, and control system settings.

General Settings

Select **General Settings** to configure general device settings.

System Setup – General Settings

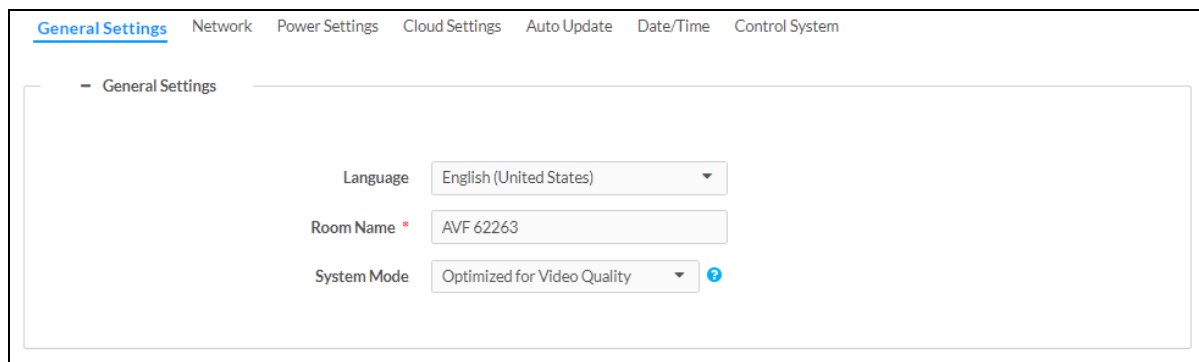

The screenshot shows the 'General Settings' page of the AirMedia receiver interface. At the top, there is a navigation bar with tabs: 'General Settings' (selected), 'Network', 'Power Settings', 'Cloud Settings', 'Auto Update', 'Date/Time', and 'Control System'. Below the navigation bar, the page title is 'General Settings'. The main content area contains three settings: 'Language' with a dropdown menu showing 'English (United States)', 'Room Name' with a text input field containing 'AVF 62263', and 'System Mode' with a dropdown menu showing 'Optimized for Video Quality' and a help icon.

- **Language:** Select the language that will be displayed on the receiver from the drop-down list
- **Room Name:** Enter the room name for the space that the receiver is installed in

- **System Mode:** Select a system mode from the options below to automatically configure some AirMedia settings. For details, refer to [General Settings on page 155](#).

NOTE: Other than **Routing Mode**, these options are forced by the **System Mode** and cannot be adjusted without using **System Mode: Custom**.

- **Optimized for Video Quality:** This mode offers the best quality video, including support for 4K30 presentations when using Connect Adaptors. The following options are set:
 - **AirMedia:** Enabled
 - **AirMedia Canvas:** Enabled
 - **Canvas Session Control:** Enabled
 - **Max Presentation Limit:** 1
 - **Routing Mode** (AM-3000-WF(-I) and AM-3100-WF(I) only): AirMedia Auto-Route only
 - **Routing Mode** (AM-3200-WF(-I) only): Automatic Input Routing
- **Optimized for Multiple Presentations:** This mode enables multiple users to present simultaneously. The following options are set:
 - **AirMedia:** Enabled
 - **AirMedia Canvas:** Enabled
 - **Canvas Session Control:** Enabled
 - **Routing Mode** (AM-3000-WF(-I) and AM-3100-WF(I) only): AirMedia Auto-Route only
 - **Routing Mode** (AM-3200-WF(-I) only): Automatic Input Routing
- **Custom:** This mode allows full configuration of all settings.

Network

Select **Network** to configure the receiver's network settings.

System Setup – Network - 1

The screenshot shows the 'System Setup' menu with 'Network' selected. The 'Network' section is expanded, showing settings for 'Network Adapter 1 - Main' and 'Network Adapter 2 - AUX'. For 'Network Adapter 1 - Main', the 'DHCP' toggle is turned on, and fields for IP Address (10.0.0.238), Subnet Mask (255.255.255.0), and Default Gateway (10.0.0.1) are visible. For 'Network Adapter 2 - AUX', the 'DHCP' toggle is also turned on, and fields for IP Address (192.168.0.101), Subnet Mask (255.255.255.0), and Default Gateway (192.168.0.1) are visible. At the top, there are tabs for General Settings, Network (selected), Power Settings, Cloud Settings, Auto Update, Date/Time, and Control System. Below the tabs, there are fields for Hostname (AM-3200-7D60-B-5050) and Domain (hsd1.nj.comcast.net), and a toggle for SSH which is turned on. Below these are fields for Primary Static DNS and Secondary Static DNS.

- **Host Name:** Enter the receiver host name (22 characters or less).
- **Domain:** Enter the fully qualified domain name on the network (optional). This field is prefilled when the **DHCP** toggle is turned on.

NOTE: A host name and domain name can act as an alternative to IP addressing for connecting client computers to the device.

- **SSH:** Turn on the toggle to enable Secure Shell protocol (SSH).
- **Primary Static DNS:** Enter the primary DNS address.
- **Secondary Static DNS:** Enter the secondary DNS address.

- **Network Adapter 1 - Main** and **Network Adapter 2 - AUX**

NOTE: Network Adapter 2 - AUX settings are unavailable on AM-3100-WF(-I) models.

- **DHCP:** Turn on the toggle to use DHCP for the Ethernet connection. When enabled, the IP address, subnet mask, and default gateway settings are automatically filled. If the toggle is off, these settings must be entered manually.
- **IP Address:** Enter the receiver IP address on the network. This field is prefilled when the DHCP toggle is on.
- **Subnet Mask:** Enter the device subnet mask address on the network. This field is prefilled when the DHCP toggle is on.
- **Default Gateway:** Enter the gateway router address on the network. This field is prefilled when the DHCP toggle is on.

System Setup – Network - 2

Wireless Access Point

Wireless Access Point Mode

☒

Name/SSID *

ConnorAM3200

Security Key *

••••••••

Security

WPA2

▼

Wireless Client Connectivity

Internet Only

▼

Auto Launch AirMedia Landing Page

☐

WiFi Mode

5GHz Only

▼

2.4GHz Channel

Auto

▼

5GHz Channel

Auto

▼

2.4GHz Signal Strength

100 %

▼

5GHz Signal Strength

100 %

▼

- **Wireless Access Point:** The device can be used as a Wireless Access Point (WAP) so that users can present wirelessly without using a corporate Wi-Fi network.

NOTES:

- Wireless Access Point functionality is not available on the AM-3200. It is only available on Wi-Fi network capable AirMedia receivers.
- Wireless Access Point will be broadcast if Miracast is enabled.

- **Wireless Access Point Mode:** Turn on the toggle to enable the receiver to operate as a Wireless Access Point
- **Name/SSID:** Enter a name for the wireless network.
- **Security Key:** Enter a security key to connect to the wireless network.

NOTE: The wireless network name and security should each be 22 characters or fewer for optimal presentation on a display device and/or a connected touch screen.

- **Security:** Select an encryption key type to be used by the wireless network.

NOTE: When WPA2 is selected, WPA2-PSK is used by default for security key encryption.

- **Wireless Client Connectivity:** Select one of the following modes to configure connectivity available for clients connected to the Wireless Access Point. Clients will always have access to the AirMedia receiver for presentation purposes.
 - **Isolated:** Blocks access to both the internet and the local network.
 - **Internet Only (Ports 80 and 443):** Allows access to the internet only over ports 80 and 443.
 - **Internet Only:** Allows access to the internet.
 - **Local Network and Internet:** Allows access to both local network resources and the internet.

NOTES:

- By default, wireless client connectivity is set to **Isolated**, providing the highest level of security.
- The term "local network" refers to the following private IP address ranges: 10.0.0.0/8, 172.16.0.0/12, and 192.168.0.0/16.

- **Auto Launch AirMedia Landing Page:** Turn on the toggle to automatically launch a web browser and redirect the user to the AirMedia landing page upon connection to the wireless access point.
- **WiFi Mode:** Select **2.4GHz Only** or **5GHz Only** from the drop-down list to use either a 2.4GHz or 5GHz frequency band.

- **2.4GHz Channel:** Select the channel number. If **5GHz Only** is selected in the **WiFi Mode** field, then this field will not be editable.
- **5GHz Channel:** Select the channel number. If **2.4GHz Only** is selected in the **WiFi Mode** field, then this field will not be editable.

NOTE: Set either channel to **0 (Auto)** to enable automatic channel selection.

- **2.4GHz Signal Strength:** Select the signal strength for the 2.4GHz frequency band. If **5GHz Only** is selected in the **WiFi Mode** drop-down list, then the signal strength for the 2.4GHz band will automatically be set to 0.
- **5GHz Signal Strength:** Select the signal strength for the 2.4GHz frequency band. If **2.4GHz Only** is selected in the **WiFi Mode** drop-down list, then the signal strength for the 5GHz band will automatically be set to 0.

System Setup – Network - 3

The screenshot shows a web interface for configuring network proxy settings. It is organized into three main sections: Network Proxy Settings, HTTP Settings, and HTTPS Settings. Each section contains a toggle switch to enable or disable the proxy, followed by input fields for the proxy address, port, username, and password. The 'HTTP Proxy' and 'HTTPS Proxy' toggles are currently turned off. The 'HTTP Proxy Port' and 'HTTPS Proxy Port' fields are set to 0, indicating that the default ports will be used.

Section	Setting	Value / State
Network Proxy Settings	Proxy	Off
	HTTP Proxy	Off
HTTP Settings	HTTP Proxy Address	
	HTTP Proxy Port	0
	Username	
	Password	
	HTTPS Proxy	Off
HTTPS Settings	HTTPS Proxy Address	
	HTTPS Proxy Port	0
	Username	
	Password	

- **Network Proxy Settings**
 - **Proxy:** Turn on the toggle to configure the device for use with a proxy server.
- **HTTP Settings**
 - **HTTP Proxy:** Turn on the toggle to allow the device to use an HTTP proxy server.
 - **HTTP Proxy Address:** Enter the IP address or the FQDN of the HTTP proxy server.
 - **HTTP Proxy Port:** Enter the port number of the HTTP proxy server.
 - **Username:** Enter the username required for the HTTP proxy server.
 - **Password:** Enter the password required for the HTTP proxy server.
- **HTTPS Settings**
 - **HTTPS Proxy:** Turn on the toggle to allow the device to use an HTTPS proxy server.
 - **HTTPS Proxy Address:** Enter the IP address or the FQDN of the HTTPS proxy server.
 - **HTTPS Proxy Port:** Enter the port number of the HTTPS proxy server.
 - **Username:** Enter the username required for the HTTPS proxy server.
 - **Password:** Enter the password required for the HTTPS proxy server.

Power Settings

Select **Power Settings** to configure the receiver's power settings.

System Setup - Power Settings

▼ System Setup

General Settings

Network

Power Settings

Cloud Settings

Auto Update

Date/Time

Control System

— Power Settings

Power Mode

Business Hours + Occupancy ... ▼ ⓘ

Enabled	Day	On Time	Off Time
<input checked="" type="checkbox"/>	Sunday	00:00	23:59
<input checked="" type="checkbox"/>	Monday	00:00	23:59
<input checked="" type="checkbox"/>	Tuesday	00:00	23:59
<input checked="" type="checkbox"/>	Wednesday	00:00	23:59
<input checked="" type="checkbox"/>	Thursday	00:00	23:59
<input checked="" type="checkbox"/>	Friday	00:00	23:59
<input checked="" type="checkbox"/>	Saturday	00:00	23:59

The **Power Mode** setting allows the receiver to go to sleep based on business hours and/or room occupancy.

Select a **Power Mode** option from the drop-down list:

NOTE: Business Hours + Occupancy Based is the default setting.

- Select **Business Hours + Occupancy Based** to wake the receiver during business hours and whenever the room is occupied. This applies the following behavior:
 - The display device is on and the receiver is awake during business hours. Define business hours using the table:
 - **Enabled:** Turn the toggle on to include the day in the business hours schedule.
 - **On Time:** Enter the time of day (in 24-hour format) when business hours begin.
 - **Off time:** Enter the time of day (in 24-hour format) when business hours end.

NOTE: When the **On Time** and **Off Time** settings are set to **00:00** and **23:59** respectively, the display device is on and the receiver is awake all day.

- The touch screen is always on.
 - Crestron Fusion power events are ignored.
 - If room occupancy or vacancy is detected outside of business hours, the receiver wakes up or goes to sleep accordingly.
 - Virtual button power events are allowed.
 - If an HDMI sync is detected outside of business hours, the receiver wakes up.
 - An AirMedia connection does not wake the receiver.
- Select **Occupancy Based** to wake the receiver whenever the room is occupied. This applies the following behavior:
 - The connected occupancy sensor determines when the room is occupied or vacant.
 - If room vacancy is detected, the receiver goes to sleep.
 - If room occupancy is detected, the receiver wakes up.
 - If the display device is configured as a controlled display device, it powers on when the room is occupied and powers off when the room is vacant.
 - The touch screen is on when the room is occupied and off when the room is vacant.
 - Crestron Fusion power events are permitted.
 - If an HDMI sync is detected, the receiver wakes up.
 - An AirMedia connection does not wake the receiver.

- Select **Signage Only** to show digital signage content during business hours. This applies the following behavior:
 - All user presentation capabilities are disabled.
 - The display device and the receiver will always present digital signage during business hours and turn off outside of business hours. Define business hours using the table:
 - **Enabled:** Turn the toggle on to include the day in the business hours schedule.
 - **On Time:** Enter the time of day (in 24-hour format) when business hours begin.
 - **Off time:** Enter the time of day (in 24-hour format) when business hours end.
- NOTE:** When the **On Time** and **Off Time** settings are set to **00:00** and **23:59** respectively, the display device is on and the receiver is awake all day.
- The connected occupancy sensor determines when the room is occupied or vacant.
 - If room occupancy is detected outside of business hours, the receiver and display device power on. Digital signage is displayed.
 - If room vacancy is detected outside of business hours, the receiver and display device power off.
 - The touch screen is always off.
 - Crestron Fusion power events are permitted.

NOTE: To use the **Signage Only** power mode, use the **Signage Only** application mode.

- Select **Business Hours + Occupancy Based for Signage** to show digital signage content during business hours and whenever the room is occupied. This applies the following behavior:
 - The display device and the receiver will turn on during business hours and turn off outside of business hours. Define business hours using the table:
 - **Enabled:** Turn the toggle on to include the day in the business hours schedule.
 - **On Time:** Enter the time of day (in 24-hour format) when business hours begin.
 - **Off time:** Enter the time of day (in 24-hour format) when business hours end.

NOTE: When the **On Time** and **Off Time** settings are set to **00:00** and **23:59** respectively, the display device is on and the receiver is awake all day.


- The connected occupancy sensor determines when the room is occupied or vacant.
- If room vacancy is detected during business hours, the receiver goes to sleep. Digital signage is displayed.
- If room occupancy is detected during business hours, the receiver wakes up.
- If room vacancy is detected outside of business hours, the receiver and display device power off.
- If room occupancy is detected outside of business hours, the receiver and display device power on.
- The touch screen is on when the room is occupied and off when the room is vacant.
- Crestron Fusion power events are permitted.
- If an HDMI sync is detected, the receiver wakes up.
- An AirMedia connection does not wake the receiver.

NOTE: The **Business Hours + Occupancy Based With Signage** setting must be selected if Appspace is to be used.

Cloud Settings

Select **Cloud Settings** to configure the device's connection to the XiO Cloud® service. By default, the **Cloud Configuration Service Connection** toggle is turned on. For more information on using the XiO Cloud service with an AirMedia receiver, refer to [Enterprise Deployment Options on page 178](#).


System Setup - Cloud Settings

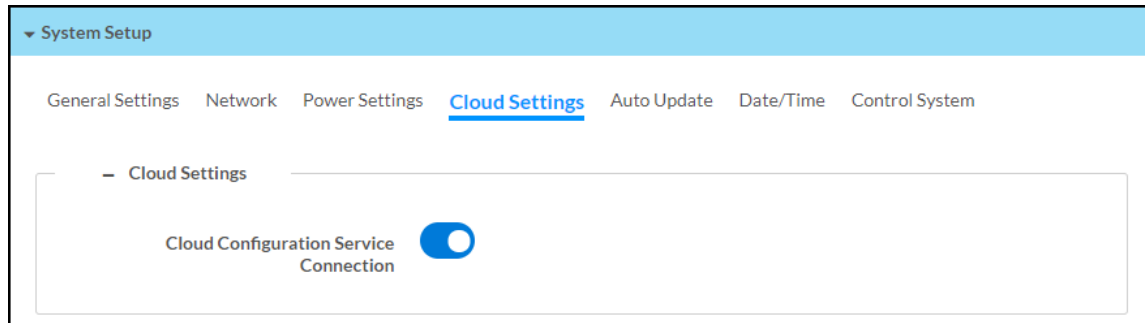

Auto Update

Select **Auto Update** to configure the auto update feature. The auto update feature allows the device to automatically scan for firmware updates and install the updates as needed.

System Setup – Auto Update

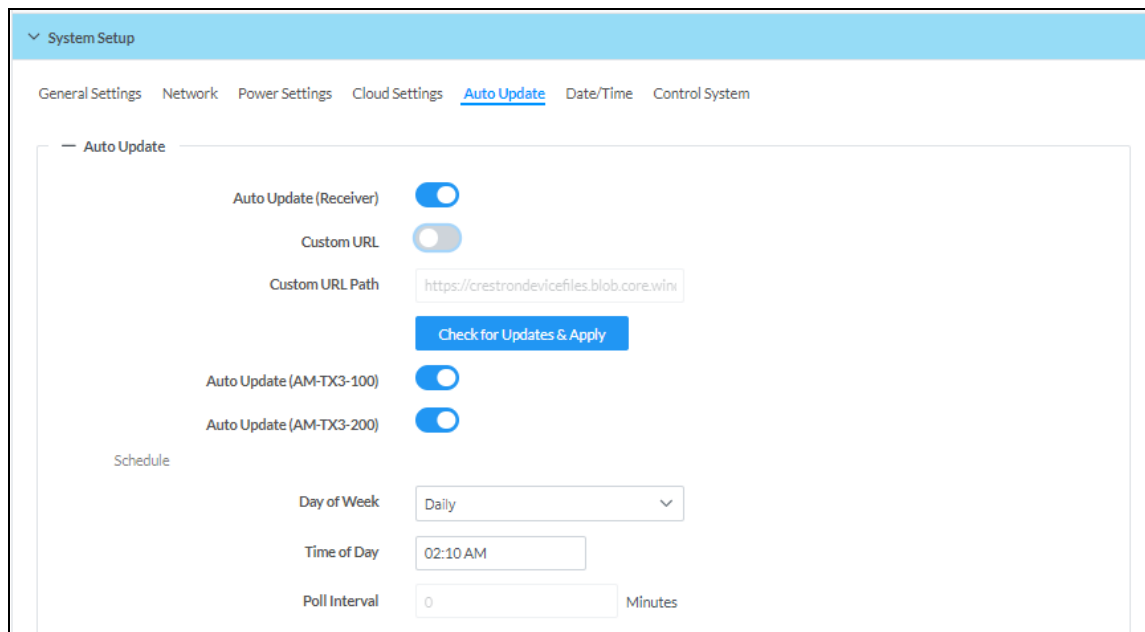

- **Auto Update (Receiver):** Turn the toggle on to allow automatic updates.
- **Custom URL:** Turn the toggle on to use a custom update server URL. If turned off, the server URL will default to the standard Crestron update server.
- **Custom URL Path:** If **Custom URL** is turned on, enter the custom URL path for the update server.
- **Check for Updates & Apply:** Select the button to check for updates and apply them.

- **Auto Update (AM-TX3-100):** Turn the toggle on to allow automatic updates of Connect Adaptors (AM-TX3-100). With this feature enabled, if a firmware update is available and the adaptor is connected, a notification is shown on the room display. Follow the instructions in the notification to initiate the firmware update.
- **Auto Update (AM-TX3-200):** Turn the toggle on to allow automatic updates of Connect Endpoints (AM-TX3-200) With this feature enabled, if a firmware update is available and the endpoint is online, the device will be updated at the configured schedule.
- **Schedule:** Set the schedule for when the device checks for updates.
 - **Day of Week:** Select the day of the week when the device will check for updates. Select **Daily** to have the device check for updates every day.
 - **Time of Day:** Enter a time of day (in 24-hour format) when the device will check updates on the scheduled day.
 - **Poll Interval:** Enter the polling interval (in minutes) for when the device will poll the server for updates.

Date/Time

Select **Date/Time** to configure the settings for the receiver's internal clock.

System Setup – Configure Date/Time

The screenshot shows the 'Date/Time' configuration page within the 'System Setup' menu. The page has a light blue header with the 'Date/Time' tab selected. Below the header, there are navigation links: General Settings, Network, Power Settings, Cloud Settings, Auto Update, Date/Time, and Control System. The main content area is titled 'Date/Time' and contains three sections: Synchronization, NTP Time Servers, and Configuration.

Synchronization

Time Synchronization ☒

[Synchronize Now](#)

NTP Time Servers

<input type="checkbox"/>	Address	Port	Authentication Method	Authentication Key	Key ID
<input type="checkbox"/>	pool.ntp.org	123	None	0

[+ Add](#) [- Remove](#)

Configuration

Time Zone: (UTC - 05: 00) Eastern Time (US & ...)

Date Format: MDY

Time Format: 12

Date: 07/28/2021

Time: 09:06

- **Synchronization:** The receiver's internal clock can be synchronized with a time server.
 - **Time Synchronization:** Turn on the toggle to use time synchronization via SNTP (Simple Network Time Protocol).
 - **Synchronize Now:** With **Time Synchronization** turned on, select **Synchronize Now** to synchronize the receiver with the SNTP server(s) entered in the **NTP Time Servers** table.

- **NTP Time Servers:** With **Time Synchronization** turned on, use the provided table to enter information regarding the SNTP server(s) used to synchronize the date and time for the receiver.
 - Select **Add** to add a new SNTP server entry into the table.
 - Enter the following information for each entry:
 - Enter the SNTP server address into the **Address** text field.
 - Enter the SNTP server port into the **Port** text field.
 - Use the **Authentication Method** drop-down menu to select the authentication method used to access the SNTP server (if one exists).
 - If an authentication method is selected, enter the key used to authenticate against the SNTP server into the **Authentication Key** text field.
 - If an authentication method is selected, enter the ID for the key used to authenticate against the SNTP server into the **Key ID** text field.
 - To remove an entry, fill the checkbox to the left of the table entry, and then select **Remove**.
- **Configuration:** The receiver's internal clock can be configured manually.
 - **Time Zone:** Select a time zone for the receiver using the drop-down menu.
 - **Date Format:** Select the format that the date will appear on the display device using the drop-down menu (**MDY**, **DMY**, or **YMD**).
 - **Time Format:** Select the format that the time will appear on the display device (12 hour or 24 hour).
 - **Date:** Select the date for the receiver using the pop-up calendar that is displayed.

Control System

Select **Control System** to connect and configure a control system with the receiver. The receiver can be controlled by a Crestron control system or by a virtual control system's SIMPL or SIMPL# program.

System Setup – Control System

System Setup

General Settings Network Power Settings Cloud Settings Auto Update Date/Time **Control System**

Control System

Encrypt Connection ☒

Control System Username

Control System Password

IP Table

<input type="checkbox"/>	IP ID	IP Address/Hostname	Room ID
No records found			
<input type="button" value="+ Add"/>		<input type="button" value="x Remove"/>	

- **Encrypt Connection:** Turn the toggle on to use SSL encryption for communication with the control system. SSL can be used with or without a CA certificate. When **Encrypt Connection** is toggled on, the username and password for the control system is required.
- **Control System Username:** The username for the control system.
- **Control System Password:** The password for the control system.
- **IP Table:** Select **Add** to add an IP table connection between the device and the control system.
 - **IP ID:** Enter an IP ID for connecting the device to the control system.

NOTES:


- The control system will search the related ID while entering the IP ID.
 - The IP ID must match the IP ID defined in the control system's SIMPL Windows or SIMPL# program.
- **IP Address/Hostname:** Enter the control system IP address or hostname.
 - **Room ID:** Enter a room ID to associate with the device (for connections with the Crestron Virtual Control server-based control system).

Services

Select **Services** to configure the device's connection with Crestron Fusion® software and/or other calendaring applications.

At the top left corner of the **Services** window, select the + (plus) icon next to **Fusion** to configure the following Crestron Fusion connection settings.

Settings Tab - Services (Fusion)

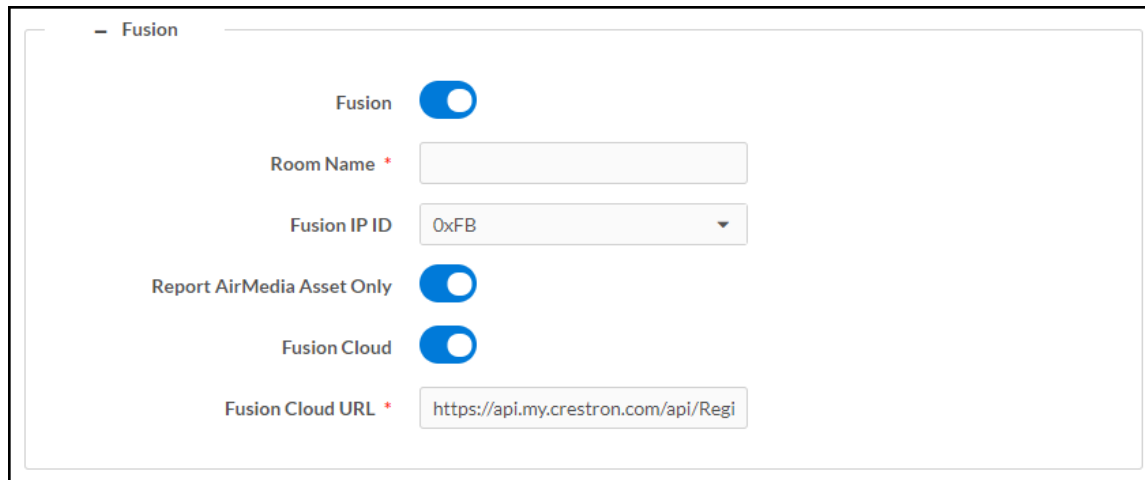

The screenshot shows the 'Fusion' settings window. It contains the following elements:


- Fusion**: A toggle switch that is currently turned on (blue).
- Room Name ***: A text input field.
- Fusion IP ID**: A dropdown menu with '0xFB' selected.
- Report AirMedia Asset Only**: A toggle switch that is currently turned on (blue).
- Fusion Cloud**: A toggle switch that is currently turned on (blue).
- Fusion Cloud URL ***: A text input field containing the URL 'https://api.my.crestron.com/api/Regi'.

- **Fusion**: Turn the toggle on to use Crestron Fusion with the device.
- **Room Name**: Enter the room name to be used by the Crestron Fusion server.
- **Fusion IP ID**: Select the IP ID number to be used by the Crestron Fusion server.
- **Report AirMedia Asset Only**: Turn the toggle on to allow only AirMedia related settings to appear in Crestron Fusion. Turn the toggle off to allow all device settings to appear in Crestron Fusion.
- **Fusion Cloud**: Turn the toggle on and enter the Fusion Cloud URL manually in the **Fusion Cloud URL** field. When **Fusion Cloud** is toggled off, the Crestron Fusion server will use auto-discovery and the **Fusion Cloud URL** field will not appear.

NOTE: Upon completion, the device will be brought into Crestron Fusion software as a processor. For more details on using the device with Crestron Fusion, refer to the Crestron Fusion help file.

Select the + (plus) icon next to **Calendar** to display the following calendaring application settings.

Settings Tab - Services (Calendar)

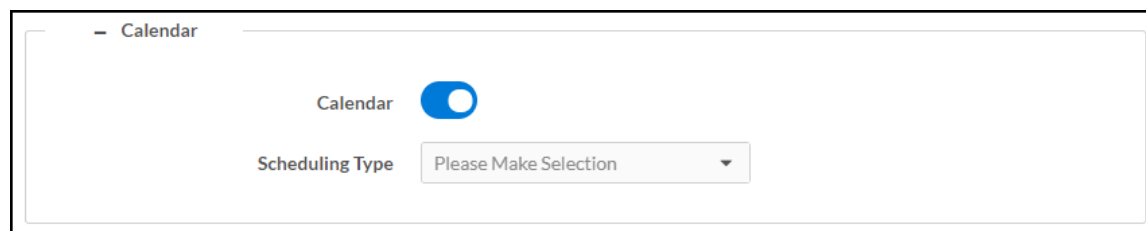

The screenshot shows a settings window titled "Calendar". Inside, there is a toggle switch labeled "Calendar" which is currently turned on (blue). Below it, there is a "Scheduling Type" label followed by a dropdown menu that currently displays "Please Make Selection".


- **Calendar:** Turn the toggle on to use a calendaring application with the AirMedia device.
- **Scheduling Type:** Select a calendaring service from the drop-down menu.

Crestron Fusion Service

To use the device with Crestron Fusion scheduling software:

1. Configure a Crestron Fusion connection as described in [Services on page 138](#).
2. Turn on the **Calendar** toggle.
3. Select **Fusion** from the **Scheduling Type** drop-down menu.
4. Select **Save Changes**. In the **System Initialization** dialog box, select **Yes** to continue. System initialization will occur.

System Initialization

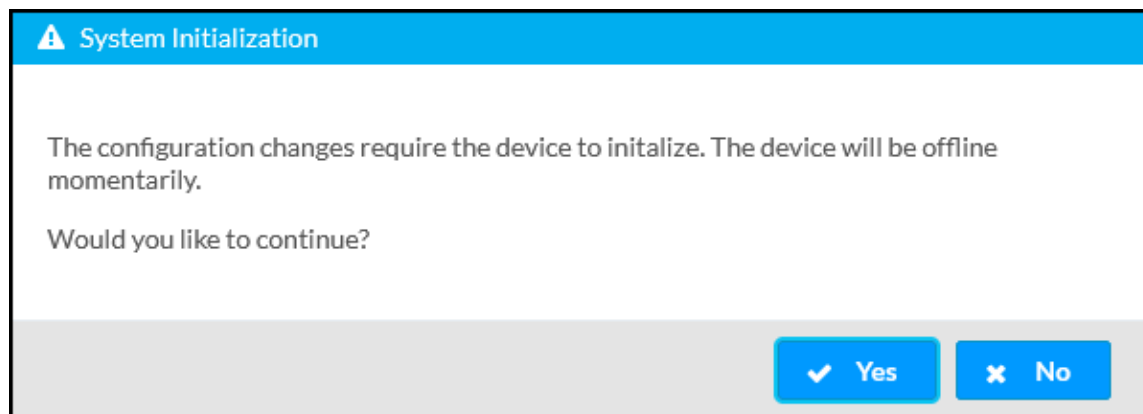


The screenshot shows a "System Initialization" dialog box. The title bar is blue with a white warning triangle icon and the text "System Initialization". The main content area is white and contains the text: "The configuration changes require the device to initialize. The device will be offline momentarily. Would you like to continue?". At the bottom right, there are two buttons: a blue button with a white checkmark and the text "Yes", and a grey button with a white 'X' and the text "No".

Google Calendar Service

To use the device with the Google Calendar service:

1. Turn on the **Calendar** toggle as described in [Services on page 138](#).
2. Select **Google** from the **Scheduling Type** drop-down list to use the Google Calendar™ application for calendar functions.

Calendar Settings – Google Calendar

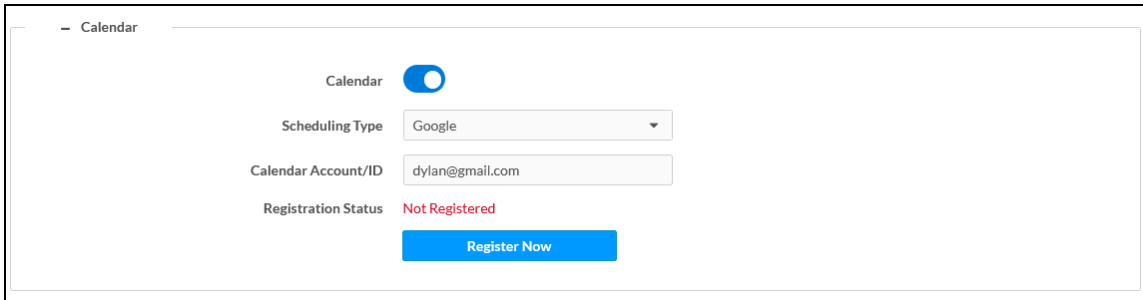

Calendar

Calendar ☒

Scheduling Type Google


Calendar Account/ID dylan@gmail.com

Registration Status Not Registered

Register Now

3. In the **Calendar Account/ID** field, enter the email address attached to the desired Google calendar.
4. Select **Save Changes**. In the **System Initialization** dialog box, select **Yes** to continue. System initialization will occur.

System Initialization

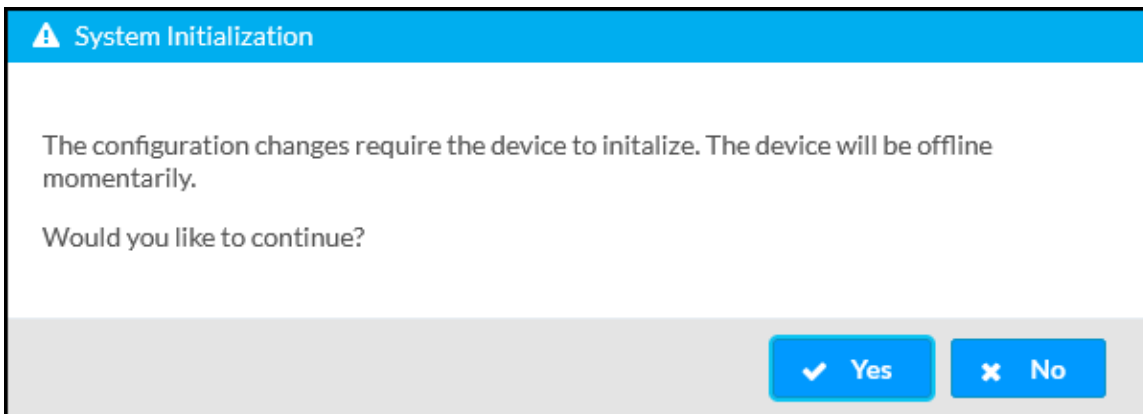


System Initialization

The configuration changes require the device to initialize. The device will be offline momentarily.

Would you like to continue?

✓ Yes ✕ No

5. Select **Register Now**. The **Registration Status**, **Registration URL**, and **Registration Code** fields will appear.

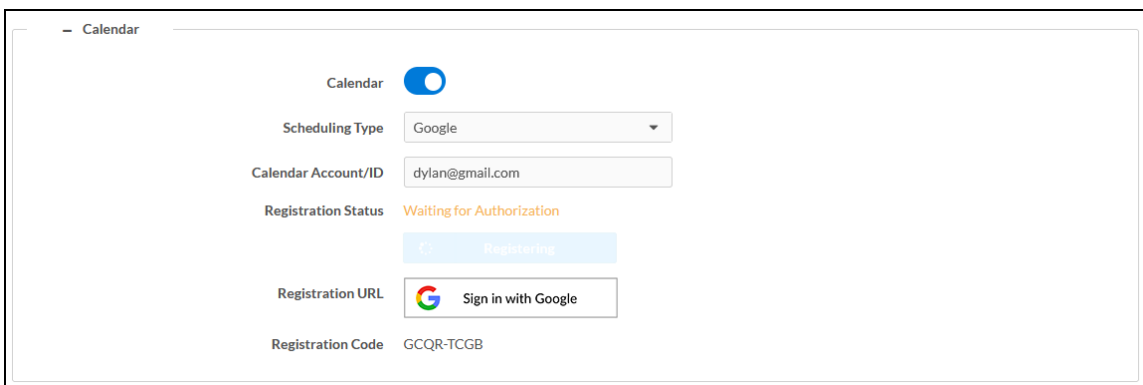

Calendar

Calendar ☒

Scheduling Type Google

Calendar Account/ID dylan@gmail.com

Registration Status Waiting for Authorization

Registering


Registration URL Sign in with Google

Registration Code GCQR-TCGB

6. Copy the code in the **Registration Code** field.

7. In the **Registration URL** field, select **Sign in with Google**. The **Connect a device** screen appears.


Connect a device Screen

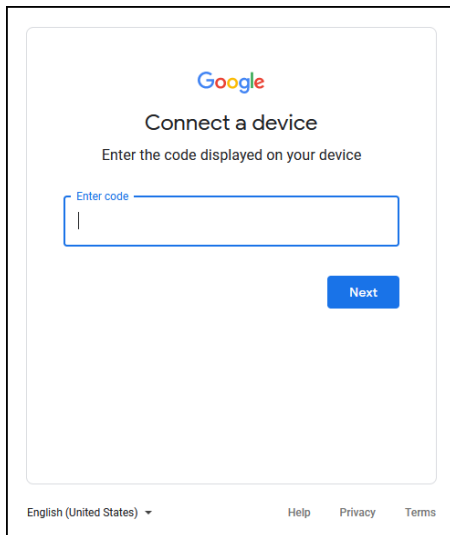The image shows a web interface for connecting a device. At the top is the Google logo. Below it, the text "Connect a device" is centered, followed by "Enter the code displayed on your device". There is a text input field with the placeholder "Enter code" and a blue "Next" button below it. At the bottom, there is a language selector "English (United States)" and links for "Help", "Privacy", and "Terms".

8. Enter the registration code in the **Enter Code** field and select **Next**. The **Choose an account** screen appears.
9. Select an account and sign in with the login credentials.
10. Select **Allow** to complete the process. A success message will be displayed, and the Google Calendar status will be updated.

To disconnect the calendar from the device, select **Unregister** and follow the instructions for activating a new configuration.

Calendar Settings – Google Calendar

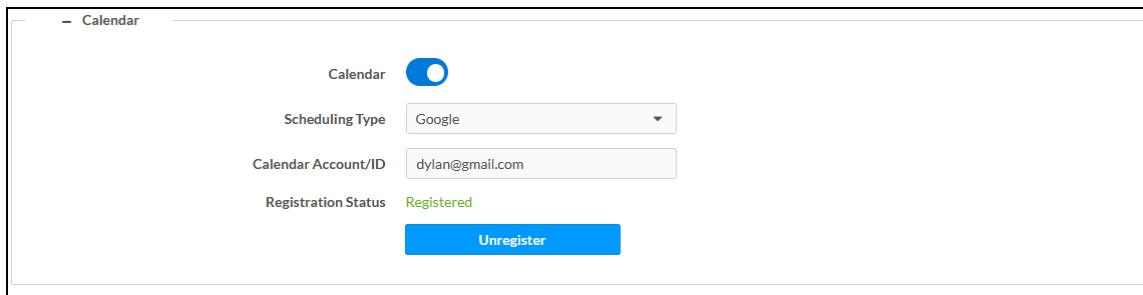
The image shows a settings page for Google Calendar. At the top, there is a toggle switch for "Calendar" which is turned on. Below it, there is a "Scheduling Type" dropdown menu set to "Google". Underneath is a "Calendar Account/ID" field containing the email address "dylan@gmail.com". Below that, the "Registration Status" is shown as "Registered" in green text. At the bottom, there is a blue button labeled "Unregister".

Microsoft Exchange Server and Microsoft 365 Software, Modern Authentication

To use the device with Microsoft Exchange Server and Microsoft 365 Software (Modern Authentication enabled):

1. Turn on the **Calendar** toggle as described in [Services on page 138](#).
2. Select **Exchange/O365** from the **Scheduling Type** drop-down menu.
3. Turn on the **Enable Modern Authentication** toggle.
4. Enter a Client ID in the **Client ID (Application ID)** field.
5. Enter an O365/Microsoft 365 Tenant ID in the **O365 Tenant ID** field.
6. (Optional) Enter the Calendar email address in the **Calendar Email Address** field. The calendar email address is required for accounts using impersonation.


Services – Calendar

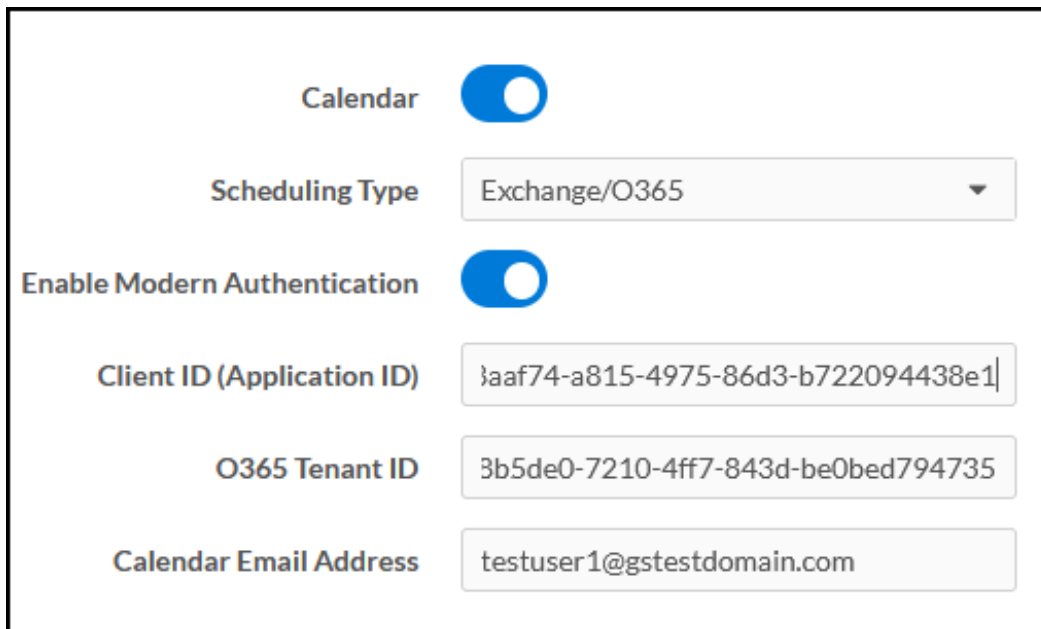

Calendar	<input checked="" type="checkbox"/>
Scheduling Type	Exchange/O365
Enable Modern Authentication	<input checked="" type="checkbox"/>
Client ID (Application ID)	3aaf74-a815-4975-86d3-b722094438e1
O365 Tenant ID	3b5de0-7210-4ff7-843d-be0bed794735
Calendar Email Address	testuser1@gstestdomain.com

7. Select **Save Changes**. In the **System Initialization** dialog box, select **Yes** to continue. System initialization will occur.


8. Select **Register Now**. A code and a Microsoft icon will appear.

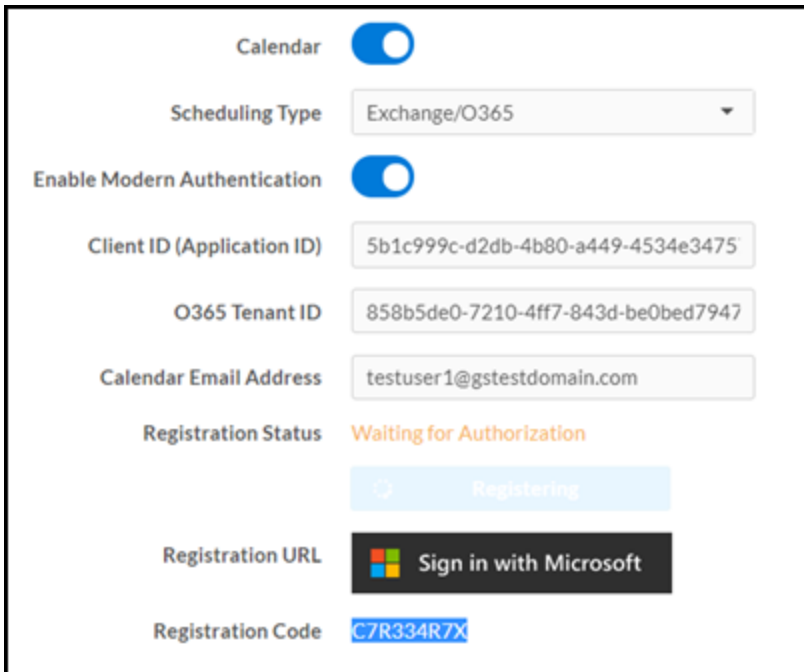

The screenshot shows a registration form with the following fields and controls:

- Calendar**: A toggle switch that is turned on.
- Scheduling Type**: A dropdown menu set to "Exchange/O365".
- Enable Modern Authentication**: A toggle switch that is turned on.
- Client ID (Application ID)**: A text field containing "5b1c999c-d2db-4b80-a449-4534e3475".
- O365 Tenant ID**: A text field containing "858b5de0-7210-4ff7-843d-be0bed7947".
- Calendar Email Address**: A text field containing "testuser1@gstestdomain.com".
- Registration Status**: A label showing "Waiting for Authorization" in orange text.
- Registration URL**: A button with the Microsoft logo and the text "Sign in with Microsoft".
- Registration Code**: A text field containing the code "C7R334R7X".

9. Copy the code in the **Registration Code** field.
10. Select **Sign in with Microsoft** in the **Registration URL** field. An **Enter code** screen will appear.

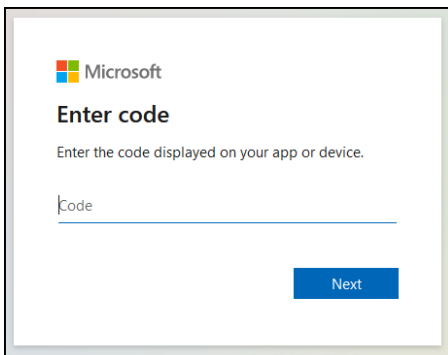


The screenshot shows the "Enter code" screen with the following elements:

- Microsoft logo**: The Microsoft logo is displayed at the top left.
- Enter code**: The title of the screen.
- Enter the code displayed on your app or device.**: A prompt for the user to enter the code.
- Code**: A text input field with a blue underline.
- Next**: A blue button with the text "Next".

11. Enter the registration code and select **Next**.
12. Enter the account credentials to sign in.

13. On first use, a permissions required window will be displayed. Select **Accept**.

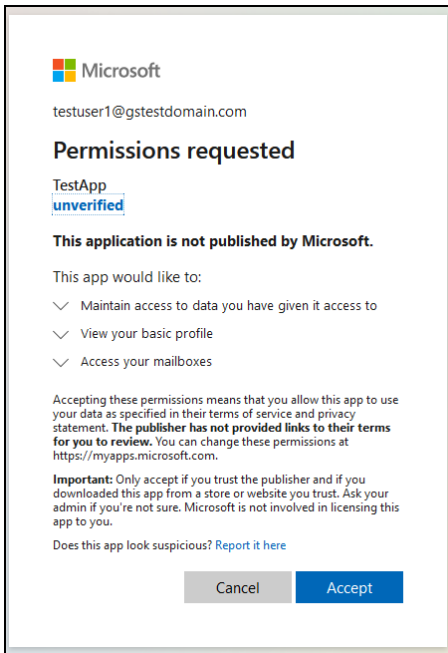

14. Sign in to the Microsoft 365 service. Once signed in, a confirmation message will appear, and the Registration Status will be updated.


To disconnect the calendar from the device, select **Unregister** and follow the instructions for activating a new configuration.

Microsoft Exchange Server and Microsoft 365 Software, Modern Authentication Disabled

To use the device with Microsoft Exchange Server and Microsoft 365 Software (Modern Authentication disabled):

1. Turn on the **Calendar** toggle as described in [Services on page 138](#).
2. Select **Exchange/O365** from the **Scheduling Type** drop-down menu.
3. Turn the **Enable Modern Authentication** toggle off.
4. (Optional) Enter the calendar email address in the **Calendar Email Address** field. The calendar email address is required for accounts using impersonation.
5. Enter the account username in the **Username** field.
6. Enter the account password in the **Password** field.
7. Enter the domain name used by the Exchange server in the **Domain** field.

8. Enter the URL of the Exchange server in the **Exchange Web Services URL** field.

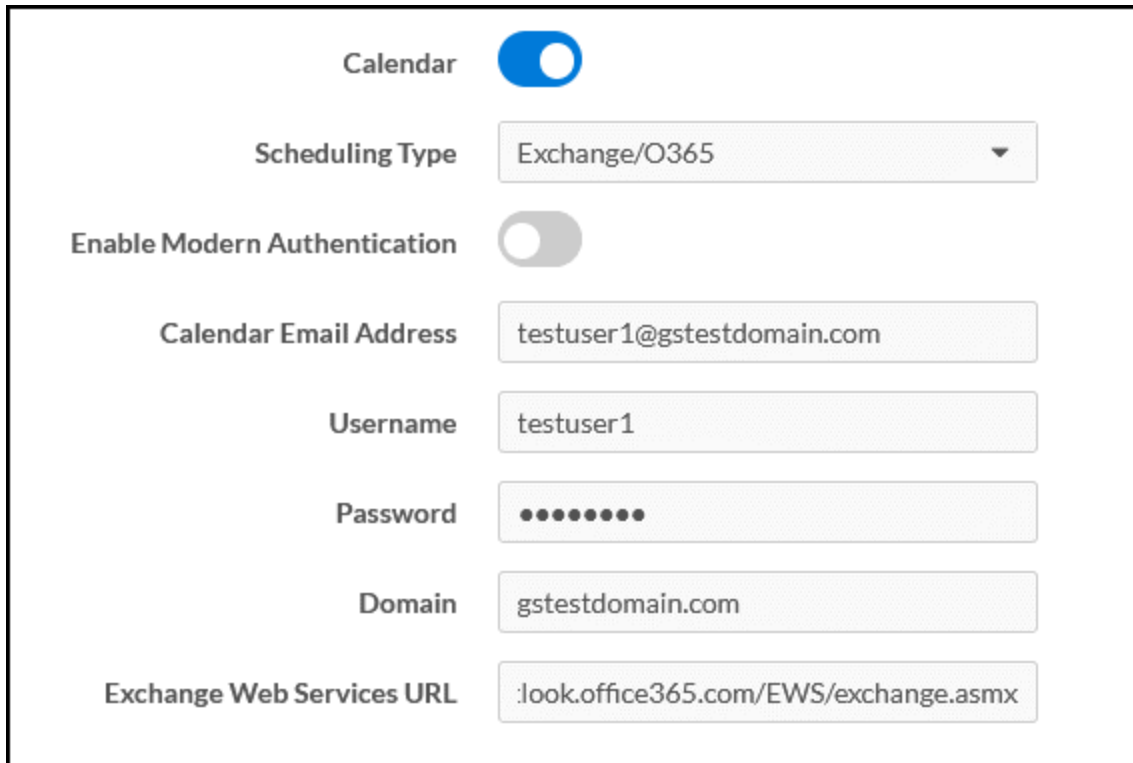

The screenshot shows a configuration window for Exchange Web Services. It includes a 'Calendar' toggle switch that is turned on. Below it is a 'Scheduling Type' dropdown menu set to 'Exchange/O365'. There is an 'Enable Modern Authentication' toggle switch that is turned off. The 'Calendar Email Address' field contains 'testuser1@gstestdomain.com'. The 'Username' field contains 'testuser1'. The 'Password' field is masked with dots. The 'Domain' field contains 'gstestdomain.com'. The 'Exchange Web Services URL' field contains ':look.office365.com/EWS/exchange.asmx'.

9. Select **Save Changes**. In the **System Initialization** dialog box, select **Yes** to continue. System initialization will occur.


To disconnect the calendar from the device, select **Unregister** and follow the instructions for activating a new configuration.

Audio-Video

Select **Audio-Video** to configure settings for the HDMI input port (AM-3200(-WF)(-I) models only) and HDMI output port and to display information about the display device and output signal.

Select the **+** (plus) icon next to **Inputs** to display the following HDMI input settings.

Settings Tab - Audio-Video (Inputs)

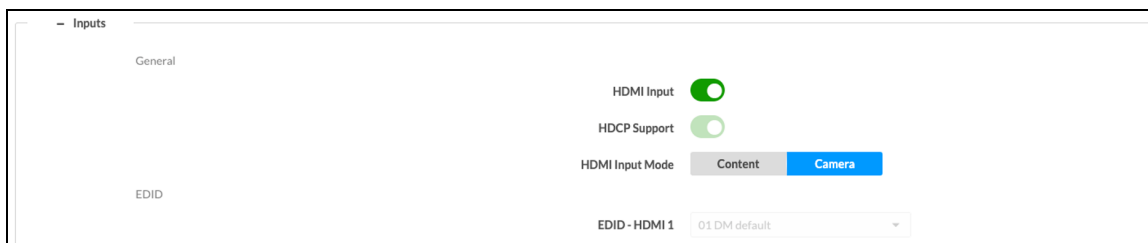

The screenshot shows the 'Inputs' settings tab. It has a 'General' section with 'HDMI Input' and 'HDCP Support' toggle switches, both of which are turned on. Below these is the 'HDMI Input Mode' section with two buttons: 'Content' and 'Camera', where 'Camera' is selected. At the bottom, there is an 'EDID' section with 'EDID - HDMI 1' set to '01 DM default'.

- **General**

- **HDMI Input:** Turn the toggle on to enable the HDMI input port.
- **HDCP Support:** Turn the toggle on to allow source signals that require HDCP compliance to pass through to the display device.
- **HDMI Input Mode:** Select the mode for the HDMI input port.
 - Select **Content** to share content from a personal device through the HDMI input.
 - Select **Camera** to use a connected HDMI camera for Wireless Conferencing.


- **EDID**

- **EDID-HDMI 1:** Select an EDID profile loaded to the receiver to use for the HDMI input.

NOTE: To manage EDID profiles installed on the receiver, refer to [Manage EDIDs \(AM-3200\(-WF\)\(-I\) Models Only\)](#) on page 104.

Select the + (plus) icon next to **Outputs** to display the following HDMI output settings.

Settings Tab - Audio-Video (Outputs)

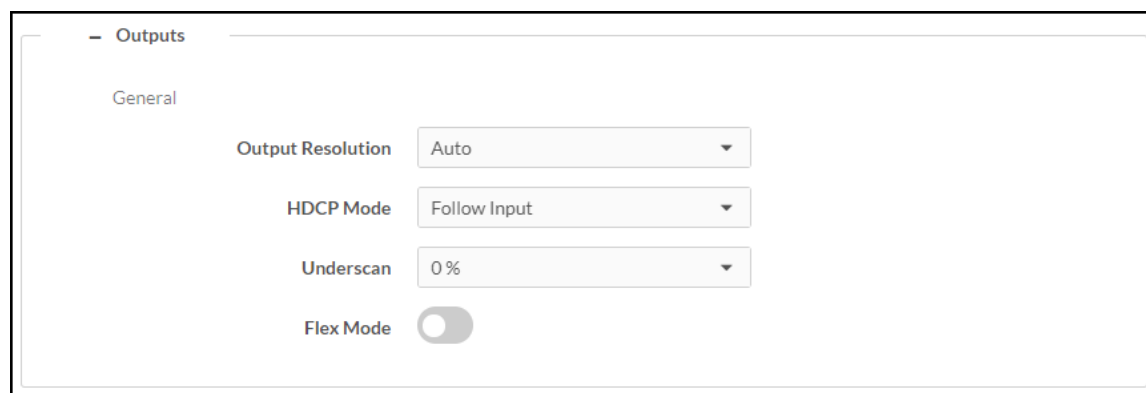A screenshot of the 'Outputs' settings menu in a user interface. The menu is titled 'Outputs' with a minus icon to its left. Below the title is a 'General' section. It contains four settings: 'Output Resolution' with a dropdown menu showing 'Auto'; 'HDCP Mode' with a dropdown menu showing 'Follow Input'; 'Underscan' with a dropdown menu showing '0 %'; and 'Flex Mode' with a toggle switch that is currently turned off.

- **Output Resolution:** Select the output resolution from the drop-down list.
- **HDCP Mode:** Select the HDCP mode from the drop-down list.
 - When **HDCP Mode** is set to **Auto**, the receiver always attempts to use HDCP if support is detected on the display device.
 - When **HDCP Mode** is set to **Follow Input**, the receiver attempts to use HDCP if support is detected on the HDMI input.
 - When **HDCP Mode** is set to **Force Highest**, the receiver attempts to use the latest version of HDCP regardless of whether or not support is detected on the display device.
 - When **HDCP Mode** is set to **Never Authenticate**, the receiver never attempts to use HDCP with downstream devices, regardless of support.
- **Underscan:** Select the amount of underscan to apply to the output signal from the drop-down list. Adjust this setting to improve the readability of text that may be cropped due to overscan or underscan conditions on the display device.

- **Flex Mode:** Turn the toggle on when using the receiver with a Crestron Flex conference system. Flex Mode disables the HDMI output from the AirMedia device unless a source is active.

NOTE: When using the device in Flex Mode, Crestron recommends setting **HDCP Mode** to **Never**. A connected touch screen must be set to communicate to the device at the IP ID **FD**. In **System Setup > Power Settings, Standby Mode** must be set to **Always On** as described in [Power Settings on page 128](#).








 
Connected Devices



Select **Connected Devices** to configure settings for any connected devices such as displays, touch screens, keypads, occupancy sensors, and Wireless Conferencing peripherals.

Settings Screen - Connected Devices

Select the + (plus) icon next to **Connected Devices** to display the following device settings.


Settings Screen – Connected Devices (Connected Devices)

Connected Devices				
Front of the Room Display Touch Panel Settings Display Notifications Conferencing Peripherals				
- Connected Devices				
Name	Type	Model	Status	Actions
POE Occupancy Sensor	Poe	CEN-ODT-C-POE	NA	 
Panel	Touch Panel	TS-1070	Online	 
Display	Video Display	CEC Controlled-Display	NA	 
ZUM-AVBRIDGE-AVB	Zum Bridge	ZUM-AVBRIDGE	Online	 

A list of connected devices is along with each device's **Name, Type, Model,** and **Status** . Select the edit button  to modify the connected device's settings. Select the test driver button  to send commands to a display device to test the driver's functionality.

Occupancy Sensor


AirMedia Series 3 receivers can utilize a [CEN-ODT-C-POE](#) occupancy sensor to enable simple room automation without custom programming. Perform the procedure below to configure the occupancy sensor.


1. Install the CEN-ODT-C-POE. For more information, refer to the CEN-ODT-C-POE [Quick Start Guide](#).
2. Using the AirMedia receiver's web configuration interface, select the edit button  next to the occupancy sensor to select an IP ID for the occupancy sensor.
3. Using the CEN-ODT-C-POE web configuration interface, enter the AirMedia receiver's IP address or hostname as the control system connection, along with the selected IP ID. **Room ID** should remain blank. For more information, refer to the [CEN-ODT-C-POE Supplemental Guide](#).

The occupancy sensor can now be used with the AirMedia Series 3 receiver.

AirMedia Wireless Keypad

AirMedia Series 3 receivers can use a [ZUMMESH-KP10AMBATT](#) AirMedia Wireless Keypad (sold separately) paired to a [ZUMMESH-AVBRIDGE](#) Wireless Control Integration Module (sold separately) for system control. Perform the procedure below to configure the keypad.

1. Follow the installation instructions for the [ZUMMESH-KPT10AMBATT](#) and [ZUMMESH-AVBRIDGE](#).
2. Connect the ZUMMESH-AVBRIDGE to the receiver via USB.
3. In **Connected Devices**, select the ZUMMESH-AVBRIDGE's edit button .
4. Select **Start Acquire** to initiate discovery mode on the ZUMMESH-AVBRIDGE.

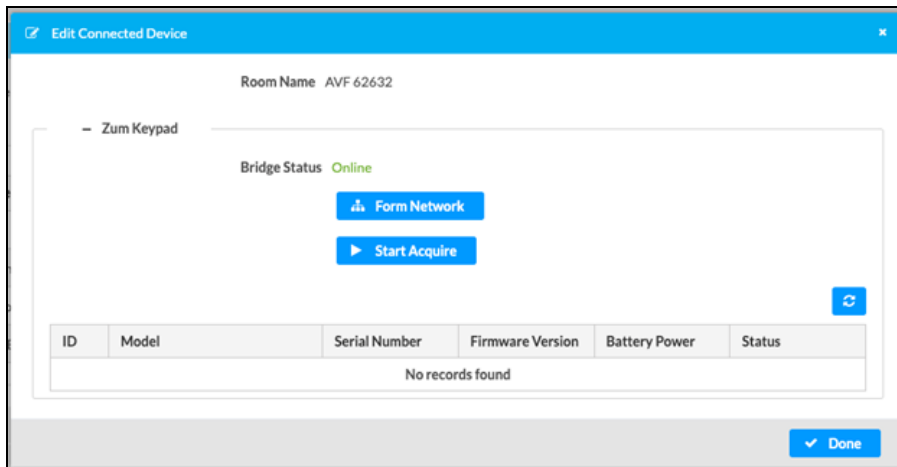

5. On the ZUMMESH-KPT10AMBATT, initiate discovery mode by tapping the **ON** button three times and then pressing and holding it.

Once paired, the keypad will appear on the ZUMMESH-AVBRIDGE's **Edit Connected Device** page and will control the connected display.

Edit Connected Device

Room Name AVF 62632

Zum Keypad

Bridge Status Online

Form Network

Start Acquire


ID	Model	Serial Number	Firmware Version	Battery Power	Status
K01	ZUM-AVKP	23213554	0010000010	<div></div>	

Done

Front of the Room Display

Select the + (plus) icon next to **Front of the Room Display** to display settings for the front of the room experience splash screen.

Settings Screen – Connected Devices (Front of the Room Display)

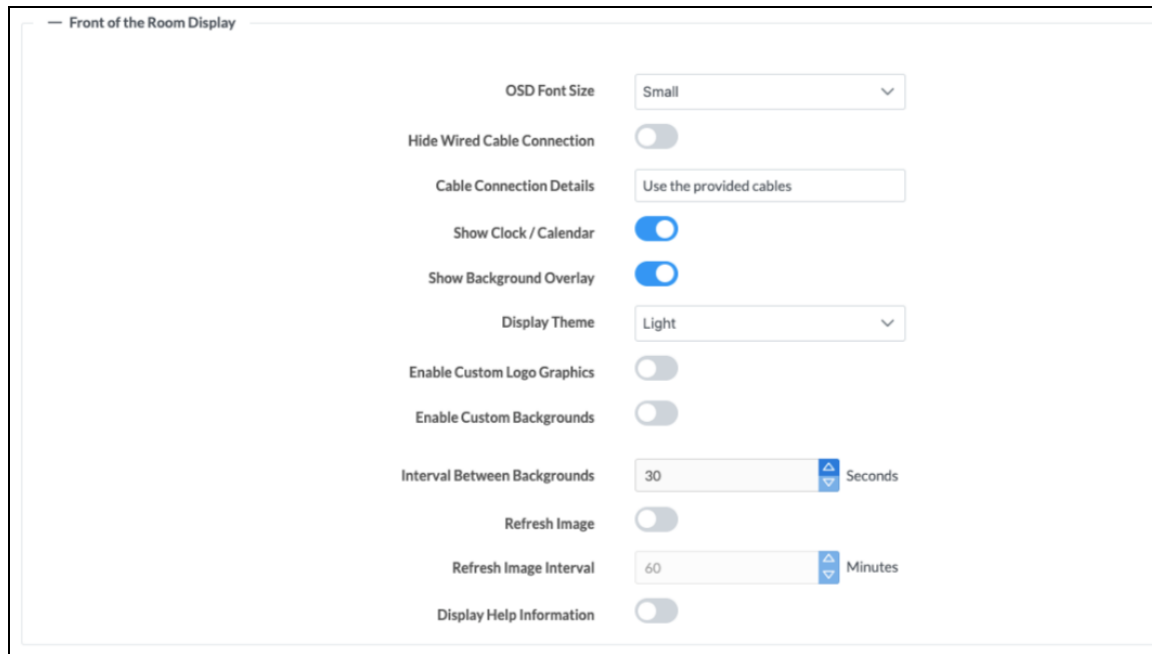

Front of the Room Display

OSD Font Size: Small

Hide Wired Cable Connection: ☐

Cable Connection Details: Use the provided cables

Show Clock / Calendar: ☒

Show Background Overlay: ☒

Display Theme: Light

Enable Custom Logo Graphics: ☐

Enable Custom Backgrounds: ☐

Interval Between Backgrounds: 30 Seconds

Refresh Image: ☐

Refresh Image Interval: 60 Minutes

Display Help Information: ☐

- **OSD Font Size:** Select the font size of the connection bar text on the AirMedia Welcome Screen (**Small**, **Medium**, or **Large**).
- **Hide Wired Cable Connection:** (AM-3200(-WF)(-I) models only) Turn the toggle on to hide wired connection details on the display device.
- **Cable Connection Details:** (AM-3200(-WF)(-I) models only) Enter custom instructions for presenting content using the receiver's wired connection. The instructions will appear on the display device and should be used to guide users.
- **Show Clock / Calendar:** Turn the toggle on to show the clock and calendared events in the center of the display device.
- **Show Background Overlay:** Turn the toggle on to place a monochrome filter over background images.
- **Display Theme:** Select a display theme from the drop-down menu to use a light or dark color scheme on the display device.

- **Enable Custom Logo Graphics:** Turn the toggle on to display a custom logo on the display device. An **Add Logo** option will appear when the change is saved. When the toggle is off, the Crestron logo is displayed.

NOTES:

- The optimal image size for a logo is 600 x 100 pixels. Custom graphics that are smaller or larger than 600 x 100 pixels are scaled to fit on the Front of Room display.
- To manage images stored on the receiver, refer to [Manage Images on page 108](#). Up to 20 images can be stored locally on the receiver at a maximum of 100 MB.
- **Logo and Custom Background Management:** Select **Add Logo** to use a custom image. Choose an image located on a server or upload a custom image.
- **Source:** Select **URL** to use an image located on a server. Enter the URL of the image location in the **Graphic URL** field. Select **File** to upload an image file.
- **Enable Custom Backgrounds:** Turn the toggle on to display a custom background slideshow when the system is not in use. An **Add Logo** option will appear once the change is saved.


NOTES:

- Up to 20 images can be stored locally on the receiver at a maximum of 100 MB. To manage images stored on the receiver, refer to [Manage Images on page 108](#).
- Custom background images should be jpg files with resolutions no higher than 4096 x 2160 pixels. Images with resolutions higher than 4096 x 2160 pixels may exceed the receiver's storage limit when rendered and will inhibit performance.
- The interface has been designed to use most of the screen area for informational purposes. This feature is intended for use with corporate colors, branding, and aesthetics unique to the particular organization and should not be used to add custom instructions for room users.
- **Logo and Custom Background Management:** Select **Add Logo** to upload a custom image. Choose an image located on a server or upload a custom image.
- **Source:** Select **URL** to use an image located on a server. Enter the URL of the image location in the **Graphic URL** field. Select **File** to upload an image file. The image is then added to a list of files in the File drop-down menu. Select the image file from the drop-down menu.
- **Interval Between Backgrounds:** Enter a span of time (in seconds) that each background image is displayed.
- **Refresh Image:** Turn the toggle on to allow the system to periodically download the remotely stored logo and background images from the URLs specified for the custom logo or background.
- **Refresh Image Interval:** Enter the amount of time between downloads (in minutes). The minimum amount of time available is one minute, and the maximum amount of time is 65,535 minutes (about 45 days).
- **Display Help Information:** Turn the toggle on to allow the system to display custom help information. Enter the **Help Information Text** to be displayed.

Touch Panel Settings

Select the + (plus) icon next to **Touch Panel Settings** to display settings for connected touch screens.

Settings Screen – Connected Devices (Touch Panel Settings)

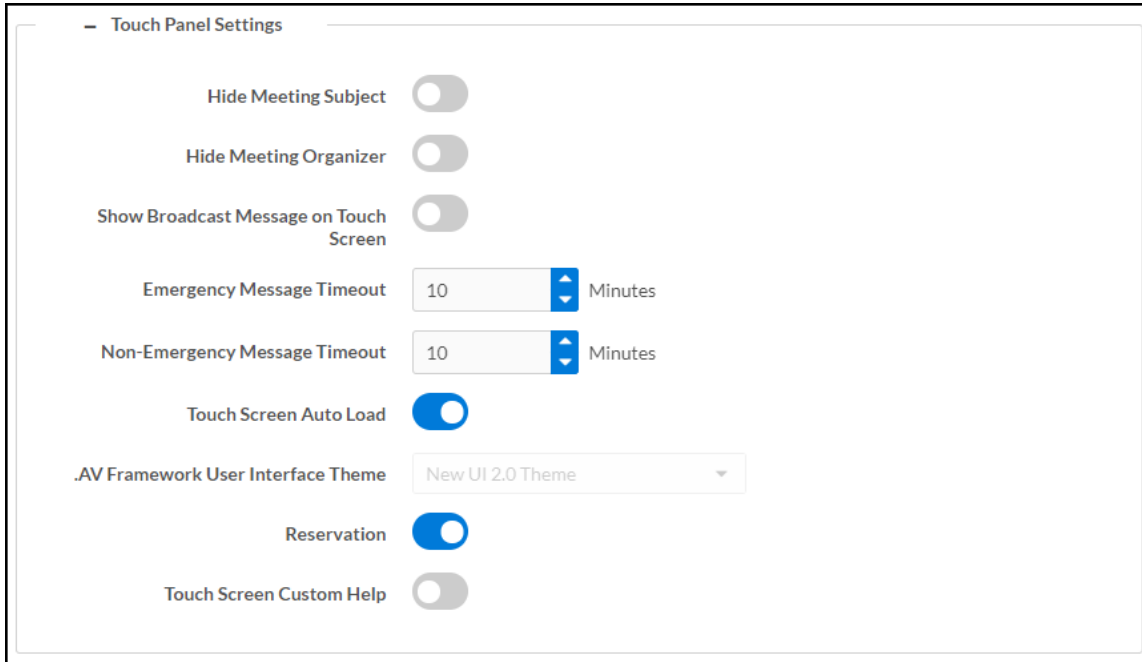

— Touch Panel Settings

Hide Meeting Subject ☐

Hide Meeting Organizer ☐

Show Broadcast Message on Touch Screen ☐

Emergency Message Timeout 10 Minutes

Non-Emergency Message Timeout 10 Minutes

Touch Screen Auto Load ☒

.AV Framework User Interface Theme New UI 2.0 Theme

Reservation ☒

Touch Screen Custom Help ☐

- **Hide Meeting Subject:** Turn the toggle on to hide the meeting's subject on the touch screen.
- **Hide Meeting Organizer:** Turn the toggle on to hide the meeting's organizer on the touch screen.
- **Show Broadcast Message on Touch Screen:** Turn the toggle on to show broadcast messages on the touch screen (broadcast messages are automatically shown on the display device).
- **Emergency Message Timeout:** Enter the number of minutes an emergency broadcast message is displayed on the touch screen.


NOTE: Emergency broadcasts are sent from Crestron Fusion which is to be supported in a future firmware release. For more information on emergency broadcasts, refer to the [Crestron Fusion® Software SSI Model Reference Guide](#) (Doc. 7898).

- **Non-Emergency Message Timeout:** Enter the number of minutes a non-emergency broadcast message is displayed on the touch screen.
- **Touch Screen Auto Load:** Turn the toggle on to allow project files to be pushed to the touch screen from the cloud automatically.
- **.AV Framework User Interface Theme:** For future use.
- **Reservation:** Turn the toggle on to allow calendar reservations from the touch screen.
- **Touch Screen Custom Help:** Turn the toggle on to display a custom help screen when the information button is tapped on the touch screen. A **Custom Help URL** field appears. Enter the image's URL in the **Custom Help URL** field and save the changes.

Display Notifications

Select the + (plus) icon next to **Display Notifications** to reveal settings for how notifications are displayed when an AirMedia device is in use.

Settings screen – Connected Devices (Display Notifications)

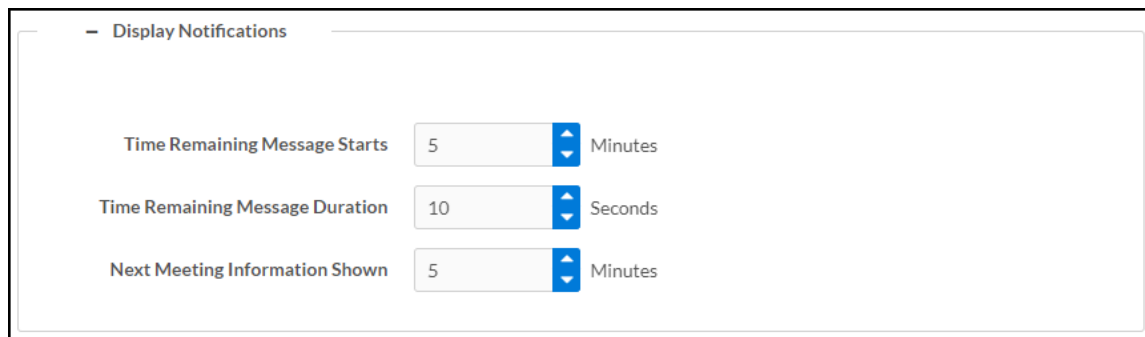

— Display Notifications

Time Remaining Message Starts 5 Minutes

Time Remaining Message Duration 10 Seconds


Next Meeting Information Shown 5 Minutes

- **Time Remaining Message Starts:** Enter the amount of time that must pass (in minutes) before the meeting's time remaining message is displayed.
- **Time Remaining Message Duration:** Enter the amount of time (in seconds) that the time remaining message is displayed.
- **Next Meeting Information Shown:** Enter the amount of time (in minutes) before the next meeting's information is displayed.

Conferencing Peripherals

Select the + (plus) icon next to **Conferencing Peripherals** to display settings and information for connected Wireless Conferencing peripherals.

Settings – Conferencing Peripherals

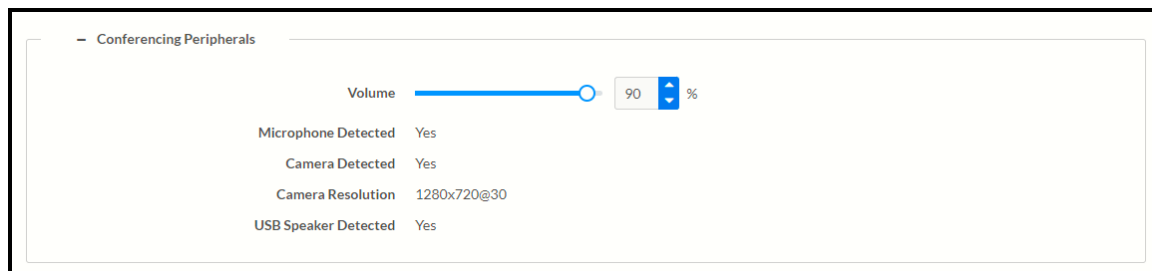

— Conferencing Peripherals

Volume 90 %

Microphone Detected Yes

Camera Detected Yes

Camera Resolution 1280x720@30

USB Speaker Detected Yes

- **Volume:** Controls the maximum allowed volume of connected USB speakers

NOTE: The volume slider will only appear when a supported peripheral device is connected.

- **Microphone Detected:** Indicates whether or not a microphone is connected
- **Camera Detected:** Indicates whether or not a camera is connected
- **Camera Resolution:** The resolution of a connected camera
- **USB Speaker Detected:** Indicates whether or not a USB speaker is connected

Routing

Select **Routing** to configure the order in which devices are routed to the display device upon connection.

Settings Screen – Routing

Icon	Input	Name	Status	Resolution	In Room
	HDMI	Wired	Sync Not Detected		<input checked="" type="checkbox"/>
	AirMedia Wireless Sources	Wireless	0 Devices Connected	-	-
	AirMedia Connect Devices	-	2 Devices Connected	-	-
	AM-TX3-100	AirMedia TX3-c44268!	Offline		-
	AM-TX3-200	AirMedia TX3-c44268:	Online		<input type="checkbox"/>

By default, routing is automatic, meaning the last connected source will be routed to the display device.

Routing Mode: Select one of the following routing modes from the drop-down list.

NOTES:

- When **Automatic Input Routing** or **Priority Routing** is selected, an **In-Room** column displays in the **Audio/Video Routes** table. If an AM-TX3-200 or AM-3200 receiver with the built-in HDMI input is in the room, the **In Room** box will be checked. When no other source is presenting, the **In Room** source displays.
- When two sources have the same priority and are both available, the one that was connected first will be presented.
- **Automatic Input Routing:** Automatically route the last connected source to the display device.
- **Priority Routing:** Dictate the order in which sources are routed. A **Priority** column displays in the **Audio/Video Routes** table.
 - To change the routing order of a device, select a number from the corresponding drop-down list under the **Rank** column. Devices with a lower number rank will take priority over others.
 - To change the name of the source that appears on the touch screen, type a name into the text field under the **Display Name** column in the corresponding row of the device.
- **AirMedia Auto-Route Only:** Automatically route a connected AirMedia source to the display device. Any other sources (HDMI, for example) must be manually routed from the touch screen.

- **AirMedia Dock Upon Connect:** Automatically dock a source once it connects to the AirMedia receiver. When docked, the source does not present but remains connected to the display.

NOTE: The **AirMedia Dock Upon Connect** routing mode is available only for Windows or Android sources.

AirMedia

Select **AirMedia** to configure the device's AirMedia functionality.

AirMedia can support up to 30 simultaneously connected AirMedia application users (Windows or Android operating systems) and a maximum of two native mirroring users (Airplay or Miracast® mirroring). Up to four sources can present to the display simultaneously using the AirMedia Canvas feature. For details on the AirMedia canvas feature, refer to [AirMedia Canvas Functionality on page 157](#).

NOTE: For additional details on deploying AirMedia, refer to the [AirMedia Presentation Gateway Deployment Guide](#) (Doc 7693).

AirMedia Screen - General Settings (Shown in Optimize for Multiple Presentations Mode)

The screenshot displays the 'General Settings' interface for AirMedia. It features a list of settings with toggle switches and dropdown menus. The 'AirMedia' toggle is turned on. 'AirMedia Certificate' is turned off. 'Force Secure Landing Page (HTTPS)' is turned off. 'AirMedia Discovery' and 'Bluetooth Discovery' are both turned on. Under the 'AirMedia Canvas' section, 'AirMedia Canvas' and 'Canvas Session Control' are both turned on. 'Source Types' is set to 'All'. 'Max Presentation Limit' is set to 4. Under 'AirMedia Client Settings', the 'Timeout' is set to 45. Information icons (i) are present next to several toggles.

General Settings

Select the **General Settings** tab to configure settings for AirMedia, the AirMedia Canvas, and Miracast.

NOTE: Options forced by the selected **System Mode** are locked. Hover over ⓘ for details.

- **AirMedia:** Turn the toggle on to enable AirMedia wireless presentation on the AirMedia receiver.
- **AirMedia Certificate:** Turn the toggle on to use a third party certificate to encrypt connections between the sender applications for Windows and Android and the receiver. Load a certificate onto the device as described in [802.1x Configuration on page 175](#).

- **Force Secure Landing Page (HTTPS):** Turn the toggle on to force connecting devices to a secure landing page (HTTPS). When enabled, the web server uses either the certificate loaded in the certificate store (when available) or a self-signed certificate. The AirMedia connection URL will contain HTTPS.
- **AirMedia Discovery:** Turn the toggle on to allow the receiver to be automatically discovered by the AirMedia application on users' personal devices on the local network. When the toggle is turned off, users who wish to use present via AirMedia will be required to manually enter the receiver's IP address or host name.
- **Bluetooth Discovery:** Turn the toggle on to enable Bluetooth discovery for use with AirPlay Screen Mirroring on Apple devices. When the toggle is off, users who wish to present via AirPlay Screen Mirroring must use the AirMedia network discovery or the AirMedia application.

NOTE: Bluetooth Discovery is supported on devices running the following:

- iOS version 16 or later
- iPadOS version 16 or later
- macOS version 13 Ventura or later

- **AirMedia Canvas:** AirMedia Canvas allows multiple sources to present simultaneously on the display. Refer to [AirMedia Canvas Functionality on page 157](#) for more information.
 - **AirMedia Canvas:** Turn the toggle on to enable AirMedia Canvas functionality.
 - **Canvas Session Control:** Turn the toggle on to control the AirMedia Canvas with a paired touch panel using the .AV Framework 2.0 Interface, a computer running the AirMedia client, or an iOS device running the AirMedia app.

NOTES: If **AirMedia Canvas** is disabled, **Canvas Session Control** can remain enabled. In this scenario, session controls are available for all connected users, but only one source can present at a time.

- **Source Types:** Select one of the radio buttons to select which sources can share space on the display. Select **All** to allow all source types (HDMI, AirMedia, Miracast, and AirPlay) to share space on the display. Select **Network Only** to allow only wireless sources (AirMedia, Miracast, and AirPlay) to share space on the display. HDMI sources will present in full screen if selected.
- **Max Presentation Limit:** Select the maximum amount of sources that can present simultaneously.
- **AirMedia Client Settings**
 - **Timeout:** Select an amount of time (in minutes) before an inactive, connected user is automatically disconnected from the receiver. An inactive user is not actively presenting but still connected to the receiver.

AirMedia Canvas Functionality

AirMedia Canvas allows multiple sources to present simultaneously on the display. AirMedia Canvas automatically configures the best possible layout to maximize screen coverage based on the number of active sources, the type of sources, their orientation, and their aspect ratios.

The following sources can share space on a display simultaneously:

- AirMedia (Windows, Android, Mac, iOS, AirPlay/Miracast)

NOTE: The AirMedia extension for Chrome OS is not supported and will only be allowed to present full screen.

- HDMI

NOTE: When the AirMedia Canvas feature is enabled, the 4:2:0 color space is used for high definition sources connected to the HDMI input port. When the AirMedia Canvas feature is disabled, the 4:4:4 color space is used. If the 4:4:4 color space is required by sources connected to the HDMI input port, the AirMedia Canvas should be disabled.

When enabled, AirMedia Canvas works as follows:

- If one source is active, the source presents in full screen.
- If multiple sources are active, the sources present in a way that maximizes screen coverage depending on their aspect ratios.
- When multiple sources are active, and all but one of the sources is disconnected, the single source returns to full screen.
- If the maximum amount of sources is reached and another source is selected, then the first active source is docked (AirMedia user) or disconnected (hard wired inputs, AirPlay connection, or Miracast connection). When docked, the source stops presenting but remains connected to the display.
- When all sources are disconnected, the display shows the front of the room experience splash screen.


When AirMedia Canvas is disabled, the display shows one source at a time.

For details on using a touch screen to control AirMedia Canvas, refer to [AirMedia Canvas on page 217](#). For details on using a computer or iOS device to control AirMedia canvas, refer to [Share Content on page 195](#).

Network Adapter

Select the **Network Adapter** tab to determine the Ethernet ports assigned for use by AirMedia.

AirMedia Screen - Network Adapter

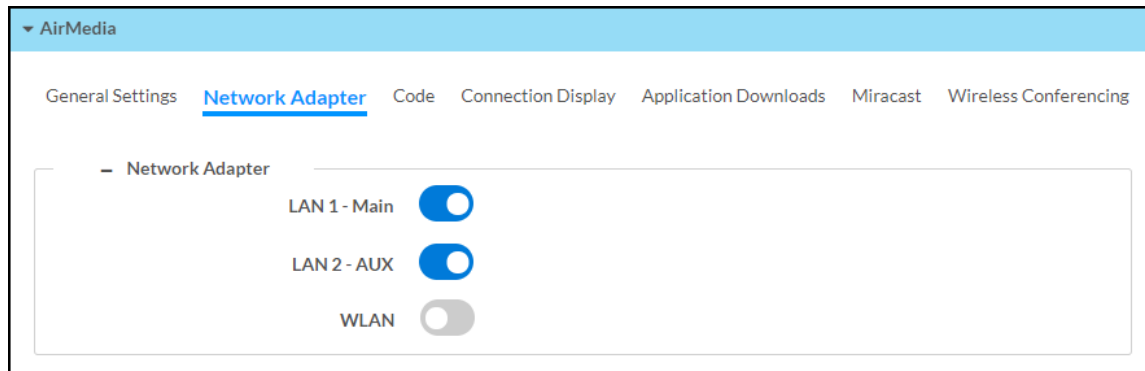

- **LAN 1 - Main:** Turn the toggle on to allow AirMedia connections from the local area network.
- **LAN 2 - AUX:** (AM-3200(-WF)(-I) models only) Turn the toggle on to allow AirMedia connections from a secondary, guest-only local area network. For more information on the second LAN connection, refer to [Dual LAN Functionality \(AM-3200\(-WF\)\(-I\) models only\) on page 158](#).
- **WLAN:** Allow AirMedia connections from the receiver's self hosted Wi-Fi access point (Wi-Fi network enabled models only).

Dual LAN Functionality (AM-3200(-WF)(-I) models only)

AirMedia Series 3 receivers provide dual LAN connectivity for isolated internal and guest networks. Users may present via AirMedia or connect to the receiver's web configuration interface when connected to either network.

The secondary LAN port is intended solely for use with a guest network. The secondary LAN port has limited functionality and does not support the following devices and services:

- XiO Cloud service
- Crestron Fusion software
- Scheduling services (such as Google Calendar or Microsoft 365 software)
- Occupancy sensors
- Touch screen control
- ChromeOS presentation
- Power over Ethernet

Make LAN connections to the receiver as described in the [AM-3200, AM-3200-WF, and AM-3200-WF-I Quick Start guide](#) (Doc. 8986).

Code

Select the **Code** tab to configure the access code that must be entered to present content on the AirMedia receiver.

AirMedia Screen - Code

The screenshot shows the 'AirMedia' settings interface with the 'Code' tab active. It includes a toggle for 'Show Login Code' which is turned on. Below it, the 'Login Code Mode' section has four radio button options: 'Disabled', 'Random (4 Digits)' (which is selected), 'Random (8 Digits)', and 'Fixed (4 Digits)'. At the bottom, there is a text field labeled 'Login Code' containing the value '8822'.

- **Show Login Code:** Turn the toggle on to show the access code on the display device.
- **Login Code Mode:** Select a radio button to specify how the access code is used.
 - **Disabled:** Allows any user with the device's IP address or host name to open a client connection without entering an access code.
 - **Random (4 Digits):** Randomly generates an access code with four digits. A new code is generated when the last connected presenter disconnects from the device. The access code is shown on the display device when AirMedia is selected.
 - **Random (8 Digits):** Randomly generates an access code with eight digits. A new code is generated when the last connected presenter disconnects from the device. The access code is shown on the display device when AirMedia is selected.
 - **Fixed (4 Digits):** Uses a user-specified, four-digit access code. Enter a custom code in the **Login Code** field when **Fixed** is selected.

Connection Display

Select the **Connection Display** tab to configure how AirMedia connection details are shown on a connected display device.

NOTE: For more details on how AirMedia connection details are shown on a display device, refer to [Front of Room Experience on page 192](#).

AirMedia Screen - Connection Display

The screenshot shows the 'Connection Display' settings interface. It includes the following options:

- Show AirMedia Connection Info Overlay:** A green toggle switch, currently turned on.
- Show Apple Screen Mirroring Info:** A green toggle switch, currently turned on.
- Show Miracast Info:** A green toggle switch, currently turned on.
- Show Connect Adaptor Info:** A green toggle switch, currently turned on.
- Primary (LAN) Connection Info:**
 - Show Connection Info:** A green toggle switch, currently turned on.
 - Connection URL Mode:** Four radio buttons: **IP Address** (selected), **Host**, **Host and Domain**, and **Custom**.
 - Custom URL:** A text input field with a red asterisk, currently empty.
- Wireless (WLAN) Connection Info:**
 - Show Connection Info:** A green toggle switch, currently turned on.
 - Info Mode:** A dropdown menu currently set to **Internal**.
 - Connection Info Mode:** Four radio buttons: **IP Address** (selected), **Host**, **Host and Domain**, and **Custom**.
 - Custom URL:** A text input field with a red asterisk, currently empty.


- **Show AirMedia Connection Info Overlay:** Turn the toggle on to show connection information on the display device when a user is presenting.
- **Show Airplay Info:** Turn the toggle on to show Airplay connection information on the display.
- **Show Miracast Info:** Turn the toggle on to show Miracast connection information on the display.
- **Show Connect Adaptor Info:** Turn the toggle on to show Connect Adaptor information on the display.
- **LAN Connection Information**
 - **Show Connection Info:** Turn the toggle on to display connection information on the display device.
 - **Connection URL Mode:** Select one of the radio buttons to decide what connection information is shown on the display device.
 - **IP Address:** Show the IP address used to connect to the receiver.
 - **Host:** Show the host name used to connect to the receiver.
 - **Host and Domain:** Show the host name and domain name used to connect to the receiver.
 - **Custom:** Show a custom URL used to connect to the receiver. Enter the custom URL in the **Custom URL** field.

- **Wireless (WLAN) Connection Info:** The receiver can be configured to show Wi-Fi connection information on the display device.
 - **Show Connection Info:** Turn the toggle on to show Wi-Fi connection information on the display device.
 - **WiFi Info Mode:** Select what Wi-Fi network information to show from the drop-down menu.
 - Select **Internal WiFi Access Point** to show the internal access point's connection information on the display device.
 - Select **Specify WiFi Internal Info** to define and show SSID and connection key information on the display device. Turn on the respective toggles to show SSID and connection key information, and enter the SSID and connection key information into the respective fields.
 - **Connection Info Mode:** Select one of the radio buttons to decide what connection information is shown on the display device.
 - **IP Address:** Show the IP address used to connect to the receiver.
 - **Host:** Show the host name used to connect to the receiver.
 - **Host and Domain:** Show the host name and domain name used to connect to the receiver.
 - **Custom:** Show a custom URL used to connect to the receiver. Enter the custom URL in the **Custom URL** field.

Application Downloads

Select **Application Downloads** to configure how AirMedia client applications are presented to the user for download. Client applications are required to present from a user's computer as described in [Present with AirMedia on page 194](#).

AirMedia Screen - Application Downloads

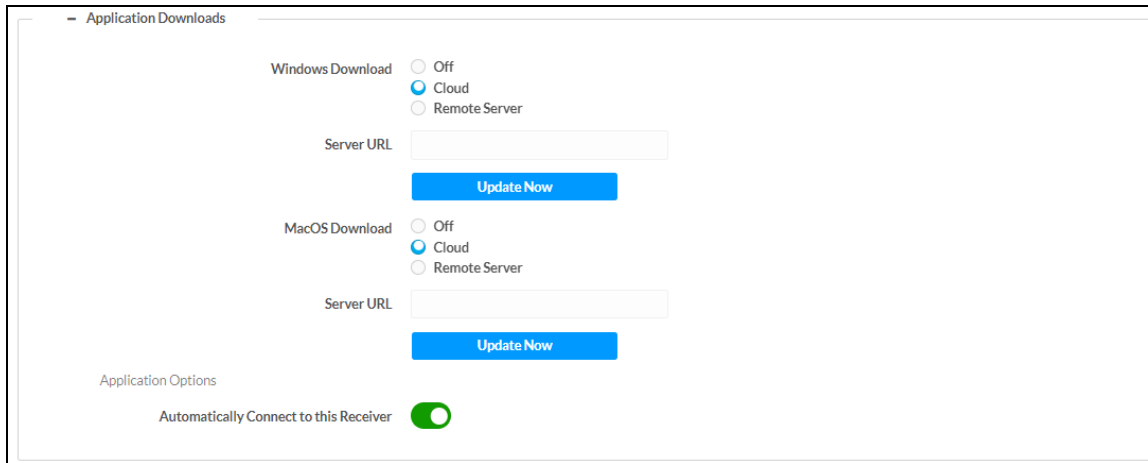

The screenshot shows the 'Application Downloads' configuration screen. It has a title bar with a minus sign and the text 'Application Downloads'. The screen is divided into two main sections: 'Windows Download' and 'MacOS Download'. Each section has three radio buttons: 'Off', 'Cloud' (which is selected), and 'Remote Server'. Below each section is a 'Server URL' text input field and a blue 'Update Now' button. At the bottom, under the heading 'Application Options', there is a toggle switch for 'Automatically Connect to this Receiver', which is currently turned on (green).

Select a radio button for the **Windows Download** and **MacOS Download** settings to decide how AirMedia client applications are presented to users according to their computer's operating system:

- **Off:** Provide the version of the AirMedia application included with the receiver's firmware.
- **Cloud:** Provide the latest version of the AirMedia application stored in the Cloud. The receiver checks for an update once a day at 2:00 am (local time).
- **Remote Server:** Provide a version of the AirMedia application that is hosted on a remote server. When selected, enter the URL of the remote server in the **Server URL** field.
- **Update Now:** Update the AirMedia application according to the **Windows Download** or **MacOS Download** setting.

NOTE: If the setting is changed from **Cloud** or **Remote Server** to **Off**, the receiver will provide the application version that is included with the device's firmware (even if it is an older version than what is available in the cloud or the remote server).

- **Automatically Connect to this Receiver:** When enabled, the AirMedia receiver's IP address is appended to the application download for automatic connection. When disabled, the standard guest AirMedia application is downloaded. Enabling automatic connection makes it easy for users to present to the specific receiver quickly. Certain organizations may elect to download the guest application so that users can launch it again later to connect to different receivers.

Miracast


Miracast technology allows users to wirelessly share content from a Microsoft® Windows® device to the receiver. Miracast technology is built into the Microsoft Windows operating system, so no additional software installation is required.

NOTE: Refer to the [AirMedia Presentation Gateway Security Reference Guide](#) (Doc 7693) for best practices for configuring the system for Miracast.

A Miracast connection consists of two phases: the discovery phase and the connection phase. During the discovery phase, the Windows device uses Wi-Fi based discovery to find compatible receivers. Once the receiver is discovered by the Windows device, it is presented in a list on the device. The user can then select the receiver for connection to the Windows device.

During the connection phase, the Windows device will first attempt to connect to the receiver through the existing network infrastructure. If the connection over infrastructure fails, the Windows device will connect to the receiver.

AirMedia Screen - Miracast

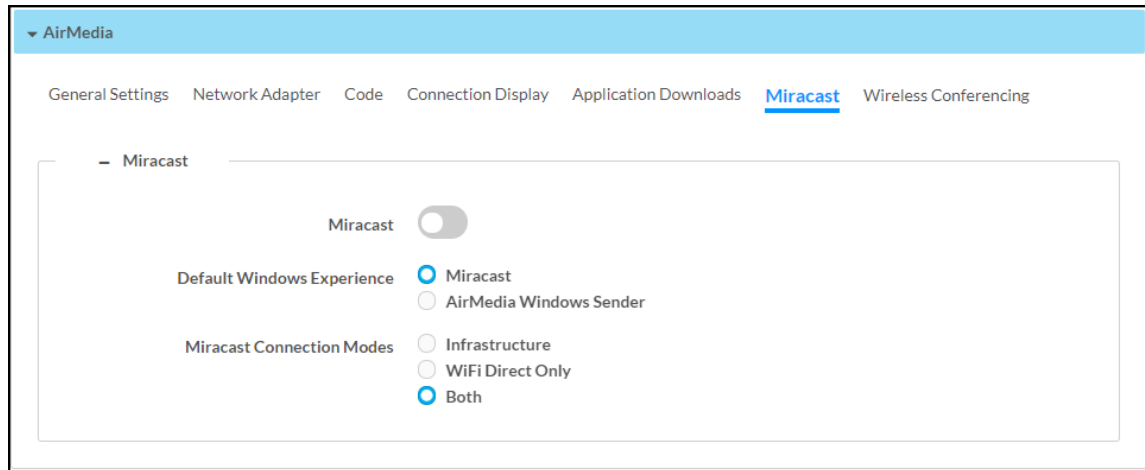

- **Miracast:** Turn the toggle on to enable Miracast on the receiver.
- **Default Windows Experience:** Select one of the radio buttons (**Miracast** or **AirMedia Windows Sender**) to select the default connection experience for Windows users when they connect to the receiver via a web browser.
 - Select **Miracast** to display instructions for connecting to the receiver via Miracast.
 - Select **AirMedia Windows Sender** to prompt the user to download the AirMedia sender application.

- **Miracast Connection Modes:** Select one of the radio buttons (**Infrastructure**, **WiFi Direct Only**, or **Both**) to configure how a Miracast capable device connects to the receiver.
 - Select **Infrastructure** to connect via the local area network. When selected, Wi-Fi is used for discovery only.
 - Select **WiFi Direct Only** to connect via a Wi-Fi point-to-point connection (Wi-Fi Direct® connection). When selected, Wi-Fi is used for discovery and for streaming.
 - Select **Both** to connect via a local area network or Wi-Fi point-to-point connection (Wi-Fi Direct® connection). When selected, a Wi-Fi point-to-point connection only occurs if the local area connection fails.

NOTE: When **WiFi Direct Only** or **Both** is selected, **Login Code Mode** must be set to **Random** or **Fixed** as described in [Code on page 158](#).

Connect Devices

AirMedia Connect devices can be connected to personal devices to instantly share content with a paired Wi-Fi network capable AirMedia receiver. Select **Connect Devices** to configure settings and pair Connect devices. Up to eight Connect devices can be paired to a single receiver. Information about operating the Connect devices can be found in [AirMedia Connect Devices on page 221](#).

AirMedia Screen - Connect Devices

	Nickname	Model Number	Status	State	Serial Number	MAC Address	Firmware Version	Signal	Actions
<input type="checkbox"/>	AirMedia TX3-c4426817a81e	AM-TX3-200	Online	✓	223GSP00050	c4426817a81e	1.2.1.175		

- **Local Pairing:** Turn the toggle on to enable pairing without the web configuration. To initiate the pairing process locally, press and hold the **SETUP** button on the AirMedia receiver for five seconds.

NOTE: The AM-TX3-100 and AM-TX3-200 use WiFi Direct to pair with an AirMedia receiver. The WiFi Direct interface on the receiver will be enabled while pairing is active, if not already enabled. Pairing will automatically stop after two minutes, or can be manually stopped.

- **Pairing Status:** Indicates the current status of a pairing attempt.
- **Pair Devices:** Initiate the pairing process.

- **Connect Adaptor Behavior:** Using the drop-down menu, select the automatic behavior of Connect Adaptors.
 - **Auto-Present:** Automatically present.
 - **Auto-Present and Auto-Conference:** Automatically present and initiate Wireless Conferencing.
- **Connection Method:** Select the desired method for connecting an AirMedia transmitter to a paired AirMedia receiver. When more than one option is selected, the priority is **Infrastructure Wired** (AM-TX3-200 only), **Infrastructure WiFi**, and **WiFi Direct**.
 - **Infrastructure Wired:** Allows the AM-TX3-200 to communicate over the corporate or infrastructure network to a paired AirMedia receiver
 - **Infrastructure WiFi:** Allows the AM-TX3-100 and AM-TX3-200 to communicate over the corporate or infrastructure Wi-Fi network to a paired AirMedia receiver. When prompted, enter the Network Name (SSID) and Password (Key). To reconfigure the Network Name (SSID) and Password (Key), select the **Infrastructure WiFi Configuration button**.

NOTE: For AM-TX3-200 devices, the Wired MAC Address is shown in the Connect Devices table. The WiFi MAC Address is one octet higher than the Wired MAC Address. For example, if the Wired MAC address is c4:42:68:17:a8:1d, the WiFi MAC address will be c4:42:68:17:a8:1e.

Infrastructure WiFi Configuration: Enter the following information to configure the infrastructure Wi-Fi network.

- **Network Name (SSID)**
- **Authentication Type:** Select **None** or **WPA2 Personal**.
- **Password**

- **WiFi Direct:** WiFi Direct allows the AM-TX3-100 and AM-TX3-200 to communicate over the Wi-Fi network to a paired AirMedia receiver.

NOTES:

- After clicking **Pair Devices**, the pairing process must also be initiated on the Connect device:
 - **AM-TX3-100**: Press and hold the **Screenshare** button for five seconds. The LED ring will turn white. When pairing begins, the LED will alternate between red and white.
 - **AM-TX3-200**: Press and hold the **SETUP** button for five seconds. The **SETUP** LED will start blinking when pairing begins.
- If the Connect device is already paired to any AirMedia receiver, it must be restored before pairing again. For more information, refer to [Restoring the Device on page 223](#).
- For optimal performance, ensure there is sufficient throughput between AirMedia receivers and Connect Devices.
 - When using **Wireless Presentation**, ensure a minimum of 25 Mbps throughput from the Connect Device to the receiver, and 5 Mbps from the receiver to the Connect Devices.
 - When using **Wireless Conferencing**, ensure a minimum of 25 Mbps throughput from the Connect Device to the receiver, and 75 Mbps from the receiver to the Connect Devices.

Paired Connect devices appear in the table:

- **Nick Name**: Friendly name for the Connect device
- **Model Number**: Model of the Connect device
- **Status**: Indicates if the Connect device is currently online or offline or a firmware update is in process.
- **State**: The icon indicates if the Connect device is ready to share. A green check mark indicates the device is online and operational. A red X indicates the device is offline.
- **Serial Number**: Displays the serial number of the Connect device
- **MAC Address**: MAC Address of the Connect device
- **Firmware Version**: Firmware version of the Connect device
- **Signal**: Signal strength between the Connect device and receiver


- **Actions:**

- Select **Delete** to unpair the Connect device. This also resets the Connect device to factory default.
- AM-TX3-200 only: Select the gear to access **Connect Device Configuration** and configure wired network settings. Enter or edit the following information.
 - **Nickname**
 - **Hostname**
 - **Domain**
 - **Primary Static DNS**
 - **Secondary Static DNS**
 - **DHCP**
 - **IP Address**
 - **Subnet Mask**
 - **Default Gateway**
 - **AUX LAN Port:** Provides network connectivity to another device such as a laptop or touch panel. By default, **AUX LAN Port** is disabled.

To update firmware on a paired Connect device, use [Auto Update on page 133](#) or follow the procedure below.

NOTE: Updating firmware of an AirMedia Connect device requires it to be online with a strong wireless connection, and not currently presenting.

1. In the table, select the checkbox next to the Connect device.
2. Click the blue **Upload Firmware** button.
3. Select **Browse**, and then navigate to the firmware file on the host computer.

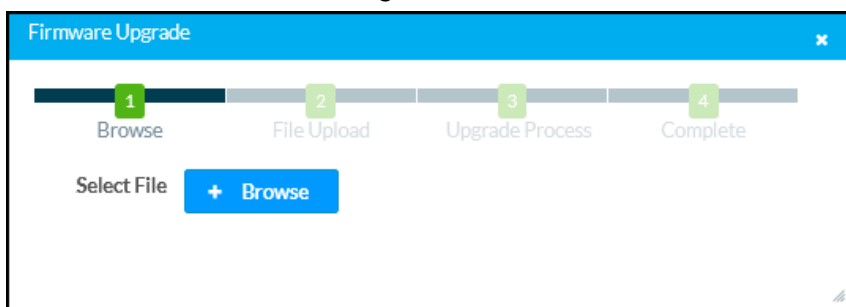

4. Select the firmware file, and then select **Open**.
5. Select **Load** to load the file to the receiver. The upload progress is shown in the dialog box and in the Connect device status menu.
6. Once the file upload has completed, select **OK**.


Select the **Cancel** button to close the **Firmware Upgrade** dialog box. Selecting the **Cancel** button before the file is uploaded to the device cancels the update.

Wireless Conferencing

Select **Wireless Conferencing** to configure settings for the Wireless Conferencing feature. Wireless Conferencing allows the receiver to use connected conferencing peripherals, such as soundbars, cameras, or speakerphones when the user makes a call from a meeting room application.

For a list of peripherals supported with Wireless Conferencing, refer to [Online Help 1001764](#).

AirMedia Screen - Wireless Conferencing

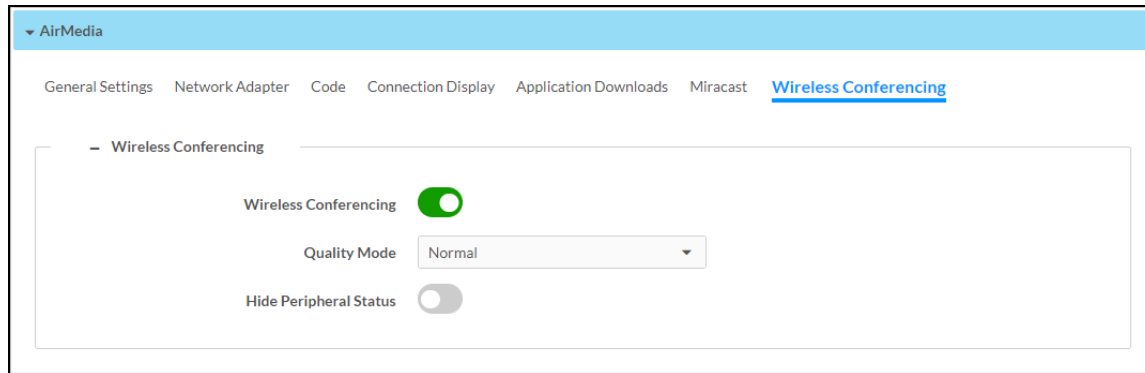


- **Wireless Conferencing:** Turn the toggle on to enable Wireless Conferencing on the receiver. PoE+ or a local power supply is required to enable Wireless Conferencing.
- **Quality Mode:** Select the video quality of a connected camera from the drop-down menu.
 - Select **Normal** to display the standard video quality of the camera.
 - Select **Low** to display a lowered level of video quality. **Low** should only be selected if there are network bandwidth concerns that arise when **Normal** is selected.
- **Hide Peripheral Status:** Turn the toggle on to hide the peripheral status from the display when Wireless Conferencing is in use.

For more information on Wireless Conferencing, refer to the [AirMedia Presentation Gateway Security Reference Guide](#) (Doc 7693).

Security

Select **Security** to configure device security and authentication settings.

Security – Authentication Management

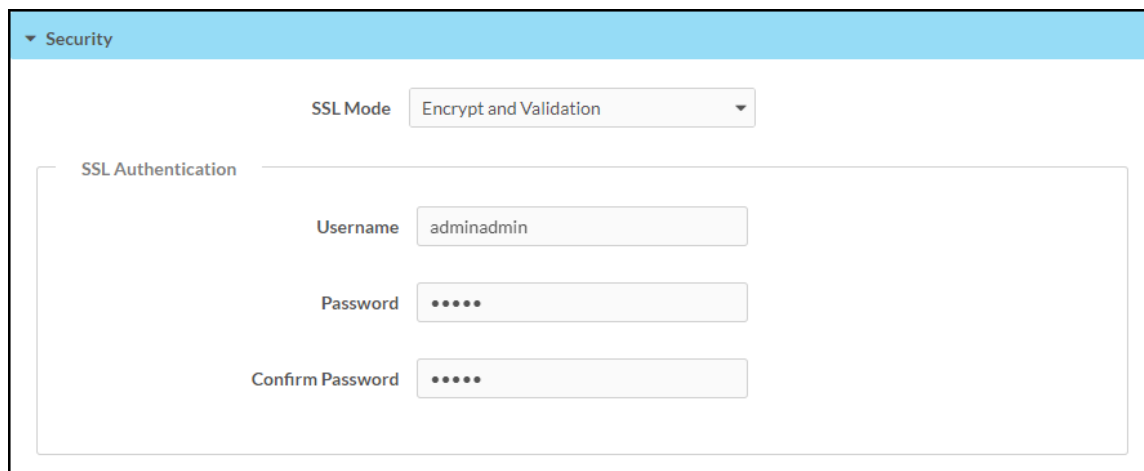

- **SSL Mode:** Select an SSL (Secure Sockets Layer) mode to use for establishing a secure connection between the receiver and the control system:
 - **Encrypt and Validation:** The receiver will require a username and password to validate an encrypted SSL connection. Enter a username and password in the respective fields.
 - **Encrypt:** The receiver will use an encrypted SSL connection.
 - **OFF:** The receiver will not use an SSL connection

Authentication

By default, authentication is required to access the web configuration interface or to connect to an AirMedia Series 3 receiver through Crestron Toolbox™ software. When a user attempts to sign into the device for the first time, the web configuration interface prompts the user to enter a new administrator username and password as described in [Connect to the Receiver on page 99](#). This username and password will be saved and must be entered when reconnecting to the receiver in the future.


CAUTION: Do not lose the administrator username and password, as the receiver settings must be restored to factory defaults to reset the username and password. To restore the device to factory defaults, refer to [Restore on page 103](#).

Use the following **Authentication Management** settings to add, delete, and edit users and groups.

Current User

Select **Current User** to view and edit information for the current receiver user.

Authentication Management - Current User

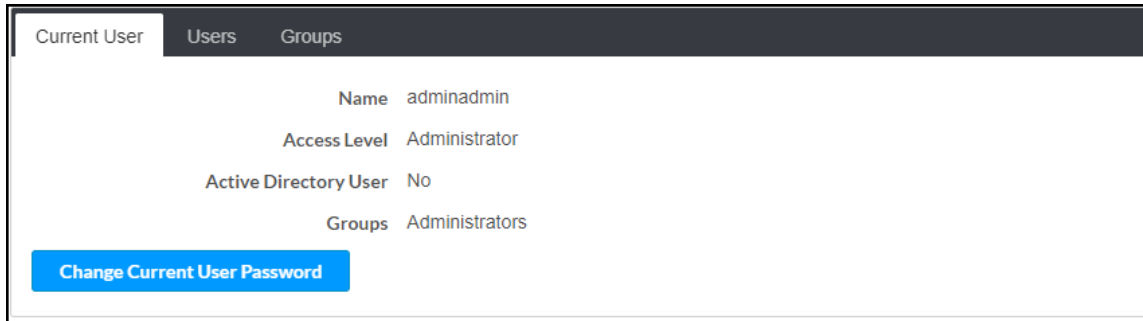

Current User Users Groups

Name adminadmin

Access Level Administrator

Active Directory User No

Groups Administrators

[Change Current User Password](#)

The following settings are displayed for the current user:


- **Name:** The chosen username
- **Access Level:** The access level granted to the user (**Administrator**, **Connect**, **Operator**, **Programmer**, or **User**)
- **Active Directory User:** Reports whether the current user is (**Yes**) or is not (**No**) authenticated through Active Directory® software

NOTE: A user must be added to an Active Directory group before the user may be selected as an active directory user. For more information, refer to [Groups on page 172](#).

- **Groups:** Any groups of which the current user is a member

Select **Change Current User Password** to change the password for the current user. The **Change Password** dialog box is displayed.

Change Password Dialog Box

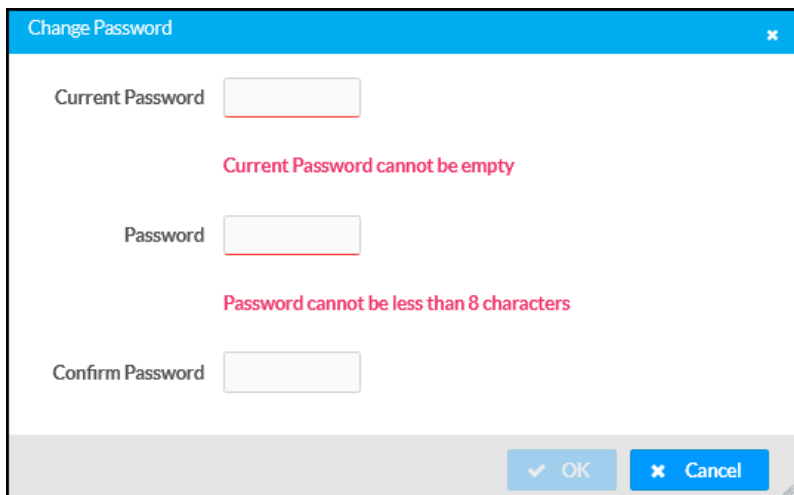

Change Password

Current Password

Current Password cannot be empty

Password

Password cannot be less than 8 characters

Confirm Password

✓ OK ✕ Cancel




Enter the existing password in the **Current Password** field. Then, enter a new password in the **Password** field, and reenter the password in the **Confirm Password** field.

Select **OK** to save the new password, or select **Cancel** to cancel the change.

Users

Select **Users** to view and edit information for the receiver users.

Authentication Management - Users

Username	AD User	Action
adminadmin	No	  

« ‹ 1 › » 10

Create User

Enter text into the **Search...** field to find and display users that match the search term(s).




Receiver users are listed in table format. The following information is displayed for each user:

- **Username:** The chosen username
- **AD User:** Reports whether the user is (**Yes**) or is not (**No**) authenticated through Active Directory

NOTE: A user must be added to an Active Directory group before the user may be selected as an Active Directory user. For more information, refer to [Groups on page 172](#).

If the receiver users span multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.


An **Action** column is also provided for each user that allows various actions to be performed. The following selections may be selected from the **Action** column:

- Select the information button  to view a user's username, Active Directory status, and group membership.
- Select the edit button  to edit a user's password and group membership.
- Select the trashcan button  to delete a user.

Create User

Select **Create User** to create a new user. The **Create User** dialog box is displayed.

Create User Dialog Box

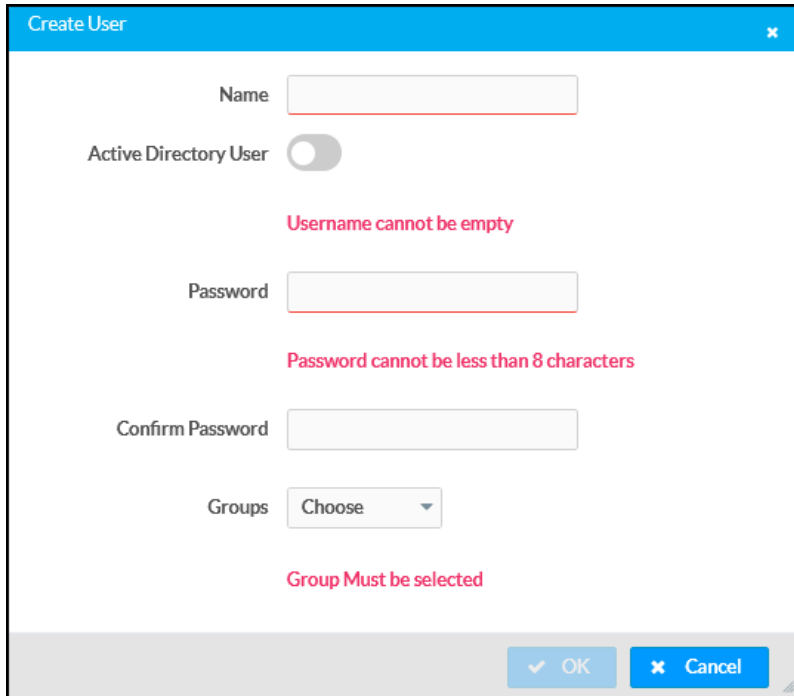A screenshot of the 'Create User' dialog box. It has a blue title bar with the text 'Create User' and a close button. The main area is white and contains several input fields and a toggle switch. The 'Name' field is empty, with a red error message 'Username cannot be empty' below it. The 'Active Directory User' toggle switch is turned off. The 'Password' field is empty, with a red error message 'Password cannot be less than 8 characters' below it. The 'Confirm Password' field is empty. The 'Groups' dropdown menu is set to 'Choose', with a red error message 'Group Must be selected' below it. At the bottom right, there are two buttons: 'OK' (light blue with a checkmark) and 'Cancel' (blue with an 'x').

Create User

Name

Active Directory User ☐

Username cannot be empty

Password

Password cannot be less than 8 characters

Confirm Password

Groups

Group Must be selected

✓ OK × Cancel

- **Name:** The chosen username
- **Active Directory User:** Turn on the toggle to use authentication via Active Directory for the selected user.
- **Password:** Enter a new password for the selected user.
- **Confirm Password:** Reenter the password provided in the **Password** field.
- **Groups:** Add the user to one or more groups. For more information, refer to [Groups on page 172](#).

NOTE: A user must be added to an Active Directory group to be selected as an Active Directory user.

Select **OK** to save any changes and to return to the **Authentication Management > Users** page. Select **Cancel** to cancel any changes.

Groups

Select **Groups** to view and edit settings for receiver groups. Receiver groups are used to group users by access level and Active Directory authentication settings.

Authentication Management - Groups

Group Name	AD Group	Access Level	Action
Administrators	No	Administrator	
Connects	No	Connect	
Operators	No	Operator	
Programmers	No	Programmer	
Users	No	User	

Enter text into the **Search...** field to find and display groups that match the search term(s).

Groups are listed in table format. The following information is displayed for each group:

- **Group Name:** The chosen username
- **AD Group:** Reports whether the group is (**Yes**) or is not (**No**) authenticated through Active Directory
- **Access Level:** The access level granted to the user (**Administrator**, **Connect**, **Operator**, **Programmer**, or **User**)

If the receiver groups span multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.


An **Action** column is also provided for each group that allows various actions to be performed. The following selections may be selected from the **Action** column:

- Select the information button to view a group's name, access level, and Active Directory status.
- Select the trashcan button to delete a user.

Create Group

Select **Create Group** at the bottom of the page to create a new receiver group. The **Create Group** dialog box is displayed.

Create Group Dialog Box

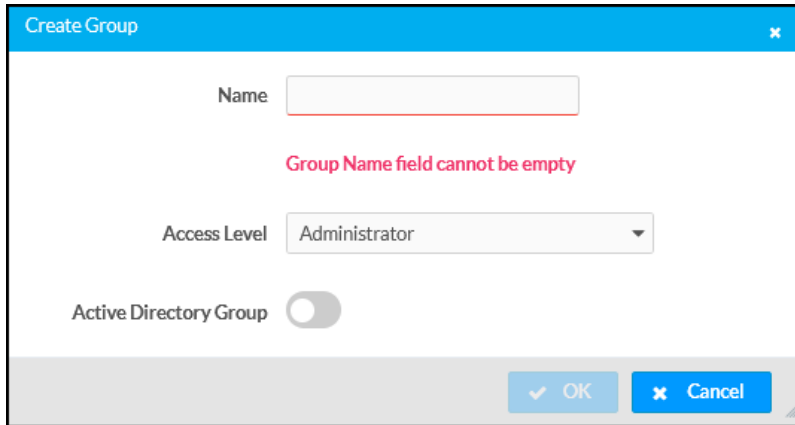A screenshot of the 'Create Group' dialog box. The dialog has a blue title bar with the text 'Create Group' and a close button (X). The main area is white and contains three fields: 'Name' with an empty text input field, 'Access Level' with a dropdown menu showing 'Administrator', and 'Active Directory Group' with a toggle switch that is currently turned off. Below the 'Name' field, there is a red error message: 'Group Name field cannot be empty'. At the bottom right, there are two buttons: 'OK' (light blue with a checkmark icon) and 'Cancel' (blue with an X icon).

The following **Create Group** settings may be viewed or configured:


- **Name:** Enter a group name
- **Access Level:** Select an access level for the group and its users from the drop-down menu
- **Active Directory Group:** Turn on the toggle to use authentication via Active directory for the group

Select **OK** to save any changes and to return to the **Authentication Management > Groups** page. Select **Cancel** to cancel any changes.

802.1x Configuration

Select **802.1x Configuration** to display selections for configuring IEEE 802.1x network authentication for receiver security.


802.1x Configuration Tab Selections

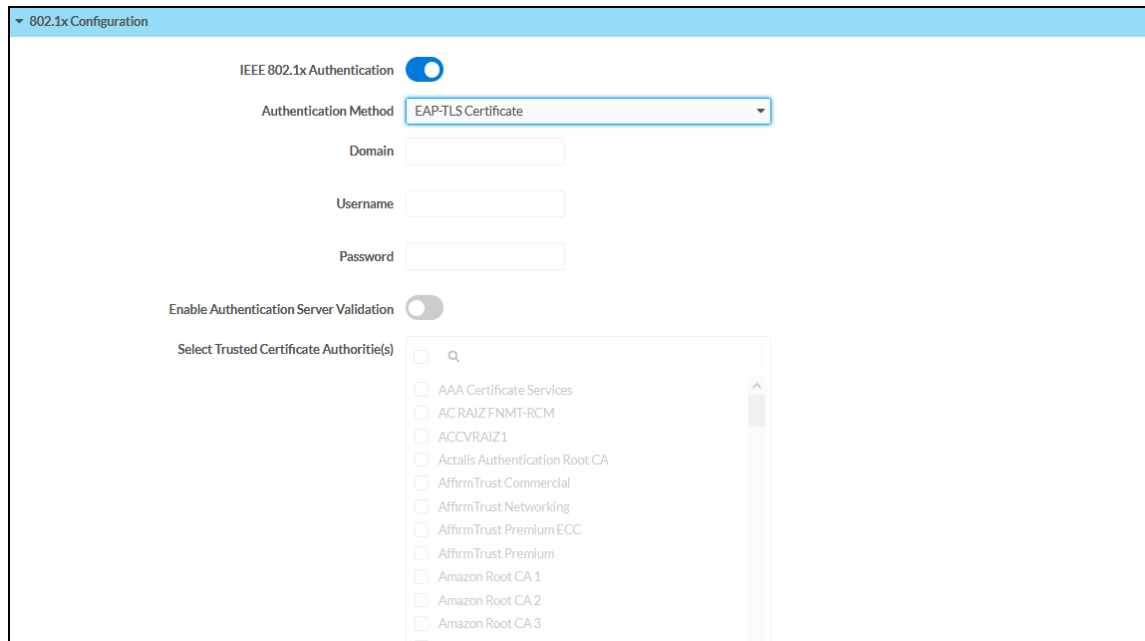The screenshot shows the '802.1x Configuration' tab. At the top, there's a toggle for 'IEEE 802.1x Authentication' which is turned on. Below it is a dropdown menu for 'Authentication Method' currently set to 'EAP-TLS Certificate'. Underneath are three input fields for 'Domain', 'Username', and 'Password'. Further down is another toggle for 'Enable Authentication Server Validation' which is turned off. At the bottom, there's a section titled 'Select Trusted Certificate Authority(ies)' with a search bar and a list of certificate authorities. The list includes: AAA Certificate Services, AC RAIZ FNMT-RCM, ACCVRAIZ1, Actalis Authentication Root CA, AffirmTrust Commercial, AffirmTrust Networking, AffirmTrust Premium ECC, AffirmTrust Premium, Amazon Root CA 1, Amazon Root CA 2, and Amazon Root CA 3. Each entry has a checkbox to its left.

- **IEEE 802.1x Authentication:** Turn on the toggle to use 802.1x authentication for the receiver.
- **Authentication Method:** Select an 802.1x authentication method (**EAP-TLS Certificate** or **EAP MSCHAP V2- password**) from the drop-down menu.
- **Domain:** If **EAP MSCHAP V2- password** is selected for **Authentication Method**, enter a domain name for authentication.
- **Username:** If **EAP MSCHAP V2- password** is selected for **Authentication Method**, enter a username for authentication.
- **Password:** If **EAP MSCHAP V2- password** is selected for **Authentication Method**, enter a password for authentication.
- **Enable Authentication Server Validation:** Turn on the toggle to use server validation for elevated security.
- **Select Trusted Certificate Authorities:** Select trusted CAs (Certificate Authorities) from the provided CAs to be used for server validation:
 - Select the corresponding check box for each CA that you wish to make a trusted CA.
 - Enter a search term into the text field to search for and display CAs that match the search term.
 - Select the check box in the search field to select all CAs as trusted CAs.

Select **Manage Certificates** from the **Action** menu to add or remove CAs from the list. The **Manage Certificates** dialog box is displayed with the **Root** tab selected.

Manage Certificates Dialog Box - Root Tab

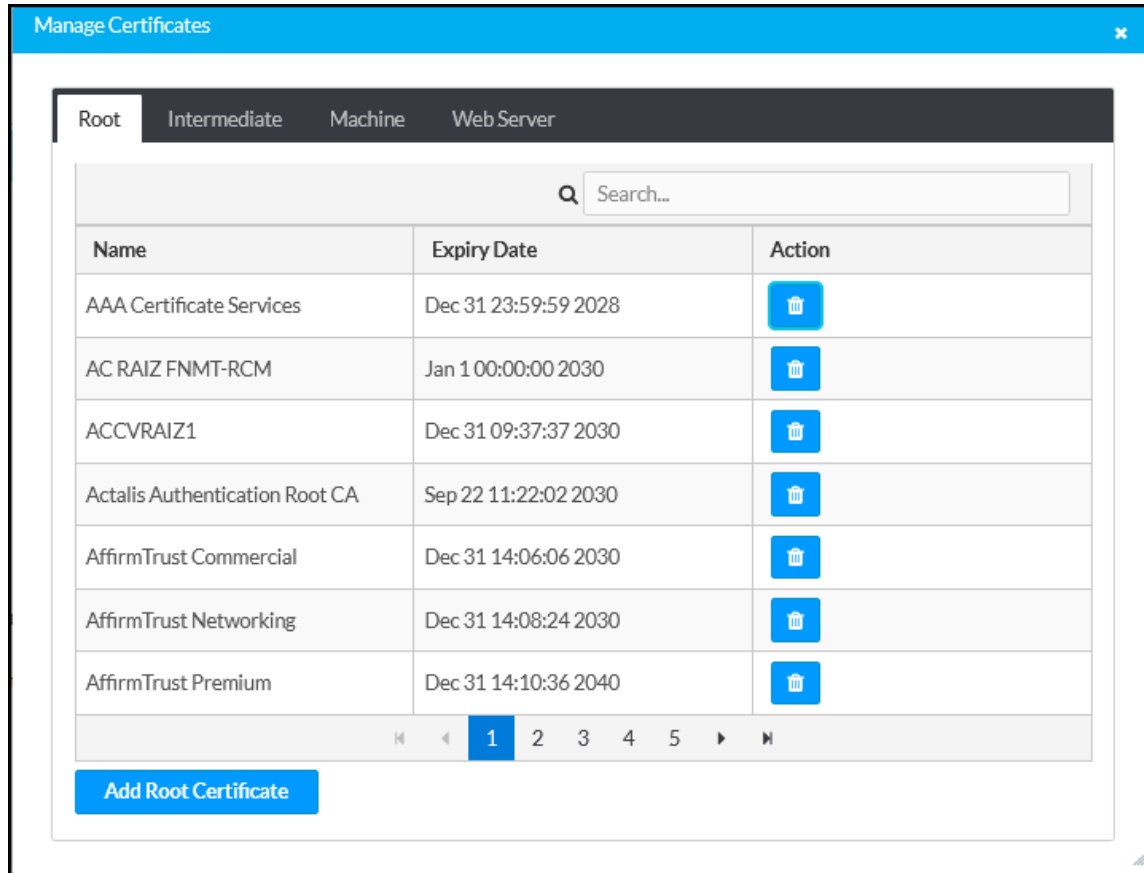

Select **Root**, **Intermediate**, **Machine**, or **Web Server** to switch between the different types of CAs. The same settings are provided for each type of CA.

Enter a search term into the **Search...** text field to search for and display CAs that match the search term.

The following information is provided for each type of CA:


- **Name:** The CA name
- **Expiry Date:** The date and time that the CA is set to expire

If the CAs span multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page.

Select the trashcan button in the **Action** column for a CA to delete it. Select **Yes** to delete the certificate or **No** to cancel.

Select **Add [Type] Certificate** to add a CA of one of the four available types (**Root**, **Intermediate**, **Machine**, or **Web Server**) to the list of CAs. The **Add Certificate** pop-up dialog box is displayed.

Add Certificate Dialog Box – Browse

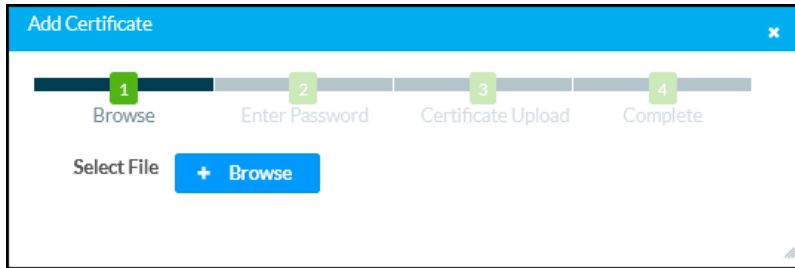

To add a new certificate:

1. Select **Browse**.
2. Navigate to the CA file on the host computer.
3. Select the CA file, and then select **Open**.
4. If required, enter the password used to encrypt the file.
5. Select **Load** to load the CA file to the receiver. The upload progress is shown in the dialog box.
6. Once the receiver has completed the upload, select **OK**.

Select the **x** button to close the **Add Certificate** dialog box at any time during the upload process. Selecting the **x** button before the CA file is uploaded to the touch screen cancels the upload.

Select the **x** button to close the **Manage Certificates** dialog box and to return to the **802.1x Authentication** page.

Enterprise Deployment Options

Crestron has two options for deploying multiple AirMedia receivers across an enterprise. These tools can assist in deploying any number of receivers that an organization may need to deploy.

XiO Cloud® Service

The [XiO Cloud® service](#) allows supported devices across an enterprise to be managed and configured from one central, secure location in the cloud. The device is configured to connect to the service by default.

NOTE: An XiO Cloud account is required to use the service. To register for an XiO Cloud account, refer to www.crestron.com/Support/Tools/Licensing-Registration/XiO-Account-Registration.

To connect the device to the XiO Cloud service:

1. Record the MAC address and serial number that are labeled on the shipping box or the device. The MAC address and serial number are required to add the device to the XiO Cloud service.

NOTE: If the device has multiple MAC addresses, use the MAC address that is providing the primary connection back to the network. For most devices, the Ethernet MAC address should be used. However, if your device is connecting to the network over a different protocol (such as Wi-Fi® communications), use the MAC address for that protocol instead.

2. Log in to your XiO Cloud account at portal.crestron.io.
3. Claim the device to the XiO Cloud service as described in the [XiO Cloud User Guide](#).

Once the device is claimed, associate it with a room to view its status and settings. For more information, refer to the [XiO Cloud User Guide](#).

Crestron Deployment Tool for PowerShell® Software

Crestron has developed a tool for customers without the ability to use CPS to assist in deploying multiple devices without the need to configure each device individually. With this tool, an administrator has the ability to input all of the settings to be configured on multiple receivers, and then use PowerShell® task-based command-line shell and scripting language to configure the devices across a local network.

Modern Authentication for EWS

This appendix provides the procedures required to configure Modern Authentication (OAuth 2) support for AirMedia series 3 receivers in the Microsoft® EWS (Exchange Web Services) service.


The Modern Authentication authorization model is provided by the Azure® Active Directory® service to integrate managed API applications with the same authentication model used by the Microsoft 365 software REST APIs. Once Modern Authentication is configured in EWS, the AirMedia receiver uses this access method to provide heightened user authentication.

Use the following procedures to define a new application in Azure Active Directory. Once the application is defined, multiple Crestron devices can leverage calendar integration with Microsoft 365 and Modern Authentication without additional setup in the Microsoft EWS service.

Create the Application


1. Sign into the Azure portal with a user ID with sufficient permissions to create an app.
2. Select **Azure Active Directory** from the navigation menu.

Azure Active Directory Selection

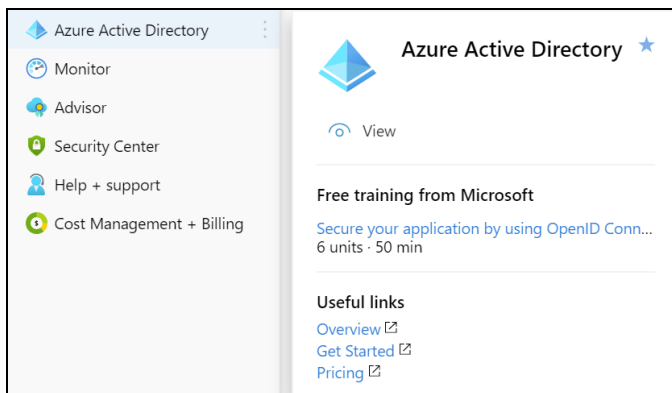


3. Select **App registrations** from the Azure widget menu.

App registrations Selection

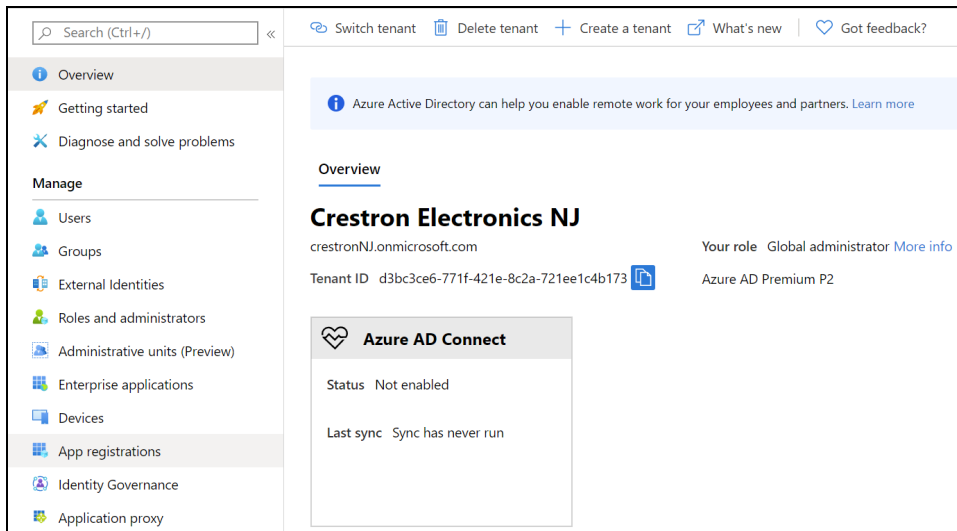

4. Select **+ New registration**.

App registrations - New registration Screen

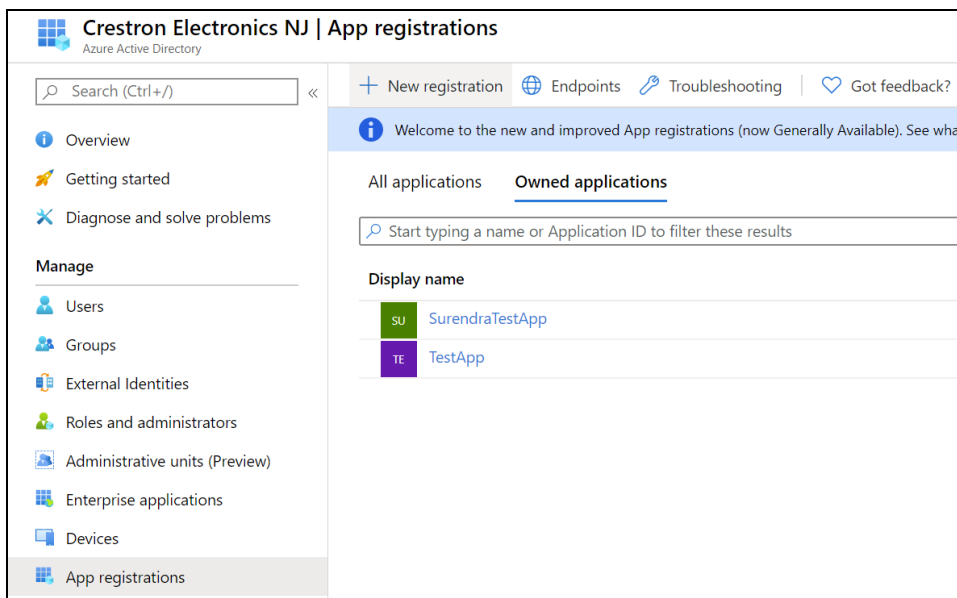

A dialog box for creating the app is displayed.

Register an application Dialog Box

Home > Crestron Electronics NJ | App registrations > Register an application

Register an application

*** Name**
The user-facing display name for this application (this can be changed later).

Crestron Scheduling Device ✓

Supported account types
Who can use this application or access this API?

☒ Accounts in this organizational directory only (Crestron Electronics NJ only - Single tenant)

☐ Accounts in any organizational directory (Any Azure AD directory - Multitenant)

☐ Accounts in any organizational directory (Any Azure AD directory - Multitenant) and personal Microsoft accounts (e.g. Skype, Xbox)

[Help me choose...](#)

Redirect URI (optional)
We'll return the authentication response to this URI after successfully authenticating the user. Providing this now is optional and it can be changed later, but a value is required for most authentication scenarios.

Web ▼ e.g. https://myapp.com/auth

5. Enter the following information:

- **Name:** Enter a user-facing name of the application (in the Azure environment). This can be any string 120 characters or less. It is possible to have more than one application registered with the same display name.
- **Supported account types:** Select the supported account type. Only the **Accounts in this organizational directory only** option is supported by the AirMedia receiver at this time.

NOTE: The **Redirect URI (optional)** settings are not configured for this application.


6. Select **Register**.

Obtain Authentication IDs

Once the app is registered, the application and directory IDs must be obtained to connect the receiver to the Azure AD app.

1. Select **App registrations** from the Azure widget menu.
2. Select the application created for the receiver. An application dialog box is displayed.
3. Select **Overview** from the navigation menu. Information about the Azure app is provided.

Application Overview Screen

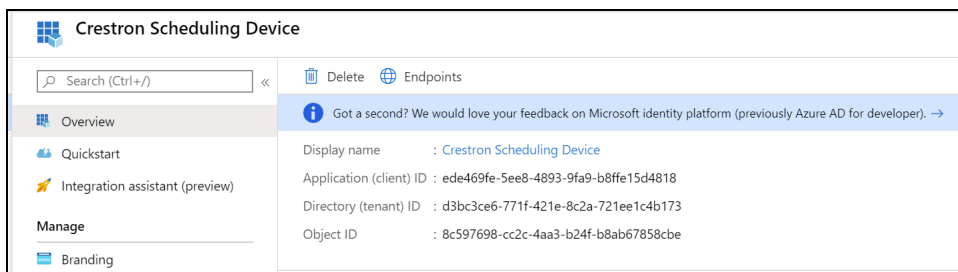

4. Copy the following fields from the **Overview** pane to an accessible location. Use the **Copy to Clipboard** button that appears when hovering over each field to ensure accuracy.
 - **Application (client) ID:** The unique identification string for the Azure app.
 - **Directory (tenant) ID:** The unique identification string for the Azure directory.

Configure Additional Settings

The following additional settings can be configured for the Azure app. These settings define the user consent experience, authentication details, and API access scopes available to the application.

Branding

Select **Branding** under the **Manage** section of the application navigation menu to configure branding settings for the app.

Application Branding Screen

The screenshot displays the 'Branding' configuration page for the 'Crestron Scheduling Device'. The left sidebar contains navigation links: Overview, Quickstart, Integration assistant (preview), Manage (selected), Authentication, Certificates & secrets, Token configuration, API permissions, Expose an API, Owners, Roles and administrators (Previous), Manifest, Support + Troubleshooting, Troubleshooting, and New support request. The main content area includes a search bar, 'Save' and 'Discard' buttons, and the following settings:

- Name ***: Crestron Scheduling Device (with a green checkmark icon)
- Logo**: Displays the Crestron logo.
- Upload new logo**: A button labeled 'Select a file' with a file upload icon.
- Home page URL**: https://www.crestron.com
- Terms of service URL**: e.g. https://myapp.com/termsofservice
- Privacy statement URL**: e.g. https://myapp.com/privacystatement
- Publisher domain**: crestronNJ.onmicrosoft.com (with a warning icon and a blue 'Update domain' link). Below this, a message states: 'The application's consent screen will show 'Unverified'. [Learn more about publisher domain](#)'.
- Publisher verification (preview)**: A section with text: 'Associate a verified Microsoft Partner Center (MPN) account with your application. A verified badge will appear in various places, including the application consent screen. [Learn more](#)'.
- MPN ID**: A section with the text 'Add MPN ID to verify publisher' and a message: 'The application publisher domain is set to crestronNJ.onmicrosoft.com, but onmicrosoft.com publisher domains are not allowed. Please use a custom domain in order to proceed. Note: this domain must be a DNS verified domain on the tenant and match the primary contact domain for your MPN account.'
- Publisher display name**: Not provided

The following branding settings can be configured for the application:

- **Name: Required.** Set the user-friendly name of the application. This is the same name that was defined when registering the application, but it can be changed here.
- **Upload New Logo:** Set a user-facing logo for this application that appears on the consent screen. The image file for the logo must meet the following requirements:
 - Image dimensions of 215 x 215 pixels
 - Central image dimensions of 94 x 94 pixels
 - Uses the file type .bmp, .jpg, or .png
 - File size less than 100 KB
- **Privacy statement URL:** Provides a link to the application privacy statement in the consent screen.
- **Publisher domain:** Sets the process that must be completed to verify ownership of the domain. Most users will probably already have a verified domain. If the domain is not verified, the application will work, but the consent screen will warn the user they are consenting to an unverified application.

Authentication

Select **Authentication** under the **Manage** section of the application navigation menu to configure authentication settings for the app.


Application Authentication Screen

The screenshot shows the 'Authentication' settings page for a 'Crestron Scheduling Device'. The page has a left-hand navigation menu with sections: Overview, Quickstart, Integration assistant (preview), Manage (selected), Certificates & secrets, Token configuration, API permissions, Expose an API, Owners, Roles and administrators (Preview), and Manifest. Under 'Manage', the 'Authentication' option is highlighted. The main content area is titled 'Authentication' and includes a search bar, 'Save', 'Discard', and 'Got feedback?' buttons. The settings are organized into three sections: 1. 'Platform configurations' with a description and an '+ Add a platform' button. 2. 'Supported account types' with a question 'Who can use this application or access this API?' and two radio button options: 'Accounts in this organizational directory only (Crestron Electronics NJ only - Single tenant)' (selected) and 'Accounts in any organizational directory (Any Azure AD directory - Multitenant)'. There is a 'Help me decide...' link and a warning icon with text about personal Microsoft accounts. 3. 'Advanced settings' with a 'Default client type' dropdown set to 'Public client'. Below this is a toggle for 'Treat application as a public client' set to 'Yes'. A note states: 'Required for the use of the following flows where a redirect URI is not used:'. A list follows: 'Resource owner password credential (ROPC) Learn more', 'Device code flow Learn more', and 'Integrated Windows Authentication (IWA) Learn more'.

The following authentication settings can be configured for the application:


- **+ Add a Platform:** Select this button to create a platform for app authentication. The **Configure platforms** pane is displayed on the right side of the screen.

Configure platforms Pane

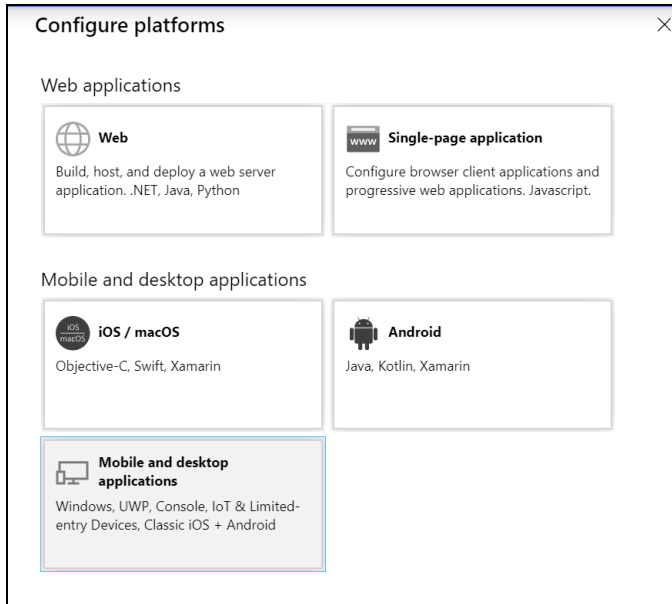

Select **Mobile and desktop applications** to display settings for configuring this platform.

Configure Desktop + devices Pane

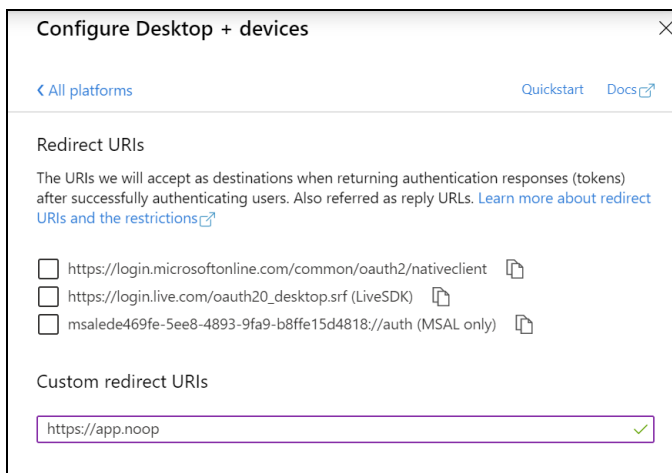


Azure AD requires the use of a redirect URI, but the AirMedia receiver does not. Enter a valid URI address and select **Configure**.

- **Supported account types:** Select an account type for the app. This setting is the same as the one set when registering the app and should not change from **Accounts in this organizational directory only**.
- **Default Client Type:** The **Treat application as a public client** toggle must be set to enabled.

API Permissions

Select **API Permissions** under the **Manage** section of the application navigation menu to configure API permissions for the app.


API Permissions Screen

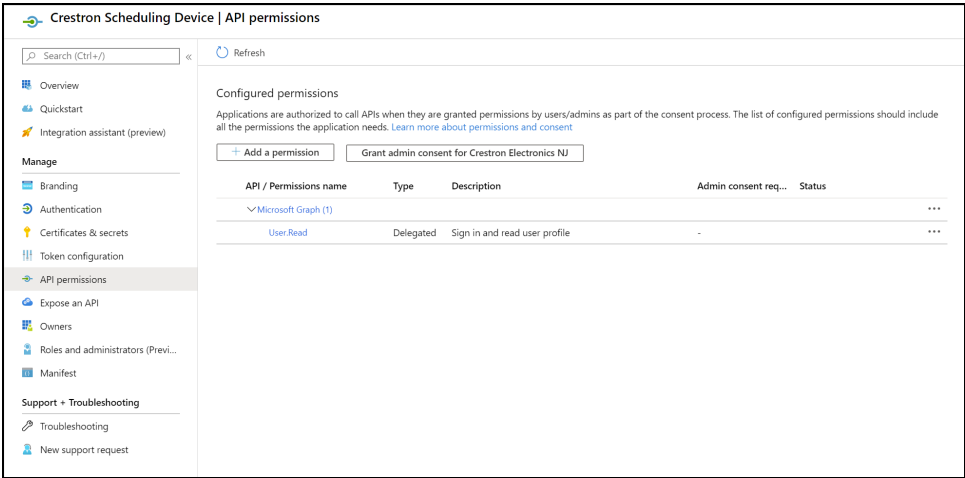

The following API permissions settings can be configured for the application:

Select **+ Add a Permission** to create a new API permission for the app. The **Request API permissions** pane is displayed on the right side of the screen.

Request API permissions Pane

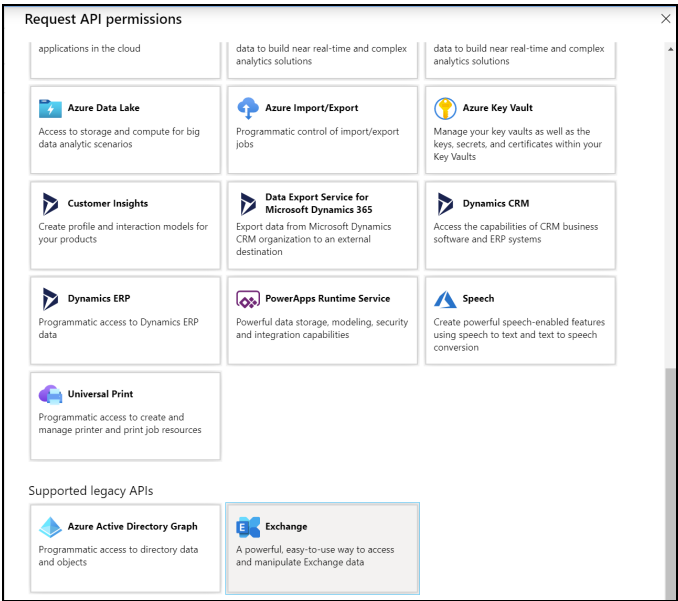

To set the API permissions for EWS:

1. Select **Exchange** to display a list of permissions for EWS.

Request API permissions Pane - Exchange

Request API permissions

< All APIs
What type of permissions does your application require?

Delegated permissions
Your application needs to access the API as the signed-in user.

Application permissions
Your application runs as a background service or daemon without a signed-in user.

Select permissions [expand all](#)

Type to search

Permission	Admin consent required
> Calendars	
> Contacts	
> EAS	
▼ EWS (1)	
<input checked="" type="checkbox"/> EWS.AccessAsUser.All Access mailboxes as the signed-in user via Exchange Web Services ⓘ	-
> Exchange	
> Group	
> MailboxSettings	
> Mail	
> Notes	
> People	
> Place	
> Tasks	

[Add permissions](#) [Discard](#)

2. Expand the EWS accordion.

3. Fill the checkbox next to **EWS.AccessAsUser.All** to allow the application to make requests to the Exchange Web Services API on behalf of the configured user.

To set the API permissions for the Microsoft® Graph function:

1. Select **Microsoft Graph** to display a list of permissions for Microsoft Graph.

Request API permissions Pane - Microsoft Graph

Request API permissions

< All APIs
Microsoft Graph
<https://graph.microsoft.com/> [Docs](#) ⓘ

What type of permissions does your application require?

Delegated permissions
Your application needs to access the API as the signed-in user.

Application permissions
Your application runs as a background service or daemon without a signed-in user.

Select permissions [expand all](#)

Type to search

Permission	Admin consent required
<input checked="" type="checkbox"/> email View users' email address ⓘ	-
<input checked="" type="checkbox"/> offline_access Maintain access to data you have given it access to ⓘ	-
<input checked="" type="checkbox"/> openid Sign users in ⓘ	-
<input checked="" type="checkbox"/> profile View users' basic profile ⓘ	-
> AccessReview	
> AdministrativeUnit	
> AgreementAcceptance	
> Agreement	
> Analytics	

[Add permissions](#) [Discard](#)

2. Fill the checkboxes next to the following settings to enable the functionality described below:

- **offline_access:** Allows the application to receive a Refresh Token, which can be exchanged for a new Access Token, when it expires. This is required for long running applications, so user consent is not required each time an access token expires.
- **openid:** Allows the application to receive an ID Token, which provides basic profile information about the authenticated user. This scope is required for the next two scopes, as they are delivered in the ID Token.
- **email:** Provides the email address of the authenticated user. The application uses this to get the calendar address if none is entered during device configuration.
- **profile:** Provides basic profile information about the authenticated user, such as the display name and photo URL.

If the Microsoft Graph **User.Read** scope is added automatically, it can be removed. If there is a warning, it can be ignored.

API Permissions Screen - User.Read Scope

The screenshot shows the 'API permissions' page for the 'Crestron Scheduling Device' application. A modal dialog titled 'Remove permission' is displayed, warning that the 'User.Read' scope is required for proper application functionality. The dialog asks, 'Are you sure you want to remove Microsoft Graph - User.Read from the configured permissions for Crestron Scheduling Device?' and provides 'Yes, remove' and 'Cancel' buttons. In the background, the API permissions list shows the following permissions:

Permission	Scope	Description	Consent type
EWS.AccessAsUser.All	Delegated	Access mailboxes as the signed-in user via Exchange W...	...
Microsoft Graph (5)			
email	Delegated	View users' email address	...
offline_access	Delegated	Maintain access to data you have given it access to	...
openid	Delegated	Sign users in	...
profile	Delegated	View users' basic profile	...
User.Read	Delegated	Sign in and read user profile	...

Perform a Factory Restore

If an AirMedia Series 3 Receiver must be restored to its factory default settings, perform the following recovery procedure.

CAUTION: Performing a factory restore returns all settings to their default values and removes any network configurations, IP table entries, images, and paired devices.

NOTE: The following procedure is valid for devices running firmware version 3.04 or later. For instructions on restoring devices running older firmware, refer to [OLH 1000218](#).

1. After the device has fully booted up, press and hold the **RESET** button for ten seconds. A Device Recovery message will appear on the front of room display and the **SETUP** LED will blink rapidly. If the next step is not executed within one minute, the procedure will be canceled.
2. Restore the device by pressing and holding the **SETUP** button for five seconds.

After a few minutes, the device will be restored to its factory default settings.

Operation

To present content, use one of the following methods:

- AirMedia wireless presentation. Refer to [Present with AirMedia on page 194](#).
- Wireless presentation with an AirMedia Connect Device. Refer to [AirMedia Connect Devices on page 221](#).
- Connect a device to the HDMI INPUT port (AM-3200(-WF)(-I) models only).

For a description of the receiver's front of room experience, refer to [Front of Room Experience on page 192](#).

For instructions on using AirMedia wireless presentation, refer to [Present with AirMedia on page 194](#).

Optionally, a TS- or TSW- 70 series 7 in. or 10 in. touch screen (sold separately) can be used to control the receiver and select which sources are displayed. For instructions on using a touch screen, refer to [Touch Screen Operation on page 210](#).


Front of Room Experience

The front of room experience consists of two screens: the welcome screen, which is shown when no users are presenting, and the user presentation screen. The information shown on each screen can be modified using the receiver's web configuration interface.

Welcome Screen

When no users are presenting, the welcome screen is shown on the display device. The welcome screen provides date, time, connection, room availability, and other information as shown in the following image.

Front of Room Experience - Welcome Screen

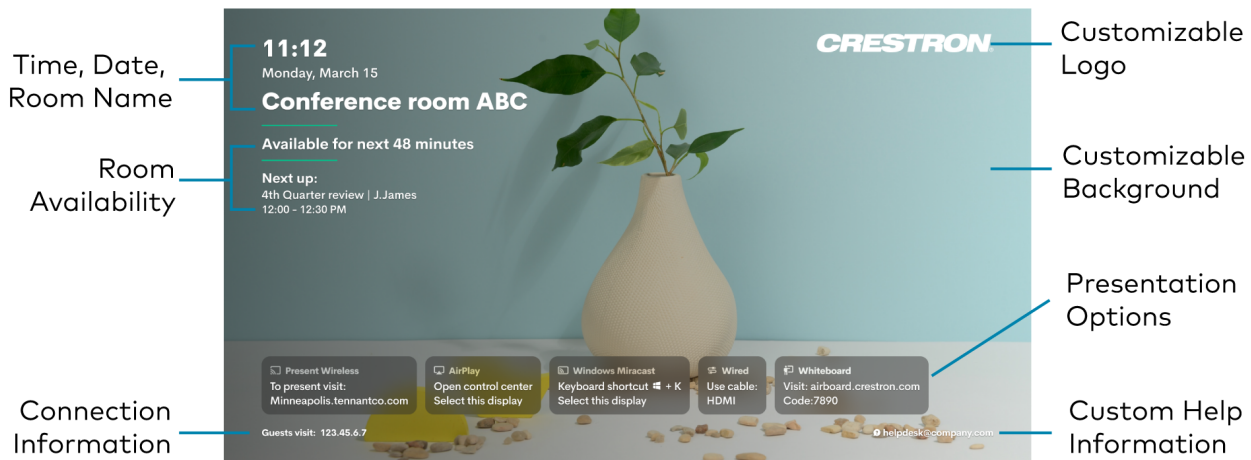


- **Customizable Logo:** Shows the Crestron logo by default. To upload a custom logo, refer to [Connected Devices on page 147](#).
- **Time, Date, Room Name:** Shows the time, date, and conference room name.
 - **Time/Date:** To configure time and date information, refer to [Date/Time on page 135](#).
 - **Room Name:** To show, hide, or customize the room name, refer to [General Settings on page 121](#).
- **Room Availability:** Shows room availability based on the connected calendar. To configure calendar settings, refer to [Services on page 138](#).
- **Customizable Background:** Shows a slideshow of backgrounds by default. To upload a custom background and/or modify the slideshow settings, refer to [Connected Devices on page 147](#).
- **Presentation Options:** Shows all of the available ways of sharing content. When a presentation mode is enabled, the presentation option tile will appear on the front of room display. When a presentation mode is disabled, the presentation option tile will not appear. To modify the font size of the text in each tile, refer to [Connected Devices on page 147](#).
- **Connection Information:** Shows additional connection information. To modify what information appears, refer to [Connection Display on page 159](#).

- **Custom Help Information:** Shows custom help information when configured. To set custom help information, refer to [Connected Devices on page 147](#).

User Presentation

When a user is presenting, the user's presentation and additional connection information is shown on the display device.

Front of Room Experience Screen - User Presenting

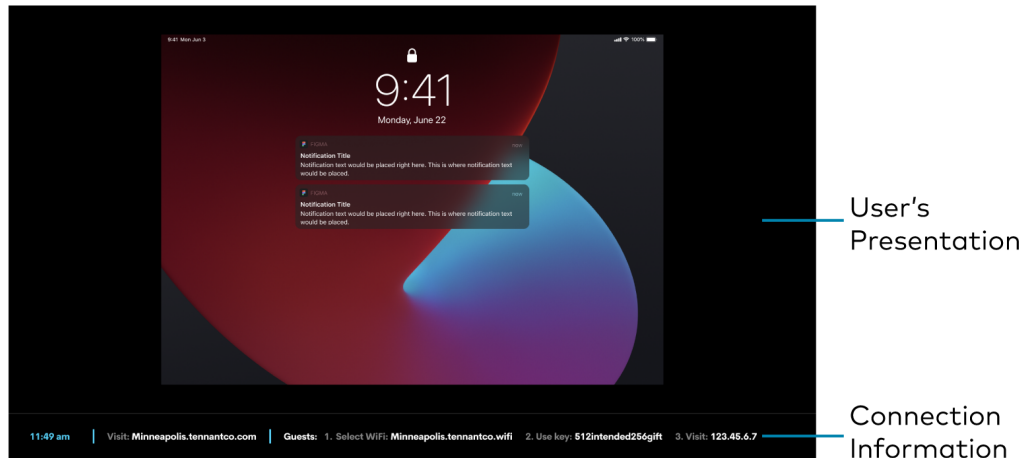

- **User's Presentation:** Shows up to four presentations when AirMedia Canvas is enabled. For more information on AirMedia Canvas, refer to [AirMedia Canvas on page 217](#). For more information on user presentation, refer to [Operation on page 191](#).
- **Connection Information:** Shows the time, receiver connection information, and additional connection information. To configure time and date information, refer to [Date/Time on page 135](#). To modify the connection information shown, refer to [Connection Display on page 159](#).

Present with AirMedia

The receiver uses a client application to share a Windows or Mac desktop. The computer must be able to access the system over the network.

Crestron offers a standalone application for enterprise deployments. This application features additional connection methods and device management. For details, visit present.crestron.com.

Mobile devices can share their content using the Crestron AirMedia app which is available for iOS and Android™ devices. Both apps may be used for full screen sharing on devices running Android 5.0 Lollipop or iOS 8 and above. Download the latest version of these apps from the App Store® app or Google Play™ store.


NOTE: For additional details on using AirMedia, refer to the [AirMedia Presentation Gateway Security Reference Guide](#) (Doc 7693).

Establish a Computer Connection

To establish a connection from a computer to a receiver:


1. Open a web browser on the computer, and navigate to the web address or IP address shown on the display device. The welcome screen is displayed.

Welcome Screen

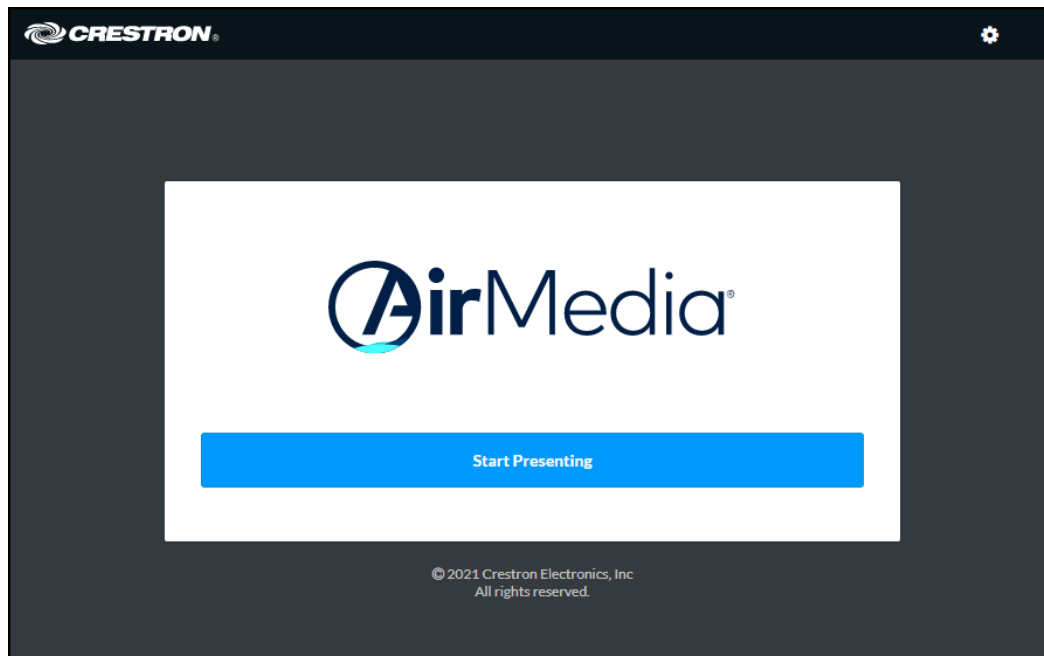

2. Select **Start Presenting**. The AirMedia screen will display.

AirMedia Screen

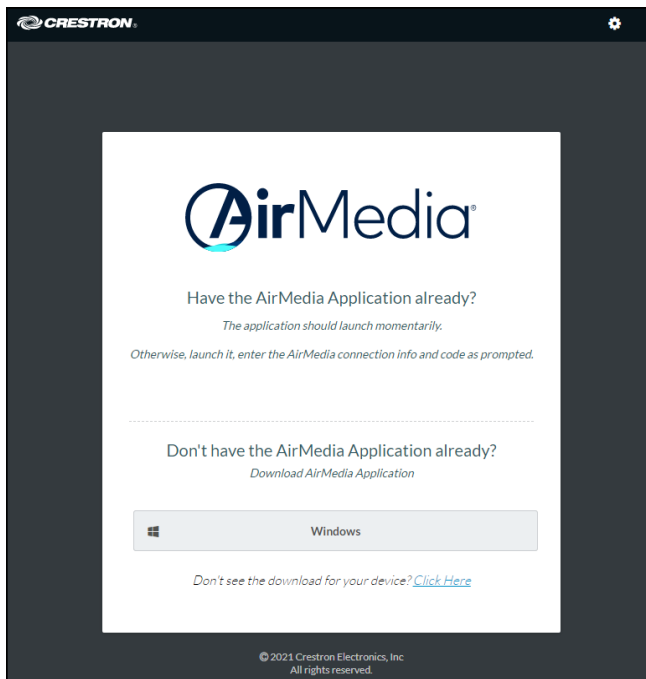

3. Select the button for your computer's operating system to download the client application. The client application requires no installation. The application will be downloaded and run locally.

NOTE: When used on a Mac, the AirMedia client application must be run from within the disk image file. Do not drag the application out of the disk image file.

Share Content


Share content via AirMedia wireless presentation from a Windows computer, a Mac, an iOS device, or an Android device.

From a Windows Computer



Once the client application is downloaded, content can be shared.

To share content from a Windows computer:

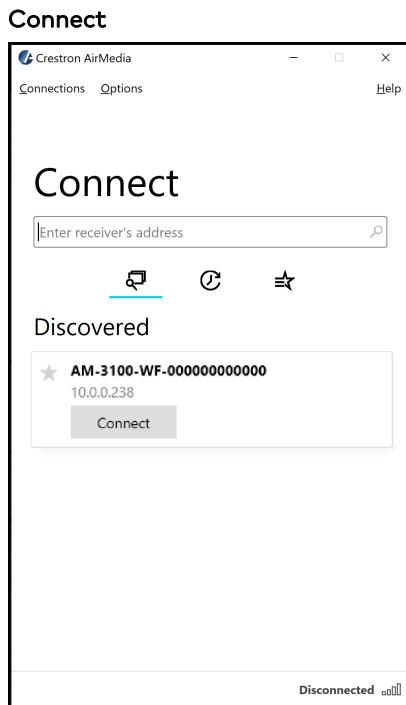1. Run the client application. The **Connect** screen appears and lists any discovered AirMedia devices.




2. Select **Connect** under the desired receiver or enter the device's IP address in the search bar and press enter.


NOTE: Select the star button  to the left of the desired receiver to add or remove the receiver from the favorite devices list. Select the favorite devices list button  to access the list.

3. If a code is required, enter the code shown on the display device. Otherwise, the contents of the computer screen will be presented on the display connected to the receiver. Once connected, the client application displays the presentation controls.



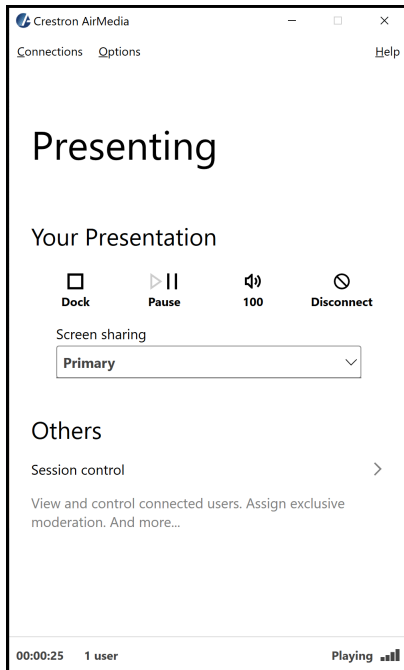


Presentation Controls

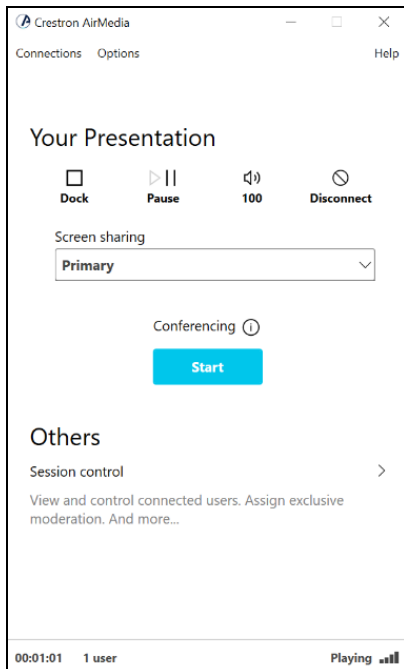

 Presentation Controls with Wireless Conferencing Enabled



4. Direct the presentation with the following controls:


- **Dock**  : Dock the presentation. When docked, the computer no longer shares its screen but remains connected to the receiver.
- **Pause**  : Start or freeze the computer's screen.
- **[Volume]**  : Control the output volume of the display.
- **Disconnect**  : End connection between the computer and the receiver.
- **Conferencing**  **Start**: Start a Wireless Conferencing session.
- Use the **Screen sharing** drop-down menu to select the connected screen to present.
- Select **Session control** to open the **Session** menu, which lists each presenter along with corresponding presentation controls. Up to 30 presenters can be connected at a time. Use the back arrow to return to the presentation controls for the computer.

NOTES:

- If the computer's presentation is paused and resumed by another presenter, the computer will then receive a permission request before the presentation resumes. To modify this setting, select **Options** > **Session Delegation**.
- To disable Session control, disable the **Canvas Session Control** setting in the device's web configuration interface. For more information on session control, refer to [AirMedia on page 155](#).

- Navigate to **Options > Settings** to customize AirMedia settings. Adjust the settings below and select **OK** to save the changes or select **Cancel** to cancel.

AirMedia Settings Dialog Box

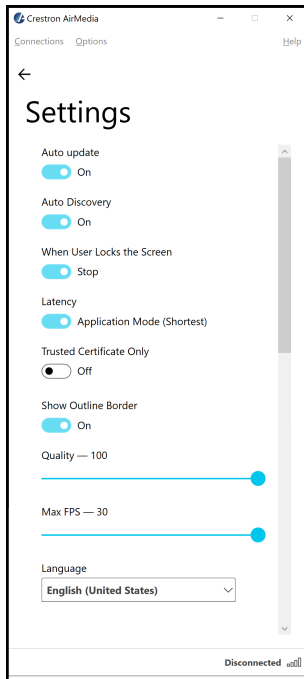

- Crestron recommends turning the **Auto Update** toggle to **On**.
- Crestron recommends turning the **Auto Discovery** toggle to **On**.
- **When User Locks the Screen** sets the operation of the client software when a connected computer is locked. Choose from **Stop** (the client stops sharing content), **Pause** (the client pauses sharing content), and **Nothing** (nothing happens).
- **Latency** selects the amount of latency in transmitting the signal from the computer to the receiver. Select **Application Mode (shortest)** for the least amount of latency (best for slides) or **Video Mode (Pre-Buffer)** for a longer amount of latency (best for buffering shared video).
- **Trusted Certificate Only** validates the server certificate before connection
- **Show Outline Border** selects whether or not an orange border appears on the computer's screen when presenting.
- Set the **Quality** of the projected signal (**0** to **100** percent).
- Set the **Max FPS** (frames per second) refresh rate (**1** to **30**).
- Select the **Language** displayed by the client application.

NOTE: The application must be restarted when switching languages.


From a Mac

Once the client application is downloaded, content can be shared.

To share content from a Mac:

1. Run the client application. The **Connect** screen appears and lists any discovered AirMedia devices.

Enter Code Dialog Box

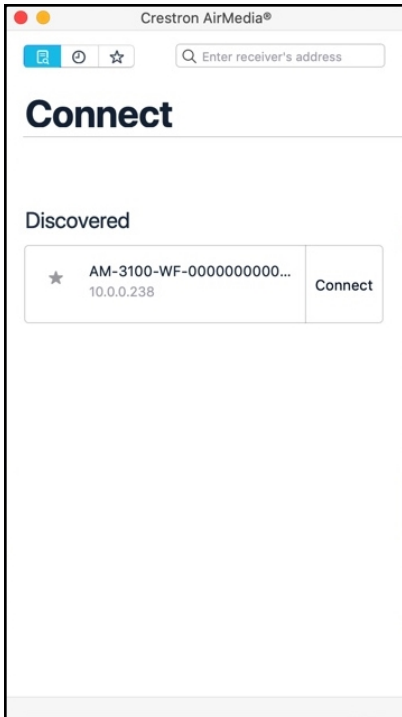





2. Select **Connect** to the right of the desired receiver or enter the device's IP address in the search bar and press enter. The **Enter Code** screen appears.

NOTE: Select the star button ★ to the left of the desired receiver to add or remove the receiver from the favorite devices list. Select the favorite devices list button ★ to access the list.

3. If a code is required, enter the code shown on the display device. Follow the onscreen instructions to present. Select **OK** to return to the presentation controls.

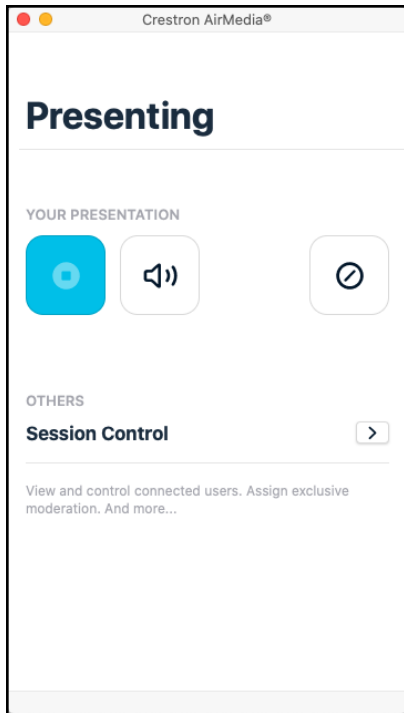Presentation Controls



4. Direct the presentation with the following controls:
 - : Dock functionality to be supported in a future release.
 - : Control the output volume of the display.
 - : End the connection between the computer and the receiver.
 - Select **Session control** for additional controls and information about all presenters. The **Session** menu opens and lists each presenter with corresponding presentation controls. Use the back arrow to return to the presentation controls for the computer.

NOTE: To disable Session control, disable the **Canvas Session Control** setting in the device's web configuration interface. For more information on Session control, refer to [AirMedia on page 155](#).


- Select **Options > Settings** in the menu bar to customize AirMedia settings.

From an iOS Device

Content can be shared from an iOS device using the built-in screen mirroring functionality.

To share content from an iOS device:

1. Open the AirMedia application. The **Connect** screen appears and lists any discovered AirMedia devices.

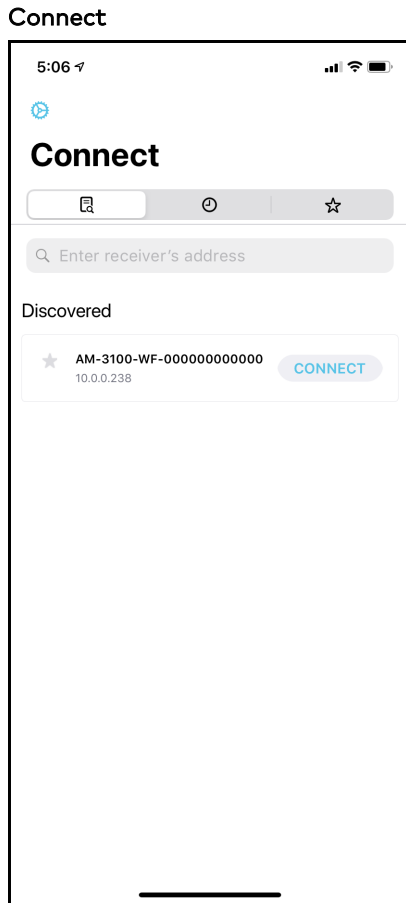


2. Select **Connect** next to the desired receiver or enter the receiver's IP address in the search bar and press **Enter** on the phone's onscreen keyboard.



NOTE: Select the star button ★ to the left of the desired receiver to add or remove the receiver from the favorite devices list. Select the favorite devices list button ★ to access the list.

3. If a code is required, enter the code shown on the display device and select **OK**. Screen mirroring instructions appear.

- Follow the onscreen instructions and select **OK**. Once connected, the application offers presentation controls.

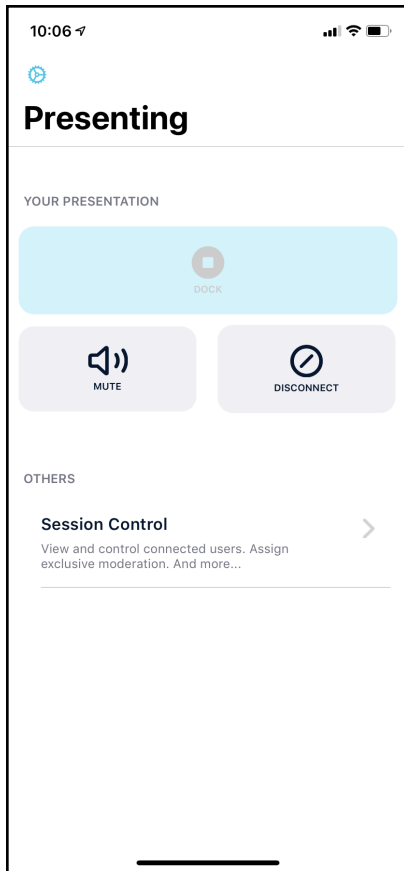Presentation Controls



- Direct the presentation with the following controls:
 - Dock** : Dock functionality to be supported in a future release.
 - Disconnect** : End the connection between the device and the receiver.
 - Select **Session control** to open the **Session** menu, which lists each presenter along with corresponding presentation controls. Up to 30 presenters can be connected at a time. Use the back arrow to return to the presentation controls for the device.

NOTE: To disable Session control, disable the **Canvas Session Control** setting in the device's web configuration interface. For more information on Session control, refer to [AirMedia on page 155](#).

- Tap the settings button in the top left corner to customize AirMedia settings.


NOTE: If another presenter enters fullscreen mode, presentation from the iOS device will end. The iOS device will remain connected to the receiver. If this occurs, resume the presentation by repeating the screen mirroring instructions described in step 3.

From an Android Device

Content can be shared from an Android device using the AirMedia application.

To share content from an Android device:

1. Open the AirMedia application. The **Connect** screen appears and lists any discovered AirMedia devices

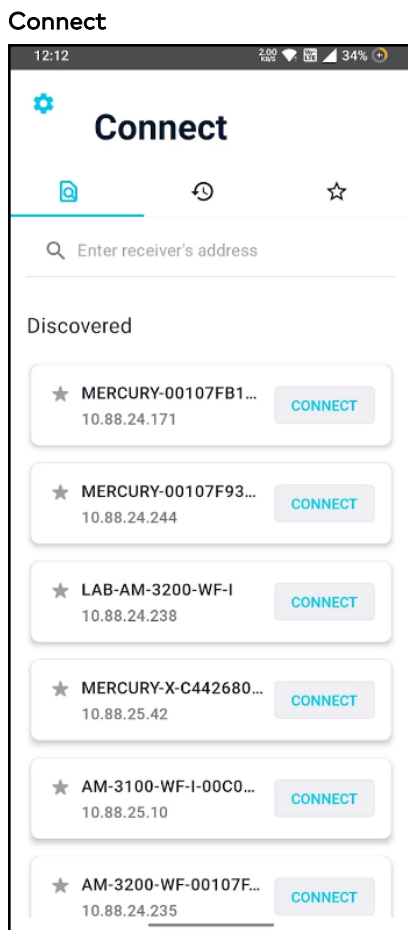

2. Select the desired receiver or enter the receiver's IP address in the search bar and press **Enter** on the phone's onscreen keyboard.


NOTE: Select the star button ★ to the left of the desired receiver to add or remove the receiver from the favorite devices list. Select **Favorites** to access the list.

3. If a code is required, enter the code shown on the display device and select **OK**. A presentation confirmation message appears.
4. Select **Start now** to begin presenting.

To end the presentation, make one of the following selections:

- **Dock:** Stop presenting from the Android device but remain connected to the receiver.
- **Disconnect:** Stop presenting from the Android device and disconnect from the receiver.

Presentation Screen

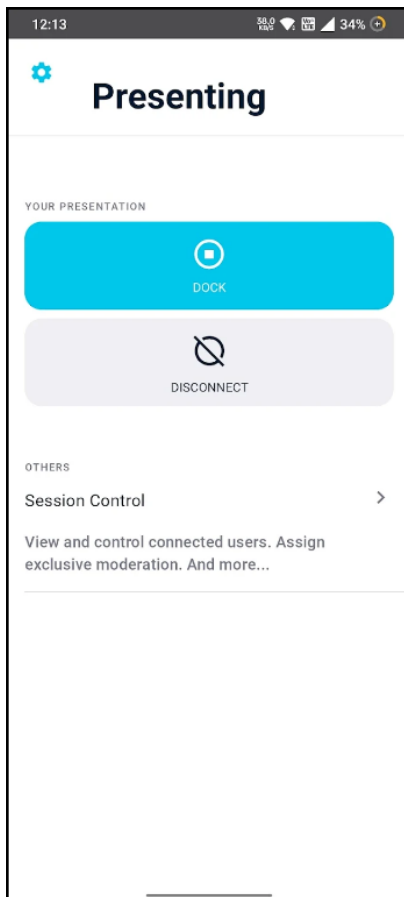

From a ChromeOS Device

Content can be shared from a ChromeOS device using the AirMedia Sender extension with the Google Chrome browser.

NOTE: The AirMedia Extension for Google Chrome browser relies on web technologies for screen sharing that are built into the web browser. There may be performance variations with motion video (quality and frame rate) based on the encoding capabilities of the Chrome OS device and the nature of the content being displayed (i.e., high motion video).

To share content from a ChromeOS device using the Google Chrome browser:


1. Install the AirMedia extension.
 - a. Visit the [AirMedia Sender page](#) on the chrome web store.

Chrome Web Store




- b. Select **Add to Chrome**.


Confirmation Message

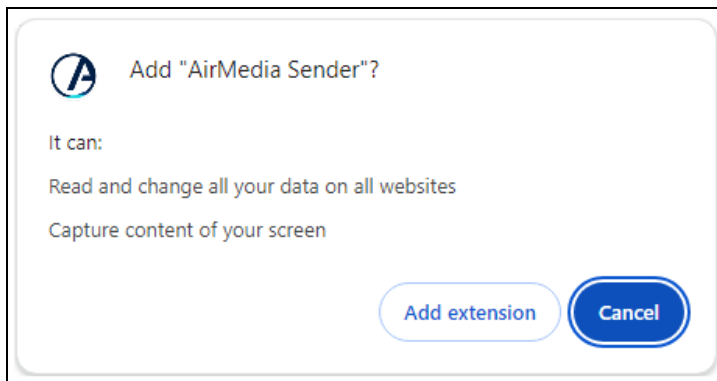

- c. Select **Add extension**.

2. Connect to the AirMedia receiver using the Chrome extension.
 - a. Select the AirMedia icon  in the top right corner of the Chrome browser.
 - b. Enter the IP Address or host name of the AirMedia receiver in the **Connect to AirMedia** field.

Connect to AirMedia

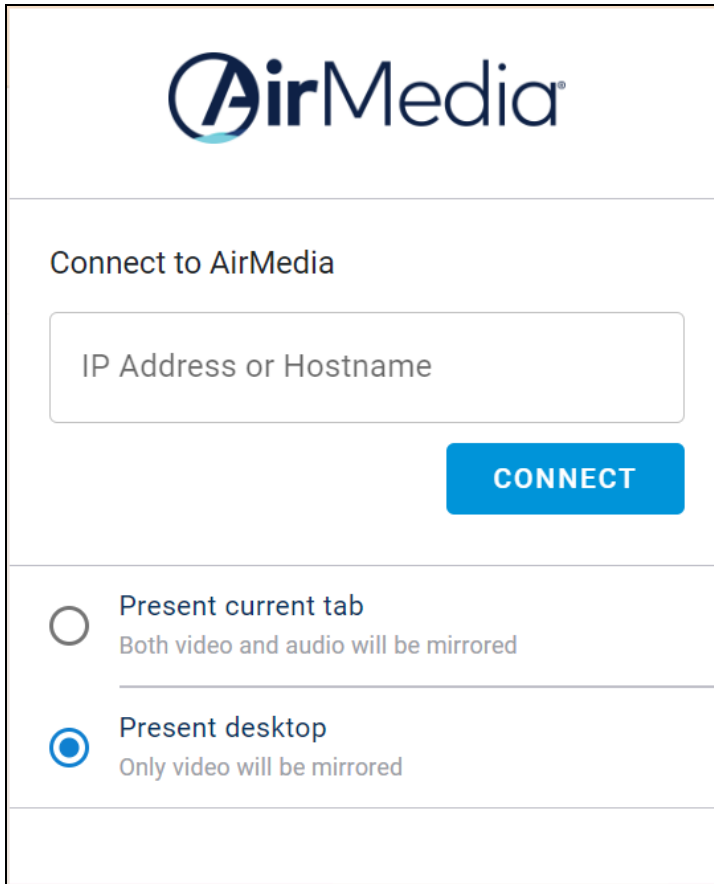

AirMedia

Connect to AirMedia

IP Address or Hostname

CONNECT


☐ **Present current tab**
Both video and audio will be mirrored

☒ **Present desktop**
Only video will be mirrored

- c. Select **Present current tab** to present only the current web browser tab (with audio), or select **Present desktop** to present the whole screen (without audio).
- d. Select **CONNECT**.

3. If a code is required, enter the code displayed on the screen and select **START SHARING** to begin screen mirroring.

Authentication Code

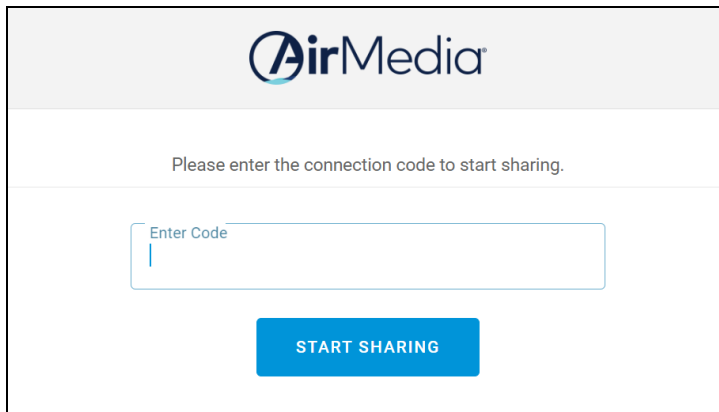


The screenshot shows the AirMedia web interface for authentication. At the top is the AirMedia logo. Below it, a message says "Please enter the connection code to start sharing." There is a text input field with the placeholder "Enter Code" and a blue button labeled "START SHARING" below the field.

NOTE: If more than one display is connected to the laptop, a pop-up message appears allowing you to select which display you want to share. Make a selection and then click **Share** to continue, or click **Cancel** to exit.

After a successful connection, the **AirMedia Sender** tab displays the status of the connection, including the AirMedia device name and an option to stop screen mirroring.


AirMedia Sender Tab

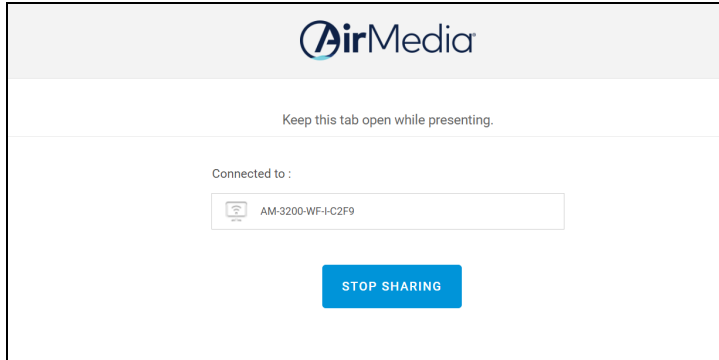

The screenshot shows the AirMedia Sender web interface. At the top is the AirMedia logo. Below it, a message says "Keep this tab open while presenting." There is a section labeled "Connected to:" with a box containing a device icon and the name "AM-3200-WF-I-C2F9". Below this is a blue button labeled "STOP SHARING".

Additionally, a pop-up notification with the option to stop sharing appears at the bottom of the Chrome window. To hide the notification, select **Hide**.

 Pop-up Notification




The screenshot shows a Chrome notification bar. It contains the text "AirMedia Sender is sharing your screen." followed by a blue button labeled "Stop sharing" and a link labeled "Hide".

Select **STOP SHARING** on the **AirMedia Sender** tab or the pop-up notification to end the session.

Using Miracast

Miracast is a mirroring protocol and wireless technology used to project your screen to the receiver without the need to install an application on your Windows computer.

To present using Miracast with an AirMedia receiver:

1. Open the Windows connect menu via the Windows notification center or via the shortcut  (Windows) + **K**. On touch-capable Windows 10 devices, swipe in from the right edge of the screen.
2. Select the desired receiver from the list.
3. If a code is required, enter the code shown on the display device.

For more details on using Miracast with the AirMedia receiver, refer to the [AirMedia Presentation Gateway Security Reference guide](#) (Doc 7693).

Touch Screen Operation

A connected touch screen running .AV Framework software can be used to control presentations. Use the touch screen to control volume, switch between sources, and start and stop presentations. The home screen is displayed when the system starts.

Add a Touch Screen

The receivers support the use of a TS- or TSW- 70 series 7 in. or 10 in. touch screen for system control. Adding a touch screen to the system requires an entry in the touch screen's IP table and loading a touch screen project file to the touch screen.

NOTE: The touch screen must be accessible to the receiver over the network.

IP Table Entry

An IP table entry must be created to direct the touch screen to the IP address or host name of the receiver. For instructions on creating an IP table entry, refer to the touch screen's product manual:

- [TSW-570, TSW-770, and TSW-1070 Product Manual](#) (Doc. 8550)
- [TS-770 and TS-1070 Product Manual](#) (Doc. 8555)

Load a Touch Screen Project File

If internet connectivity is available on the receiver, the system automatically loads the touch screen project file once the IP table entry is complete. To automatically load the touch screen project file, touch screen auto update must be enabled as described in [Connected Devices on page 147](#).

To download the touch screen project file, refer to the receiver's product page:

- [AM-3100-WF](#)
- [AM-3100-WF-I](#)
- [AM-3200](#)

- [AM-3200-WF](#)
- [AM-3200-WF-I](#)


For details on manually loading a touch screen project file, refer to the touch screen's product manual:

- [TSW-570, TSW-770, and TSW-1070 Product Manual](#) (Doc. 8550)
- [TS-770 and TS-1070 Product Manual](#) (Doc. 8555)

Screen Controls



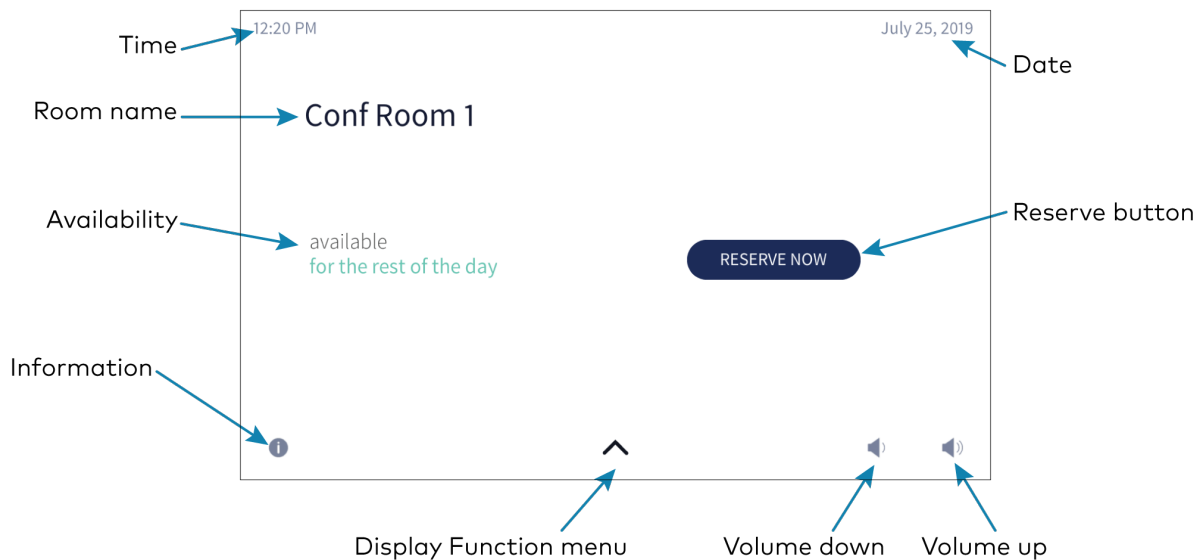

When connected, the touch screen will display the home screen.

Home Screen




The footer bar provides the same buttons regardless of which screen is selected. Refer to the following tables for more information on footer button functionality.

Footer Buttons

-  The more button navigates to the selection screen.
-  The info button navigates to the information screen.
-  The volume lower button lowers the device volume incrementally.
-  The volume raise button raises the device volume incrementally.


NOTE: Volume controls are only present when the system is connected to a display device that supports volume control.

Access the System Info Screen


To access the **System Info** screen, tap and hold the information button  on the home screen for 20 seconds.

The **System Info** screen provides the device IP address, the device hostname, the Crestron Fusion server connection status, the Crestron Fusion room name, the device MAC address, the device serial number, and the .AV Framework version number.


System Info screen

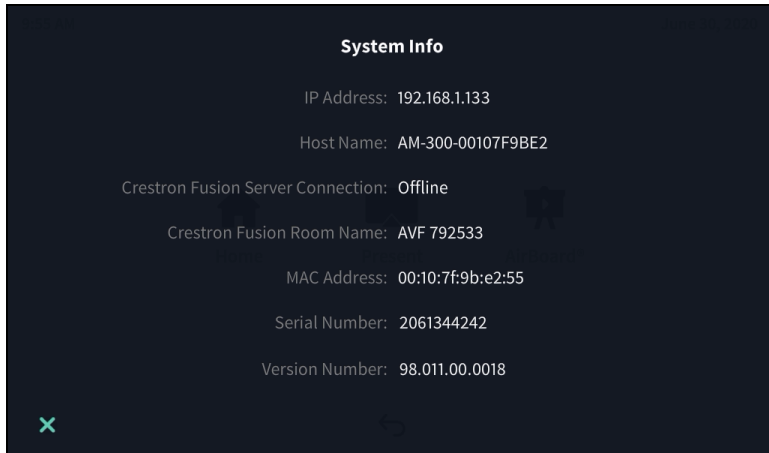




The Function Menu

Tap the more button  on the home screen to display the function menu.

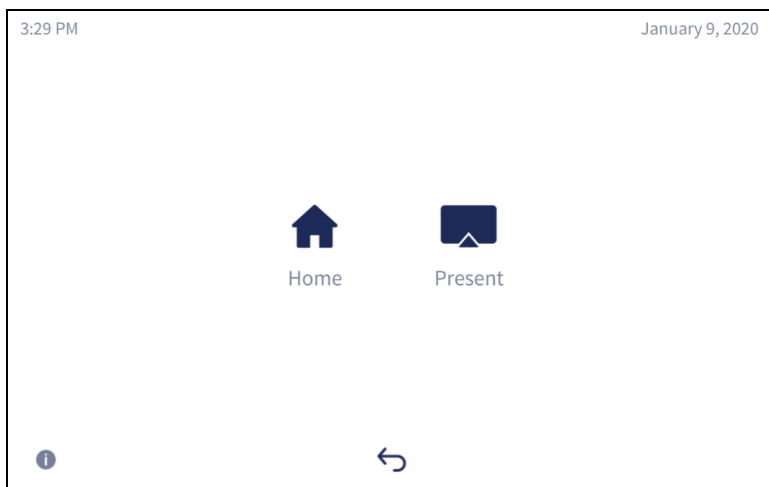Function Menu



- Tap **Home**  to display the Home screen.
- Tap **Present**  to view presentation options. For details, refer to [Present a Source on page 215](#).
- Tap the back button  to return to the previous screen

Room Scheduling

The Home screen is used to reserve the conference room.


Tap **Home**  to display the home screen. The home screen displays the current status of the room.

Room Available

If the room is available for use, the touch screen provides the following information:

- The time remaining (in minutes) until the next scheduled meeting occurs
- A **RESERVE NOW** button that allows an ad hoc meeting to be scheduled through the touch screen

Home Screen – Available Room

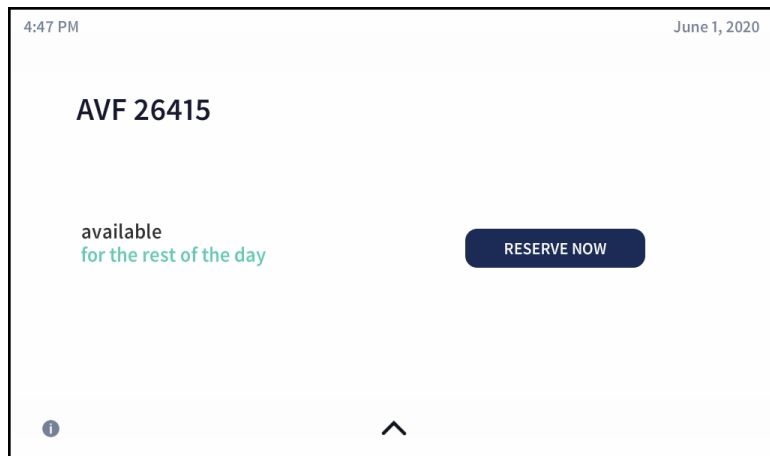


Room Reserved

If the room is not available, the home screen provides the following information:

- The time remaining (in minutes) until the current meeting ends
- The duration, name, and organizer of the scheduled meeting

You can use the room for the remaining time available or reserve the room for another time.

Home Screen – Reserved Room

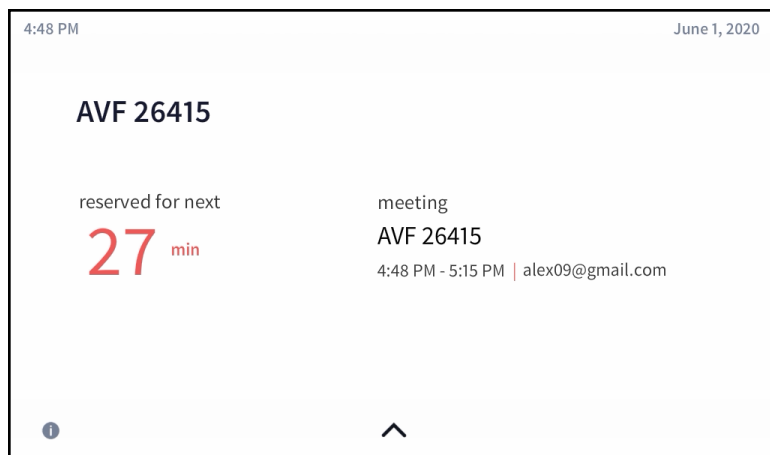


Reserve the Room

To reserve an ad hoc meeting from the home screen when the room is available:

1. Tap **RESERVE NOW** on the home screen. The **New Meeting** screen is displayed.

NOTE: RESERVE NOW meetings may only be scheduled for the current day.

New Meeting Screen

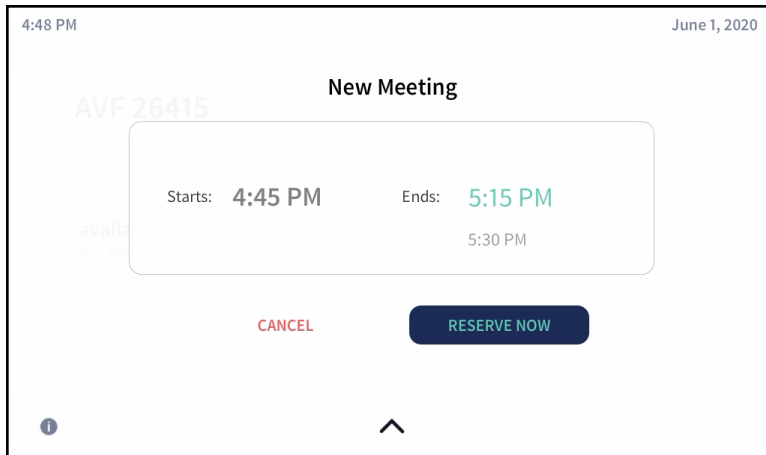A screenshot of a mobile application's 'New Meeting' screen. The screen has a white background with a thin black border. At the top left, it says '4:48 PM' and at the top right, 'June 1, 2020'. In the center, the title 'New Meeting' is displayed. Below the title is a white rounded rectangle containing the text 'Starts: 4:45 PM' and 'Ends: 5:15 PM'. Below the 'Ends' text, there is a smaller, fainter text '5:30 PM'. At the bottom of the screen, there are two buttons: a red 'CANCEL' button on the left and a dark blue 'RESERVE NOW' button on the right. At the very bottom, there is a small blue information icon on the left and a black upward-pointing arrow in the center.


2. Tap one of the available meeting end times to set the duration of the meeting. The room can be reserved for up to three lengths:
 - Until the current half hour interval ends (If the current time is 4:44 pm, the end time for this option is 5:00 pm.) This is the default setting.
 - Until the current half hour interval ends plus 30 minutes (If the current time is 4:44 pm, the end time for this option is 5:30 pm.)
 - Until the current half hour interval ends plus 60 minutes (If the current time is 4:44 pm, the end time for this option is 6:00 pm.)

NOTE: These options are available only if a meeting is not already scheduled during these times.


3. Tap **RESERVE NOW** to reserve the meeting.

To discard the reservation, tap **CANCEL**.



Present a Source

To present a connected source, tap **Present**  from the function menu. The **Present a Source** screen appears. The **Present a Source** screen allows content to be routed from a connected device to the main display in the room.

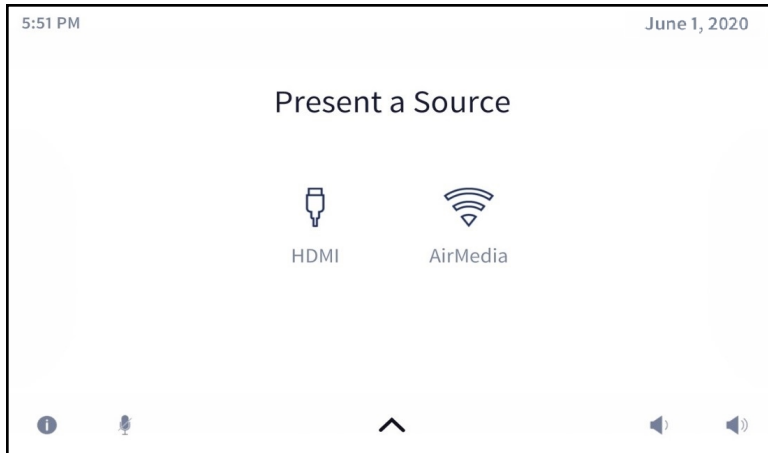Present a Source Screen




To present content from a source device, select one of the available presentation options. The source is controlled directly through the touch screen.

If a source is active, a **Stop**  button is shown. Tap the **Stop**  button to stop routing the source to the display.


Present via HDMI

To display content from a source connected via HDMI, tap **HDMI** . The following screen will appear.

Present Screen - HDMI Source

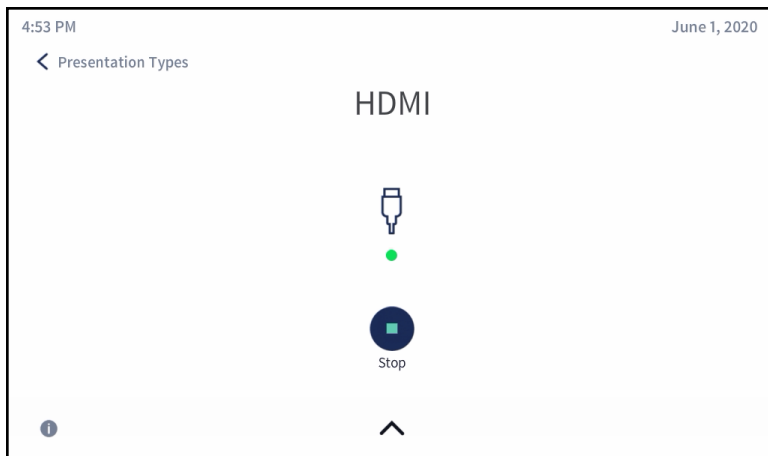

The dot in the center of the screen turns green if the source is connected and turns red if the source is disconnected.


When done presenting, tap **Stop** .

To return to the previous screen, tap **< Presentation Types**. Tapping **< Presentation Types** does not disconnect the source.

Present via AirMedia

Tap **Wireless** to display content from a device connected through AirMedia. The **AirMedia®** screen is displayed with instructions to present with AirMedia.

AirMedia® Screen

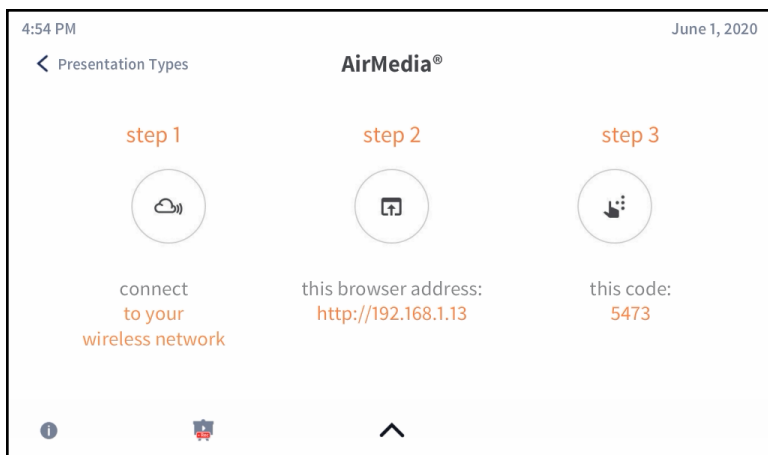

Refer to [Control Multiple Sources on page 217](#) for instructions on controlling an AirMedia presentation from the touch screen.

Refer to [Present with AirMedia on page 194](#) for instructions on connecting to AirMedia and sharing content.


AirMedia Canvas

When configured, the receiver can show multiple sources on the display device simultaneously. The touch screen is used to manage the sources shown on the display device.

NOTE: For details on configuring the receiver to use the AirMedia Canvas feature, refer to [AirMedia on page 155](#).



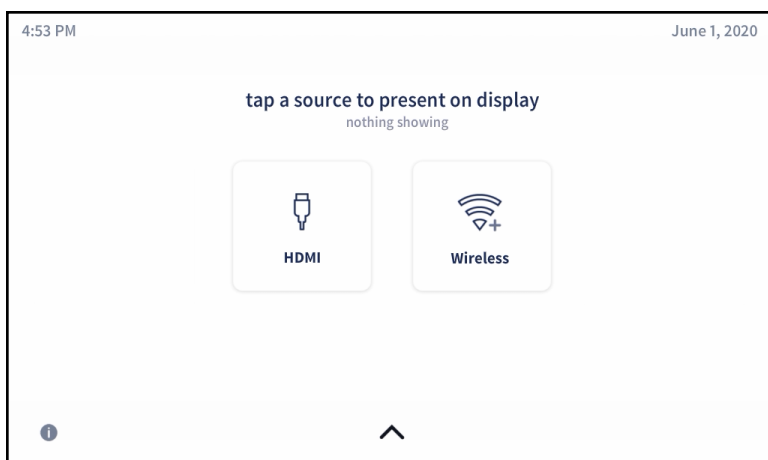

When AirMedia Canvas and Canvas Session Controls are enabled, the Present a Source screen appears as shown below.


Present a Source Screen




Control Multiple Sources

To control multiple sources using Canvas Session Controls:


1. Connect all sources to the receiver.
2. Tap the first source for presentation. The content will appear on the display device with presentation controls.
 - Select the volume button  to mute or unmute the source's volume.
 - Select **Stop**  to dock the presentation. When docked, the source stops presenting but remains connected to the display. Select the play button  to resume presenting. When resuming a presentation, a permission request is sent to the source device. The request must be accepted before the presentation resumes.
 - Select the disconnect button  to disconnect the source from the receiver.

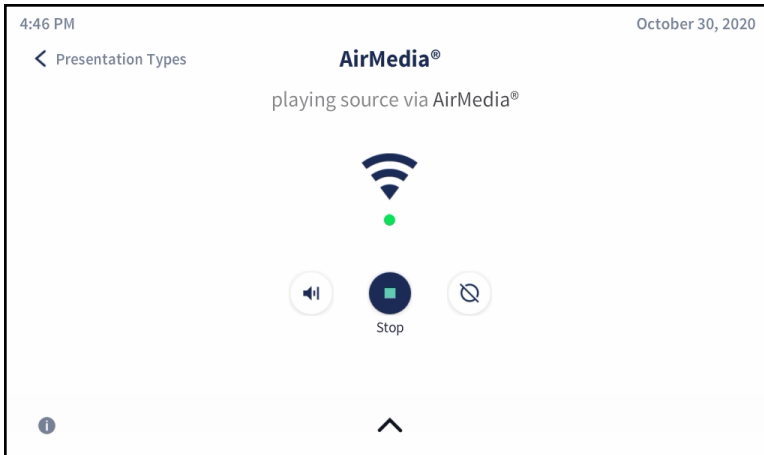


3. Tap **< Presentation Types**. The touch screen will show the connected source with the presentation controls detailed in the previous step.

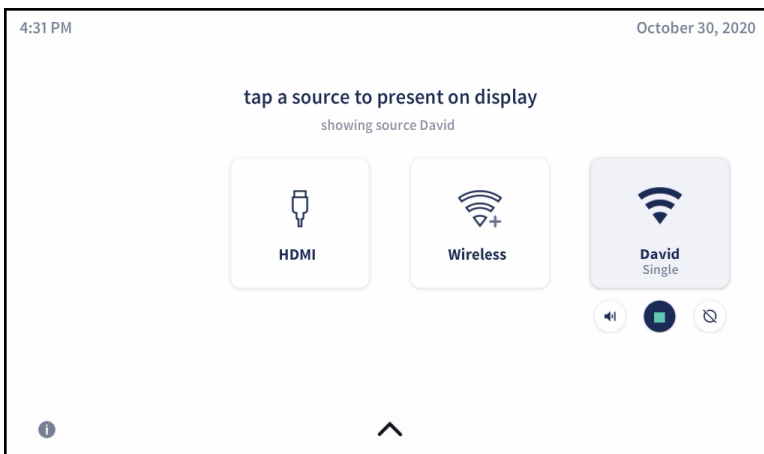


4. Tap the second source for presentation. The display device will show the two sources side by side.

NOTE: The dock control feature will be implemented for Apple® devices in a future release. Select the disconnect button  to end the presentation and disconnect the source device.

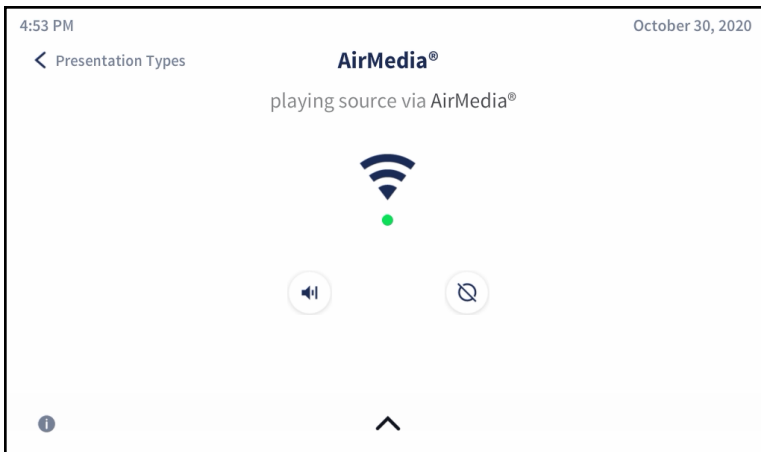


5. Tap < **Presentation Types**. The touch screen will show the two connected sources side by side.

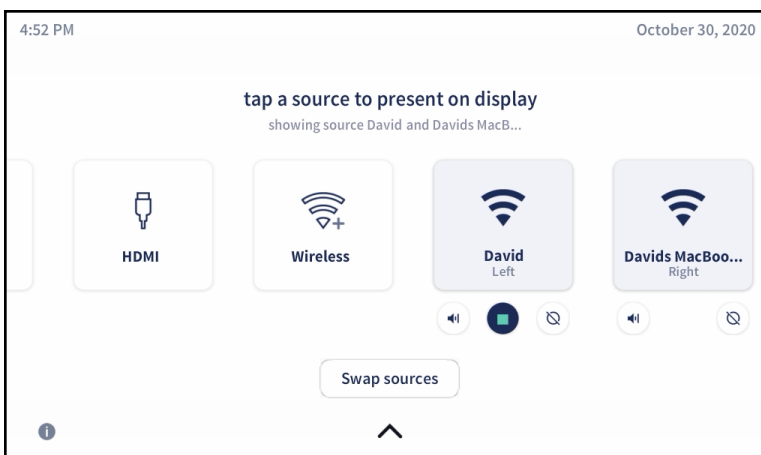

6. (Optional) Tap more sources to present as needed. The touch screen will show all connected sources side by side, and the presentations will be arranged on the display device.

NOTE: If the maximum amount of presenters is reached and another source is selected, then the first source will be docked (AirMedia user) or disconnected (hard wired inputs, AirPlay connection, or Miracast connection) and the latest source will take its place on the display. When docked, the source stops presenting but remains connected to the display. To adjust the maximum amount of sources that can present simultaneously, refer to [General Settings on page 155](#)

Switch to Single Source

When two sources are shown on the display device, tap **Stop**  to remove the source's presentation from the display device. The remaining source will be presented in full screen.

Swap Sources

When two sources are shown on the display device, tap **Swap Sources** to switch the positions of two sources.

When more than two sources are shown on the display device, the **Swap Sources** button is unavailable.

AirMedia Connect Devices

AirMedia Connect devices can be connected to personal devices to instantly share content with a paired Wi-Fi network capable AirMedia receiver. Up to eight Connect devices can be paired to a single receiver.

For information about pairing and configuring Connect devices, refer to [Connect Devices on page 164](#).

This section contains the following information:

- [Wireless Best Practices on page 222](#)
- [AM-TX3-100 Operational Instructions on page 223](#)
- [AM-TX3-200 Operational Instructions on page 224](#)

Wireless Best Practices

AirMedia Connect devices communicate with compatible AirMedia Series 3 Receivers using a Wi-Fi Direct connection. Wireless performance depends upon a variety of conditions in the environment.

Consider the following guidelines and best practices to ensure a consistent and reliable experience.

Physical Factors

- **Maximum Distance:** The maximum range from the Connect device to the receiver varies based on environmental conditions, but Crestron recommends that the Connect device operate within 70 ft (23 m) of the receiver.
- **Wireless Interference:** Ensure that there are no obstructions between the Connect device and receiver that could create wireless interference. Line of sight visibility from Connect device to receiver is ideal.
- **External Antennas (AM-3200-WF(-I) only):** With the receiver powered off, connect the included external antennas. If the receiver is mounted behind a display, position the antennas near the bottom or sides of the display.

NOTE: For more information, refer to [OLH Answer ID 3076](#).

Network Settings

The following settings can be adjusted in the AirMedia receiver web configuration. For details, refer to [Network on page 123](#).

- **Wi-Fi Frequency:** AirMedia receivers can be set to **2.4GHz Only** or **5GHz Only** (default). The 5GHz generally enables higher throughput, but 2.4GHz enables wider distance.
- **Wi-Fi Channel:** By default, the AirMedia receiver automatically selects a Wi-Fi channel. To improve reliability, use a Wi-Fi analyzer to determine the least crowded channel. Select the channel with the least traffic.
- **Wi-Fi Access Point Signal Strength:** Set the signal strength to 100% for best results. In building layouts with multiple AirMedia systems and other Wi-Fi devices in close proximity, balance the signal strength as needed.

AM-TX3-100 Operational Instructions

Before content can be shared with the AM-TX3-100, it must be paired with a Wi-Fi network capable AirMedia receiver via the Wi-Fi Direct method as described in the [Connect Devices on page 164](#) section of this product manual.

Share Content


To share content through the AM-TX3-100, plug the AM-TX3-100 into the USB-C port of a compatible personal device.

NOTE: The personal device's USB-C port must be DisplayPort Alt mode compatible.

To pause or resume sharing content, quickly press the **Screenshare** button twice.

To stop sharing content, press the **Screenshare** button.

Screenshare Button

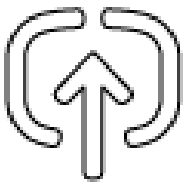

Conferencing the AM-TX3-100

If the **Peripherals** button is green, conferencing will automatically begin.

If the **Peripherals** button is white, tap the button to begin conferencing.

To stop conferencing, tap the **Peripherals** button (will turn white).

Peripherals Button



Restoring the Device

To restore the AM-TX3-100 to factory default, perform the following procedure:

1. Press and hold the **Screenshare** button.
2. After two seconds, simultaneously press and hold the **Peripherals** button.
3. Continue to hold both buttons until the ring LED turns amber. This takes approximately eight seconds.

The AM-TX3-100 will reboot. All configuration, included pairing, will be reset to default.

AM-TX3-200 Operational Instructions

Before content can be shared with the AM-TX3-200, it must be paired with a Wi-Fi network capable AirMedia receiver via the Wi-Fi Direct method as described in [Connect Devices on page 164](#).

Share Content

To share content through the AM-TX3-200, plug a user device (laptop, tablet, phone) into a USB-C or HDMI cable connected to the AM-TX3-200.

NOTE: The personal device's USB-C port must be DisplayPort Alt mode compatible. For more information, refer to [OLH Answer ID 1001831](#).

Conferencing the AM-TX3-200

If the AM-TX3-200 is available for conferencing before being connected to a user device, then conferencing begins automatically when the USB is connected. If the AM-TX3-200 becomes available for conferencing after it is connected to a user device, remove and reconnect the USB cable.

Peripheral Access

To use peripherals connected to the AirMedia receiver for conferencing, connect the AM-TX3-200 to a compatible user device using USB-A or USB-C:

- **USB-A:** Using the included USB-A to USB-C cable, connect to the **USB2** port of the AM-TX3-200.
- **USB-C:** Connect to the **USB2/DP-S** port of the AM-TX3-200.

Conferencing peripherals connected to the receiver will be ready for use on the connected user device, if available. The user device must be presenting in order to use the conferencing peripherals.

Restoring the AM-TX3-200

To restore the AM-TX3-200 to factory default, perform the following procedure:

1. Press and hold a paperclip into the Reset button for 10 seconds.
2. Continue to hold until the Setup LED blinks fast.

The AM-TX3-200 will reboot. All configuration, included pairing, will be reset to default.

Resources

The following resources are provided for AirMedia® Series 3 devices.

NOTE: You may need to provide your Crestron.com web account credentials when prompted to access some of the following resources.

Crestron Support and Training

- [Crestron True Blue Support](#)
- [Crestron Resource Library](#)
- [Crestron Online Help \(OLH\)](#)
 - [Answer ID 1001764](#)
 - [Answer ID 1001831](#)
 - [Answer ID 3076](#)
- [Crestron Training Institute \(CTI\) Portal](#)

Programmer and Developer Resources

- help.crestron.com: Provides help files for Crestron programming tools such as SIMPL, SIMPL#, and Crestron Toolbox™ software
- developer.crestron.com: Provides developer documentation for Crestron APIs, SDKs, and other development tools

Product Certificates

To search for product certificates, refer to support.crestron.com/app/certificates.

